



Dell XPS 13 Fan Replacement

This guide will explain how to replace the fan in the Dell XPS 13.

Written By: Ella Herrmann



INTRODUCTION

Use this guide to replace the fan in the Dell XPS 13.

TOOLS:

- Spudger (1)
- iFixit Opening Tools (1)
- iFixit Opening Picks set of 6 (1)
- T5 Torx Screwdriver (1)
- Tweezers (1)
- Phillips #0 Screwdriver (1)

Step 1 — Back Cover



- Remove the eight 4 mm T5 Torx screws from the bottom cover.

Step 2



- Use a plastic opening tool to pry open the 'XPS' flap in the middle.

Step 3



- Remove the single Phillips screw hidden beneath the flap.

Step 4



- Use opening picks or a plastic pry tool to pry open the case clips, beginning from the back edge.

Step 5




- Remove the bottom cover.

Step 6 — Battery Disconnection




- Pull the battery cable connector towards the battery to disconnect it from its socket.
 - If the connector is stubborn, push a little at one side, then the other, to "walk" it out of its socket.
- **⚠ Do not pull up.**
- Open the display and press the power button for five seconds to drain any remaining charge from the system.

Step 7 — Fan

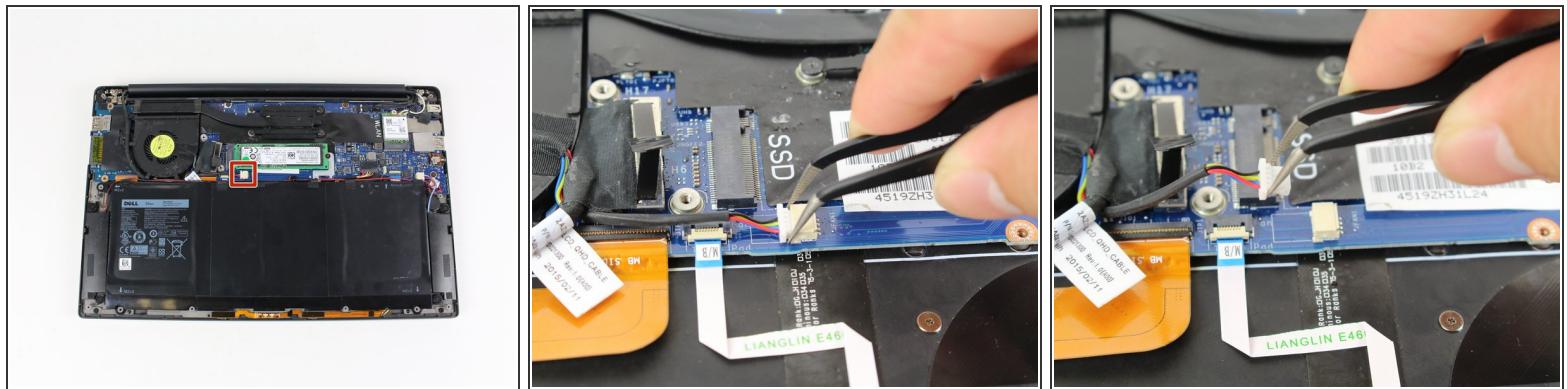


- Use tweezers to remove the little white connector by pulling it out and away from its socket.

Step 8

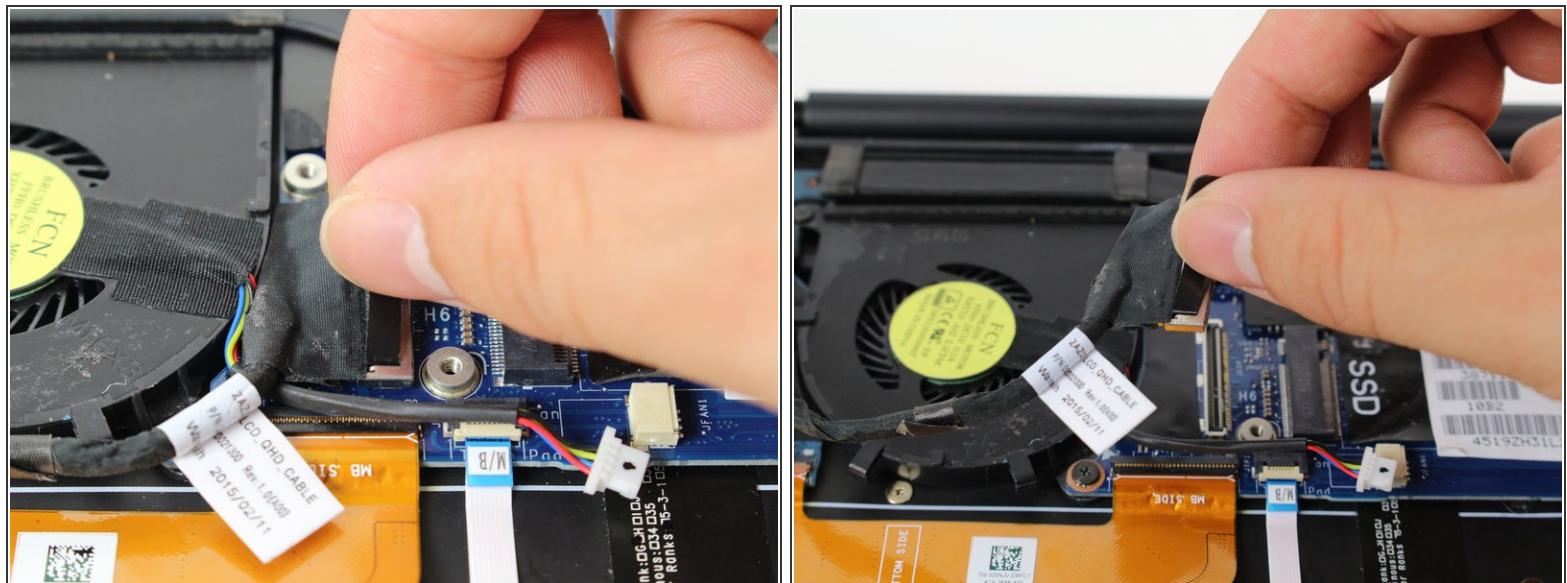

- Remove the black standard flat connector by lifting the tab up with your hand.

Step 9

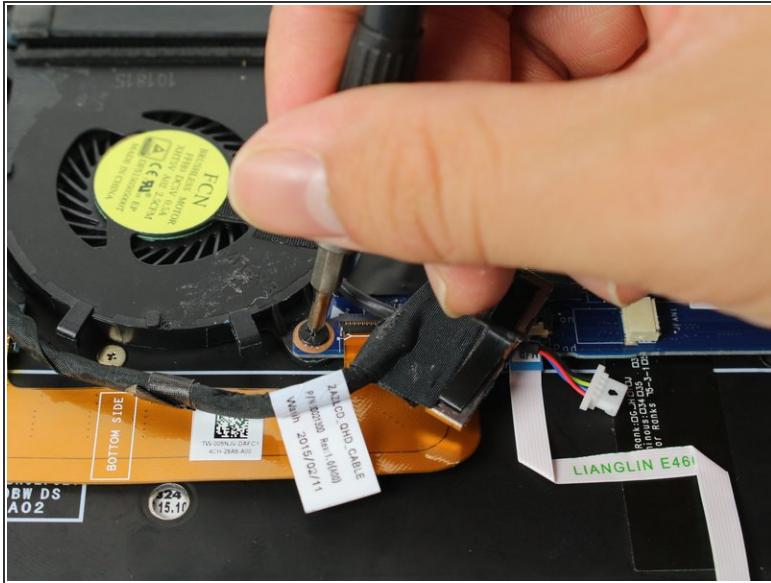

- Remove the 4 mm Phillips #0 screw that connects the fan to the motherboard.
- Remove the 4 mm Phillips #0 screw that connects the fan to the base of the computer.

Step 10



- Use your right hand to lift up the larger section of the motherboard, closest to the fan.
- Use your left hand to pull the fan at a 30-degree angle out from underneath the motherboard.

To reassemble your device, follow these instructions in reverse order.