



Dell XPS 13 L321X Screen Replacement

Written By: Molly Skinner




INTRODUCTION

if the screen broken/scratched and needs to be replaced here is the guide. (only screwdrivers required).

TOOLS:


- [T4 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Screen

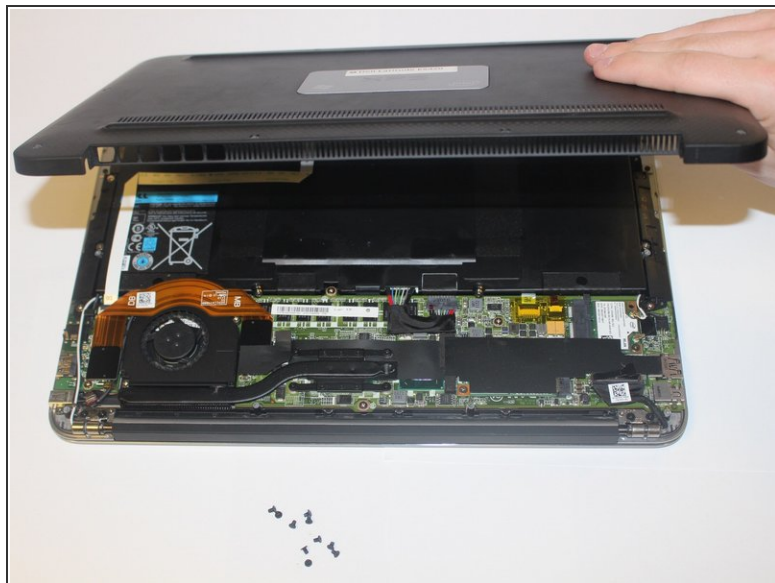


- Remove ten 3mm screws from the back cover with a T4 screwdriver.

Step 2

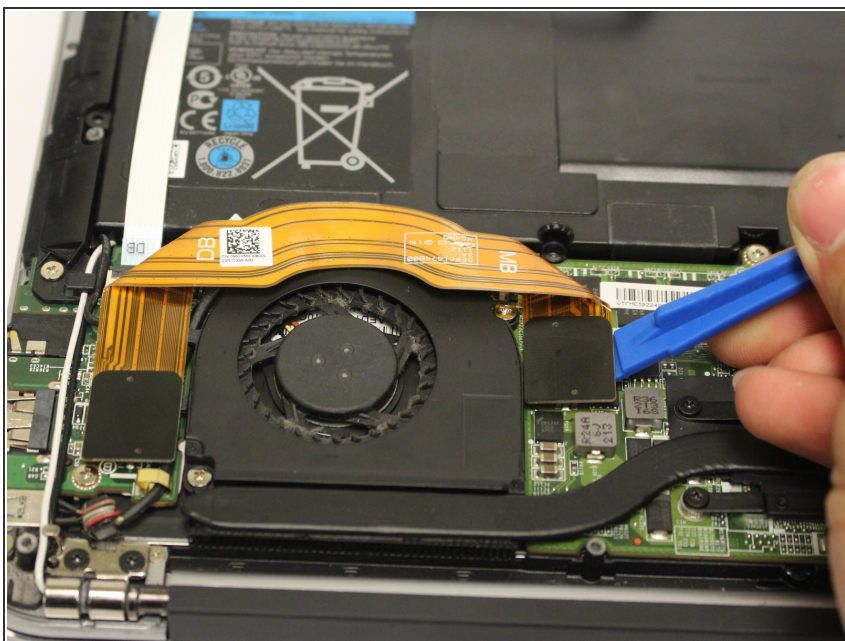



- Remove the ribbons from both sides with a plastic iFixit opening tool.

Step 3

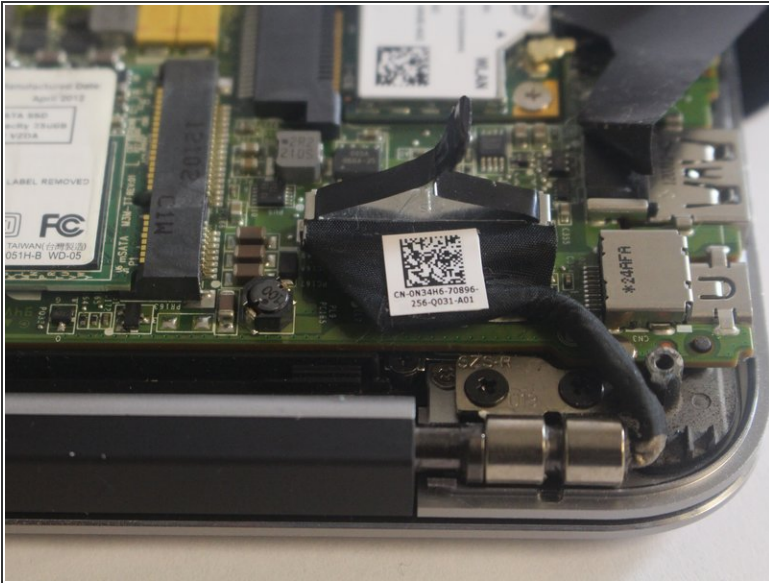


- Remove the black wire that connects the screen to the motherboard by pulling up with a plastic iFixit opening tool.

Step 4

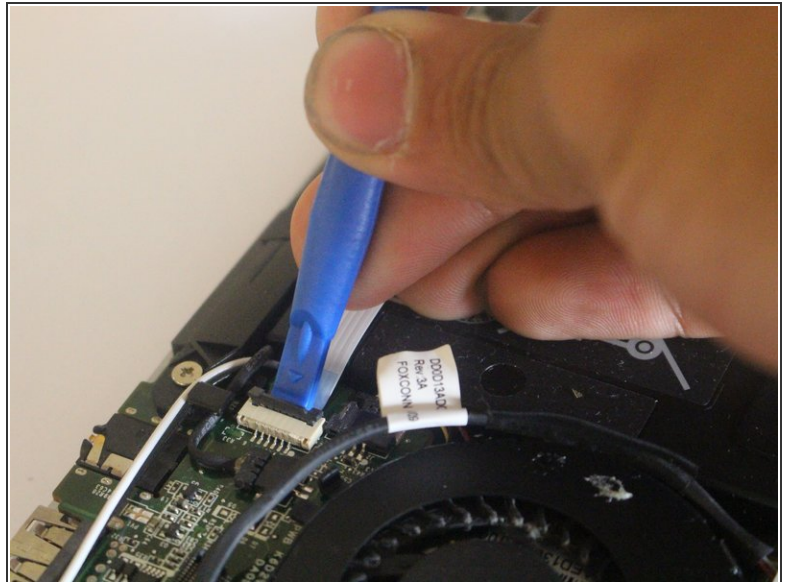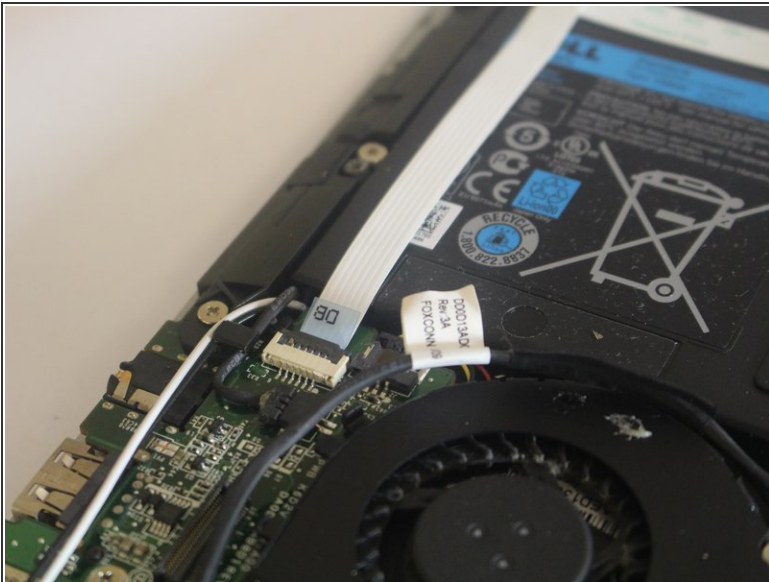


- Disconnect the ribbon cable with a plastic iFixit opening tool by lifting up the black clip and pulling the white ribbon off.
- Pull aside the ribbon cable.

Step 5

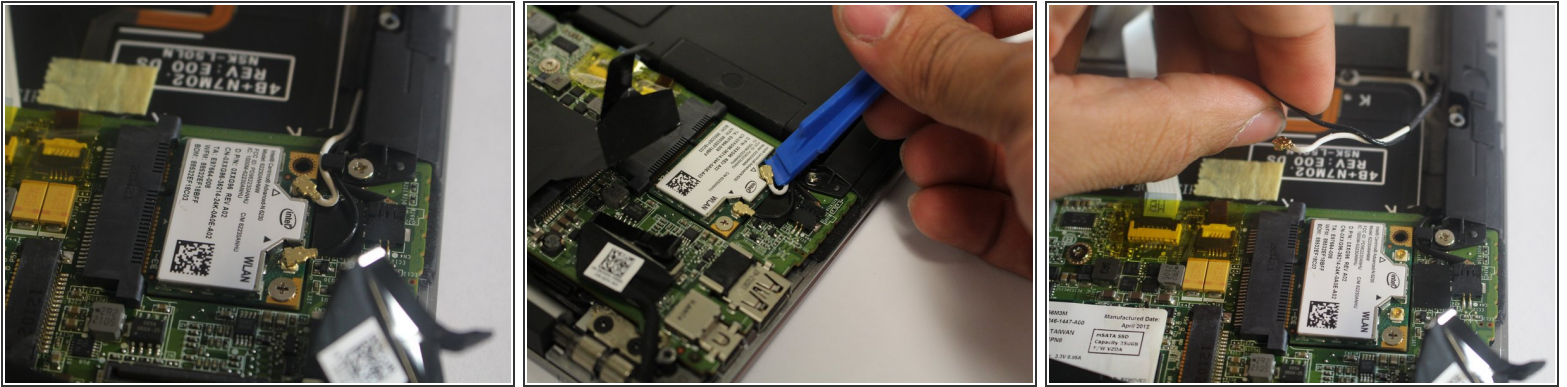


- Disconnect the wire that is connected to the wireless card with a plastic iFixit opening tool by lifting up slowly, then pulling the wires aside.

Step 6

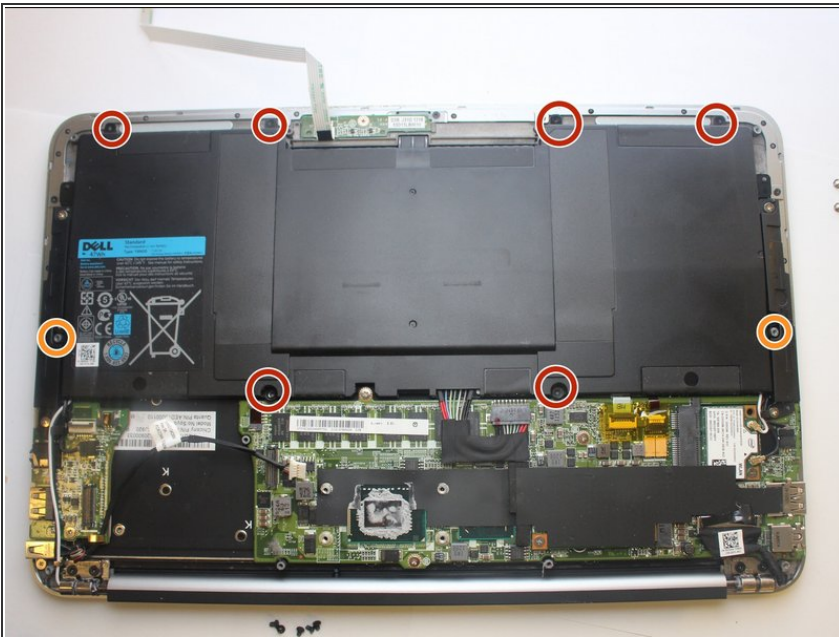



- Use a **PH00** size screwdriver to remove the 8 screws that secure the battery.
- Six 3mm screws.
- Two 5mm screws.

Step 7

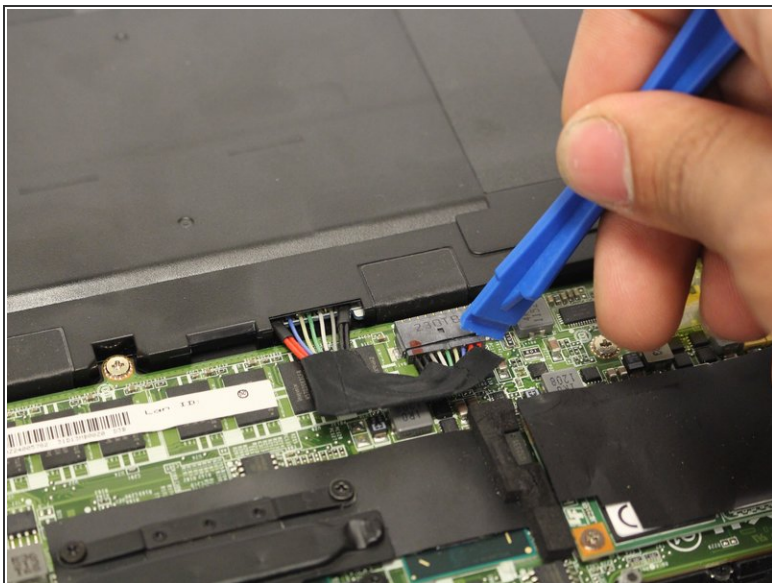


- Insert a plastic iFixit opening tool in between the port and the wires to remove the battery cable.

Step 8

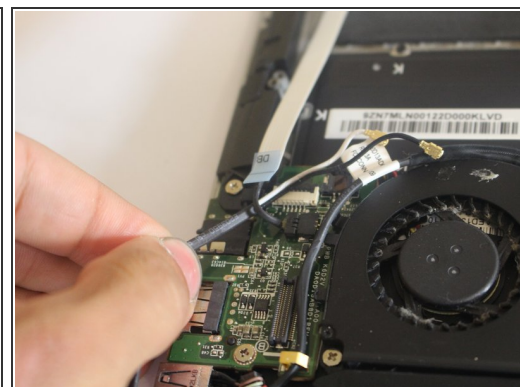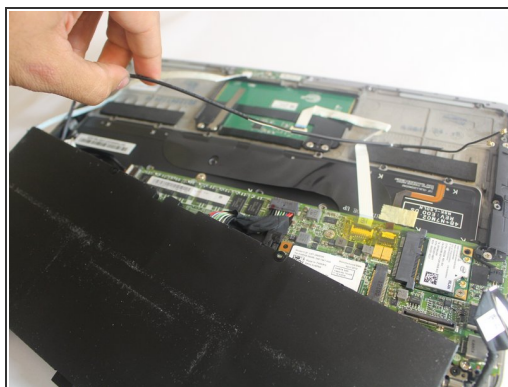

- After removing the battery, start to remove the wireless wire and making it through the other wires connected under the battery.

Step 9

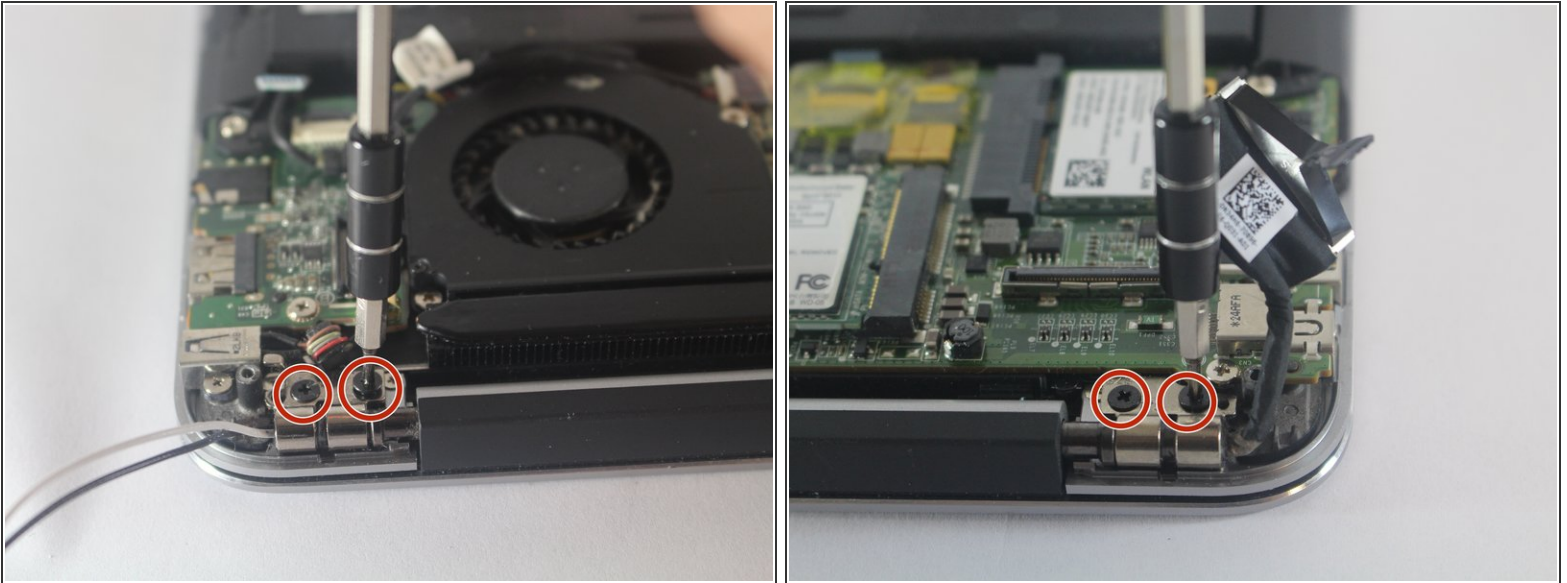

- Remove the screws with a PH1 size screwdriver.
- Each side of the brackets that are holding the screen down are going to have two 3mm screws in each side.

Step 10



- Open the laptop by separating the screen from the actual laptop and take it apart.