


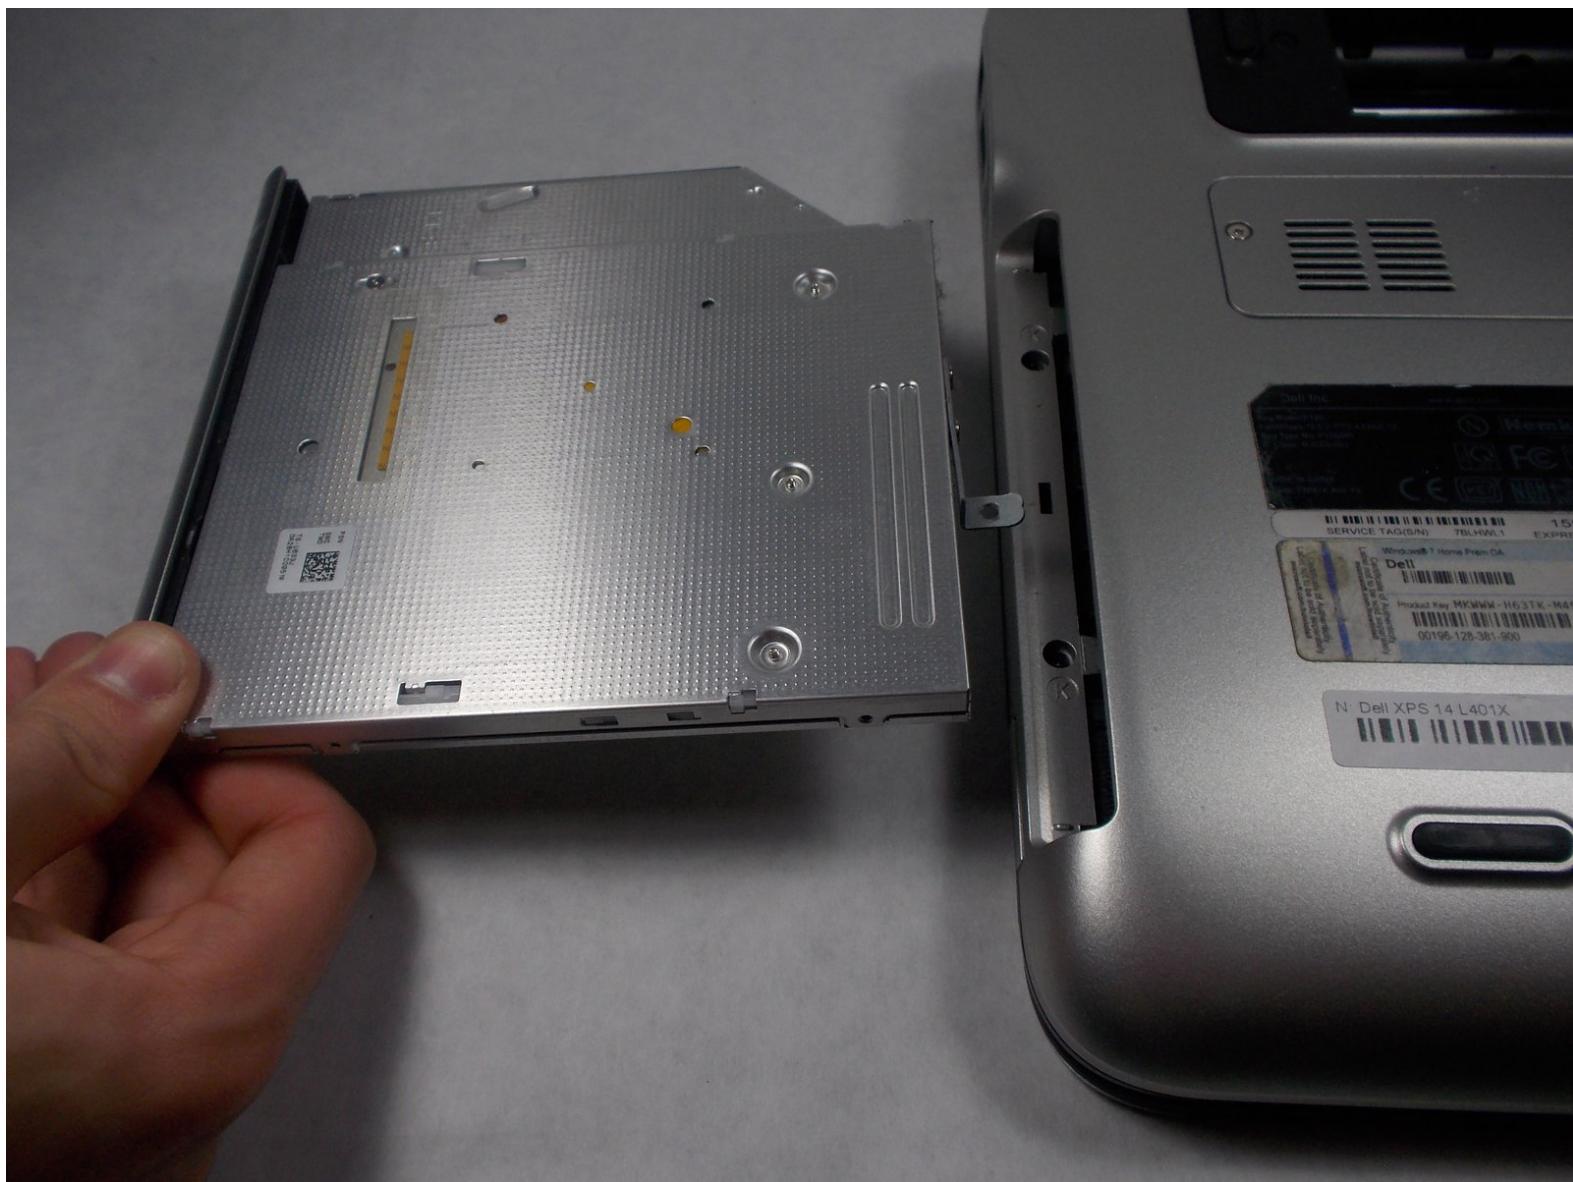

Dell XPS 14 L401X Optical Drive Replacement

How to replace the optical drive on your Dell XPS 14 L401X.

Written By: Mark



INTRODUCTION

If your laptop is suffering from a faulty optical drive and the device is not able to read disks, it may be time for a replacement.

TOOLS:

- **JIS #1** (1)

Step 1 — Battery



⚠ Make sure that the laptop is shut off before attempting to remove any components from the device.

(i) The laptop in this example did not have a battery equipped.

- Locate the spring latch on the bottom of the device that will unlatch the battery.
- Hold the spring latch in the open position with one hand, and support the battery with the other hand.
- Turn the laptop over and allow the battery to fall out of its holder and into your hand.

Step 2 — RAM



- Use a JIS 1 screwdriver to loosen the (2) captive screws from the panel.
- The captive screws will not come off of the panel.
- Pull the panel upwards and towards the battery to remove.
- Put the panel to the side, exposing the RAM.

Step 3



- The RAM is held by two spring clips. Pull at the two spring clips and the RAM will move upwards.
- *Keep your fingers on the edge of the chip.*
- ⚠ *Only handle the RAM by the sides! Do not touch the circuits or the terminals to avoid contamination!*

Step 4 — Optical Drive



- Locate and remove (1) 8.5mm JIS 1 screw at the top left corner of the RAM bay.

Step 5




- Carefully pull out the optical drive from its bay.

Step 6



- Carefully pull off the decorative cover from the front of the optical drive.
- ⓘ This decorative cover will be transferred to the new optical drive.

Step 7

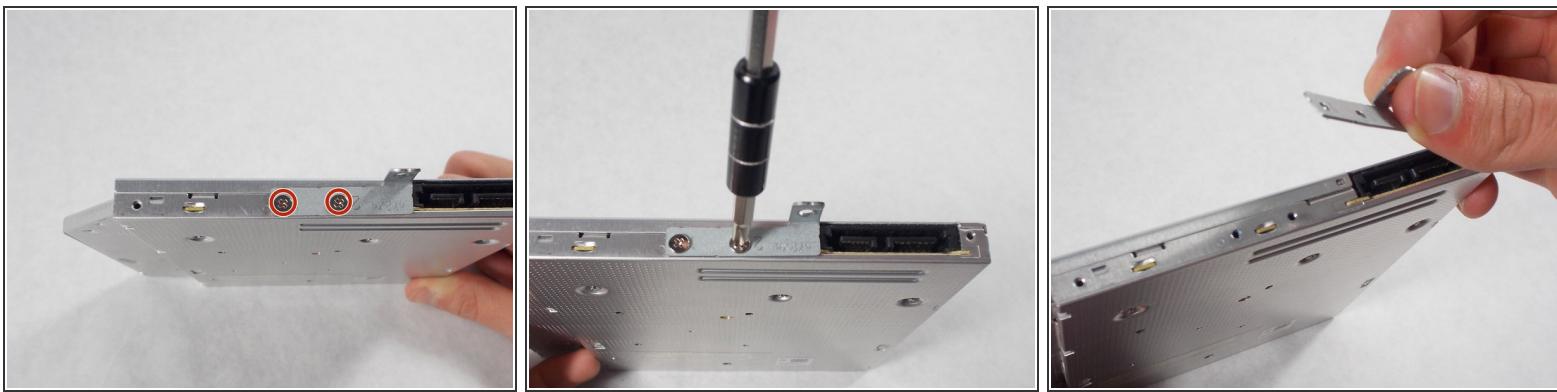

- Use a JIS 1 screwdriver to remove (2) 2mm screws on the drive's anchoring bracket.
- ⓘ This bracket will be transferred to the new optical drive.

To reassemble your device, follow these instructions in reverse order.