




Dell XPS 15 9530 Wifi card Replacement

This guide serves to walk users through the removal of the Wifi Card for the Dell XPS 15 9530 laptop


Written By: Matt

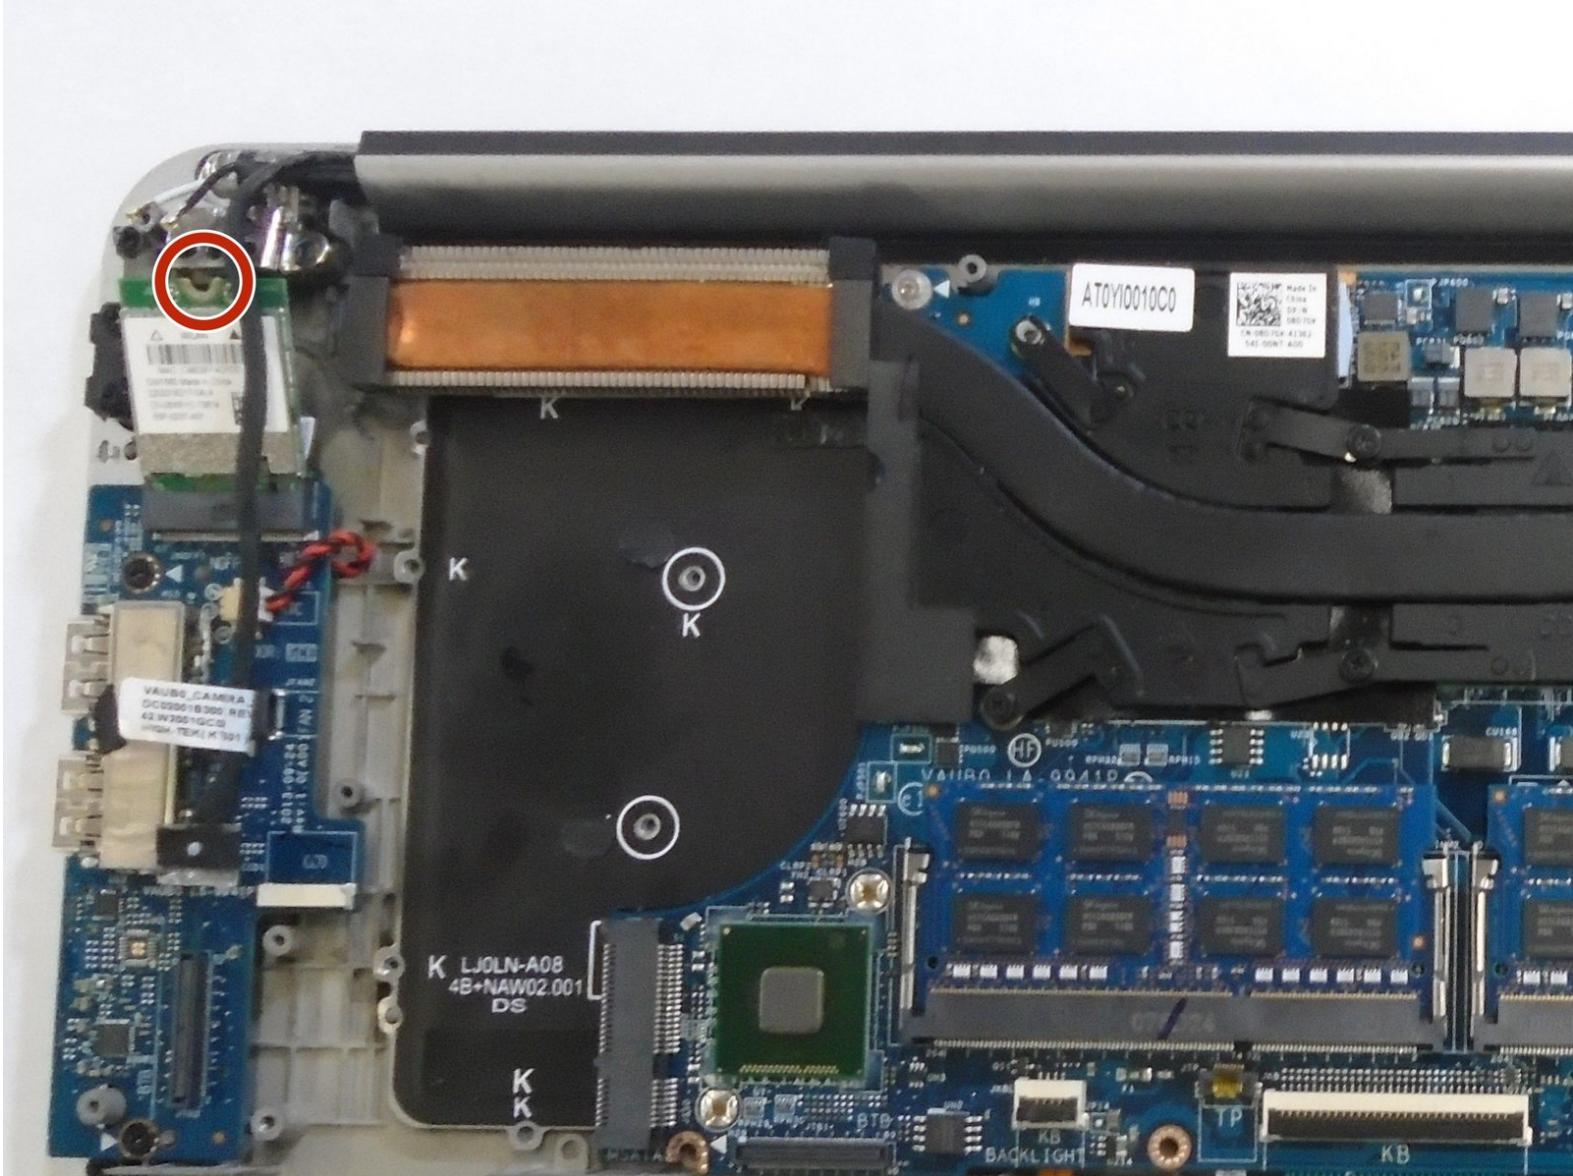

 **TOOLS:**


- [T5 Torx Screwdriver \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Base Cover

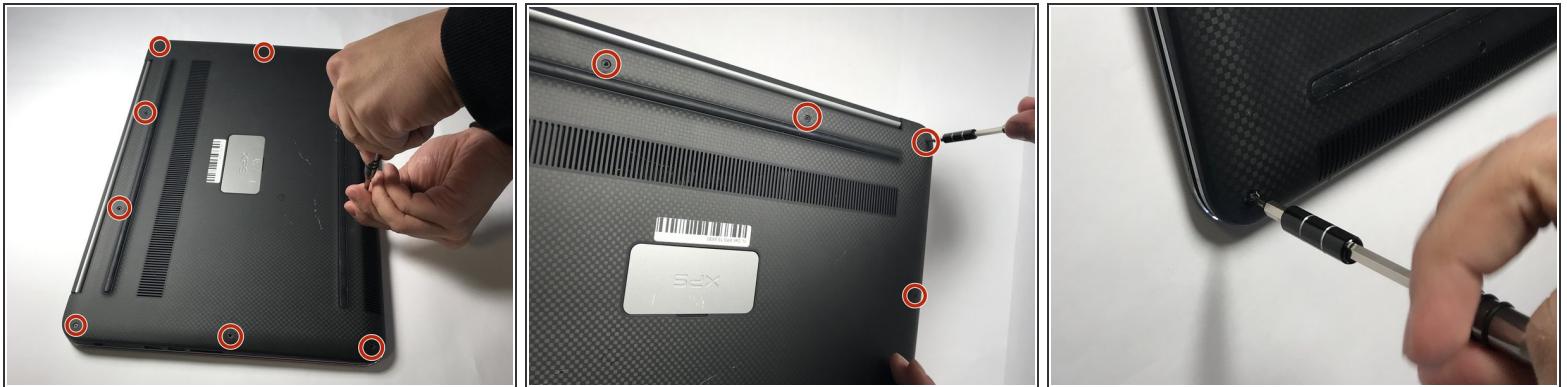

- Using a T5 Torx screwdriver, remove ten 3mm screws.

Step 2

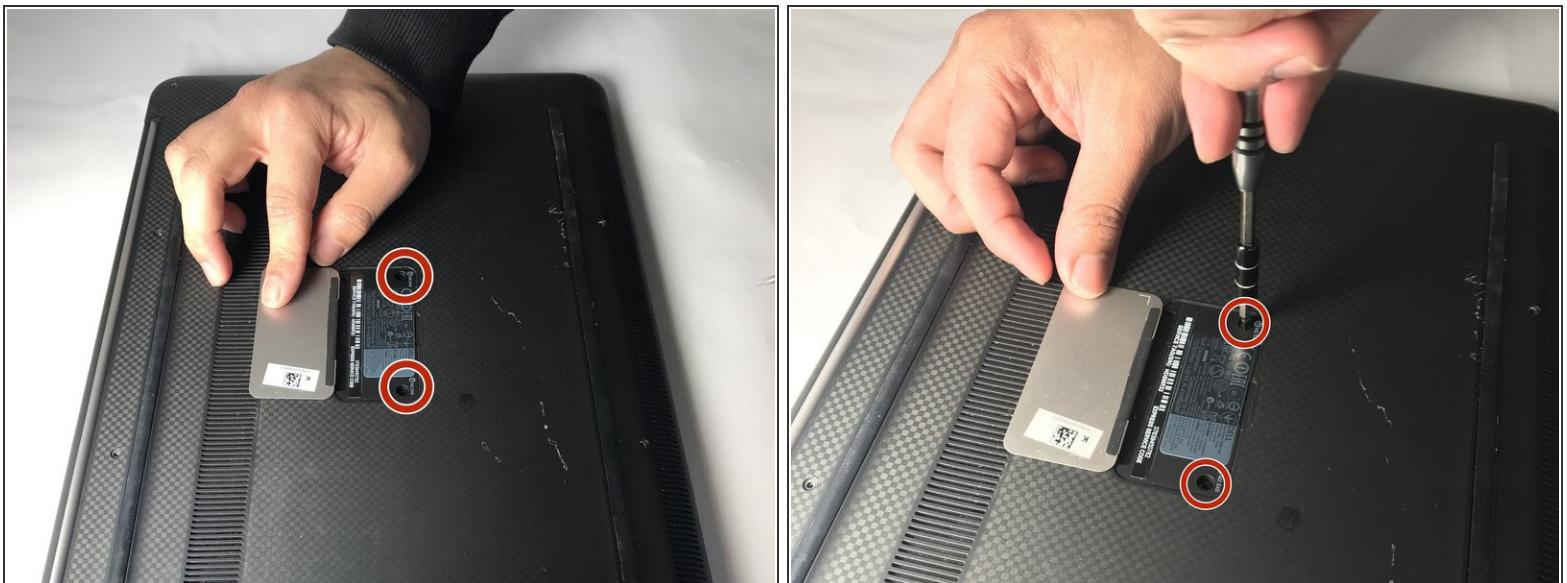


- Lift the plastic tab.
- Remove two 3mm Phillips #0 screws under the plastic tab.

Step 3



- Lift the lower case off.

Step 4 — Wifi card

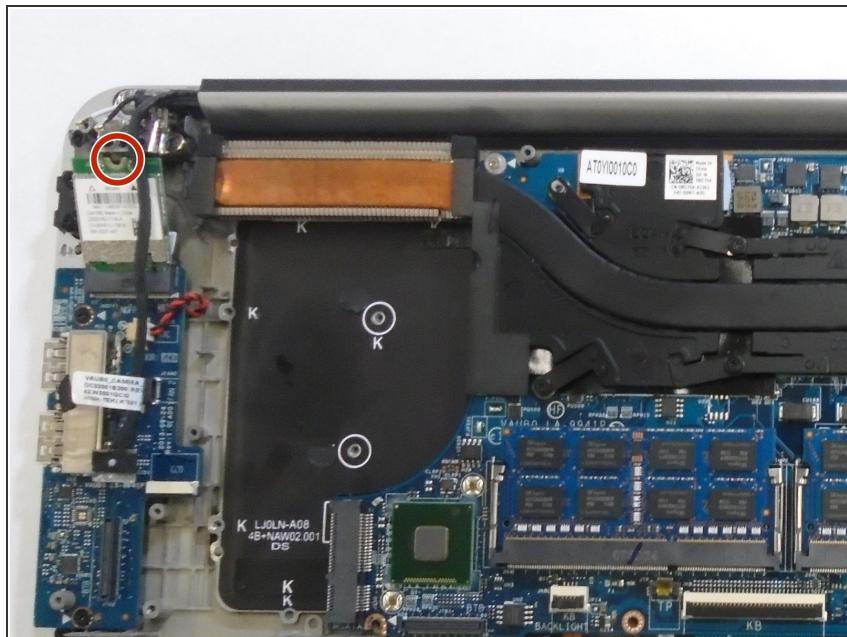

- Use a Phillips #0 screwdriver to remove the screw holding the WiFi card down.
- Take the WiFi card out.

To reassemble your device, follow these instructions in reverse order.