




Dell XPS 17 L702X Hard Drive Replacement

Replacing Both Hard Drives of XPS 17 L702X

Written By: Shin Sul

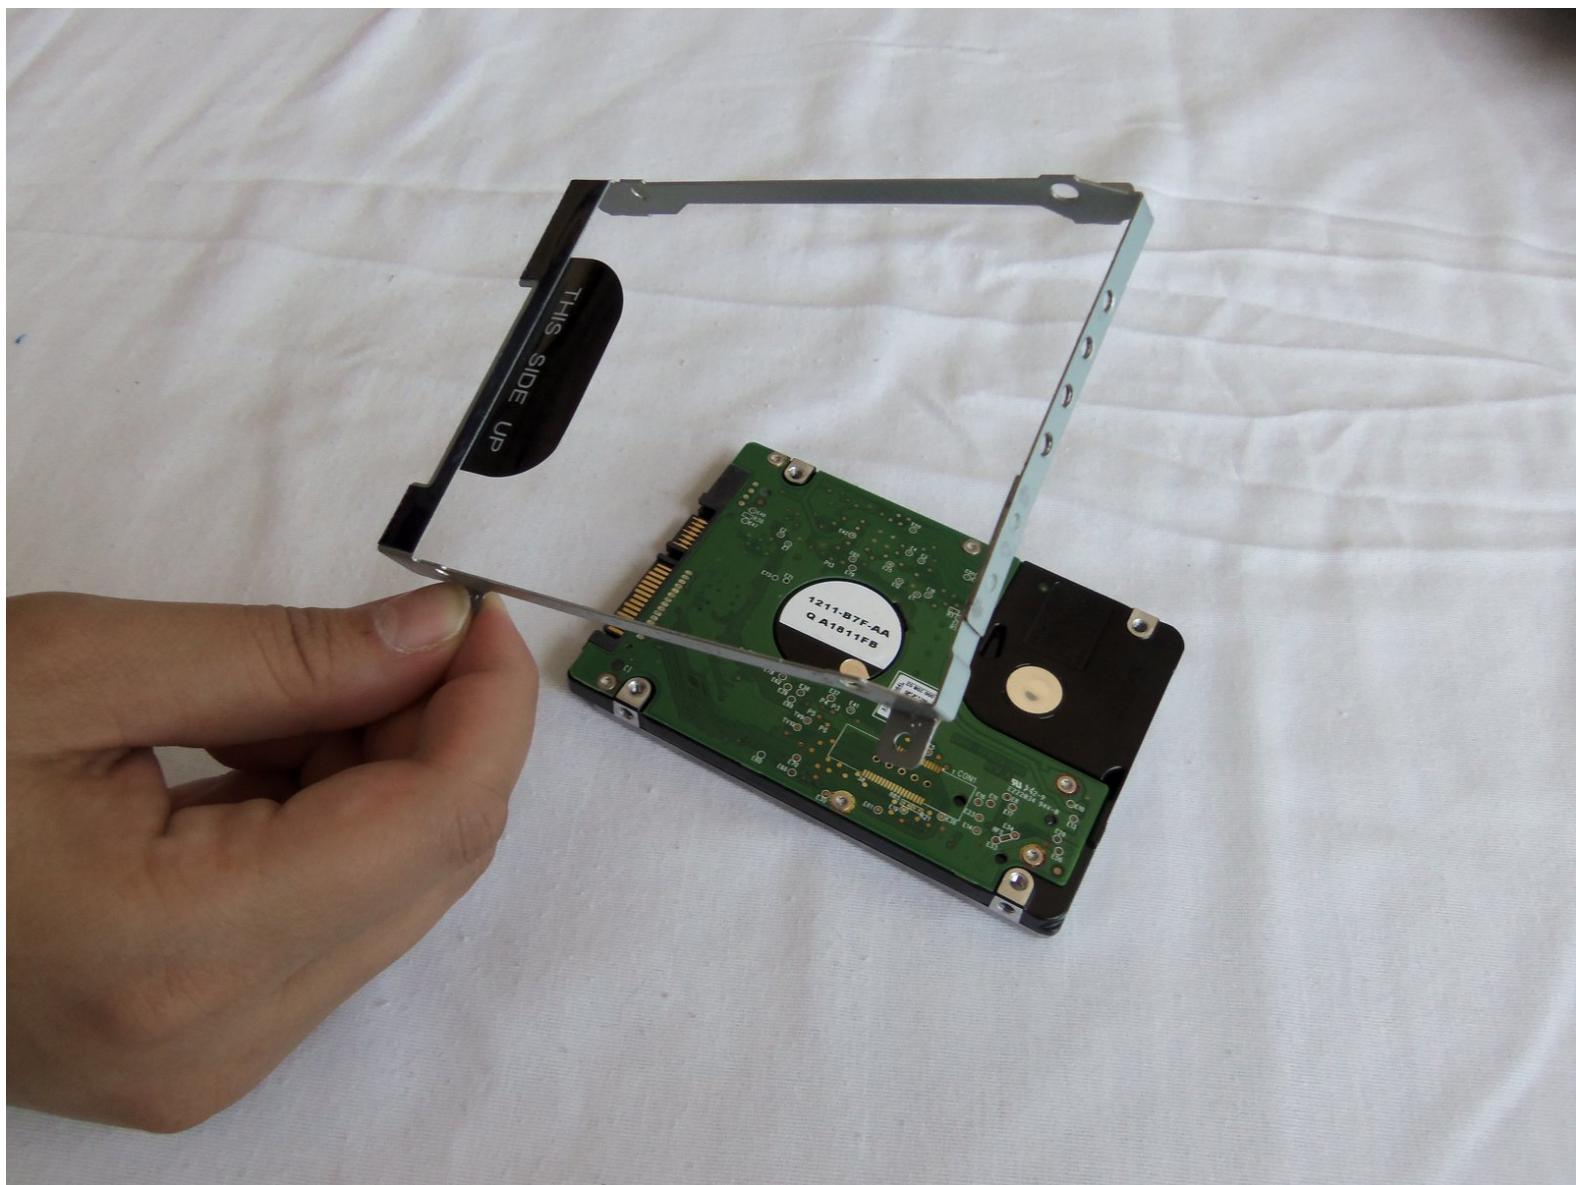

 **TOOLS:**

- Phillips #1 Screwdriver (1)

Step 1 — Battery




- Flip over the laptop so that the bottom battery compartment faces upwards.

Step 2



- Slide the tab below the battery to the left and hold the tab in place.

Step 3

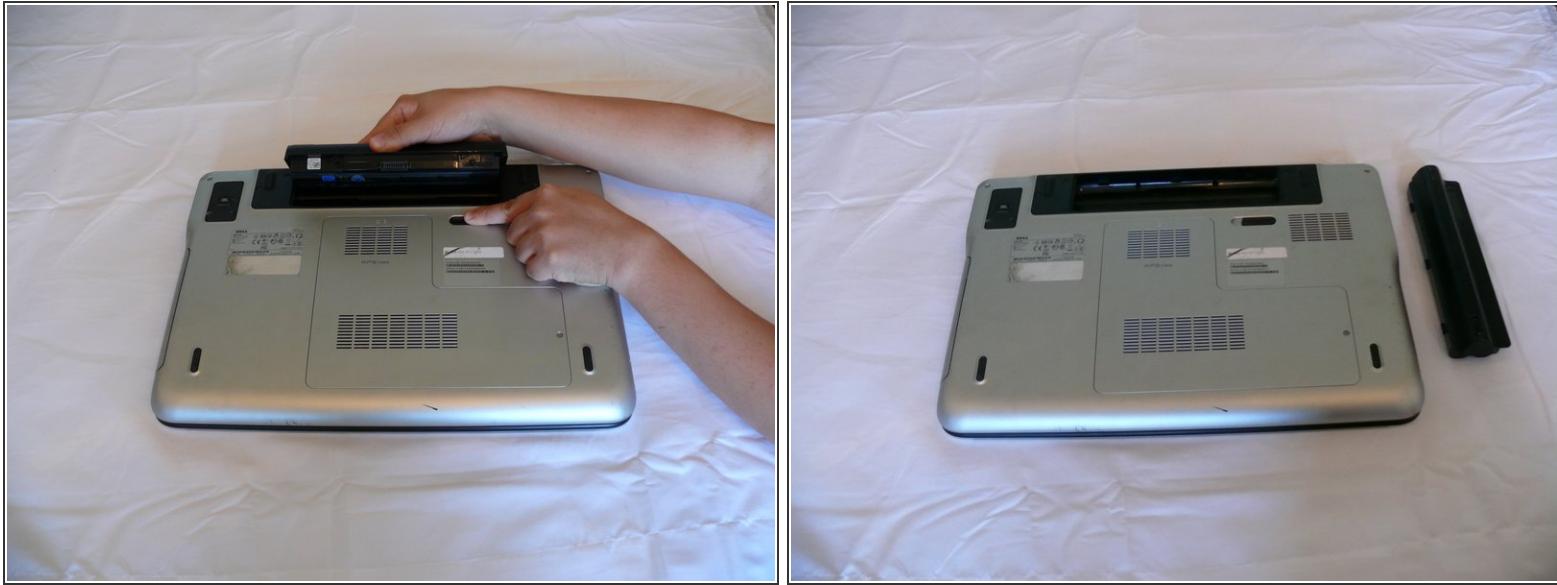

- While holding the tab, lift the battery out of its compartment.
- Release the tab after removing the battery.


Step 4 — Hard Drive



- Loosen the module cover screw with a Phillips screwdriver.


⚠ The screw is attached to the cover; do not force it out.

Step 5

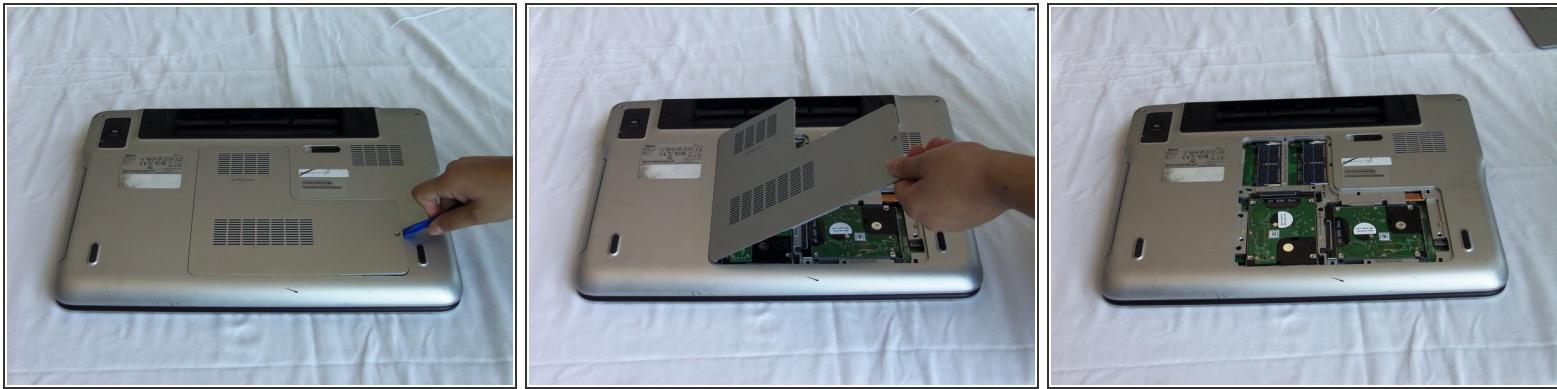

- Lift the module cover by inserting a plastic opening tool into the crevice near the screw and lift upwards.

Step 6

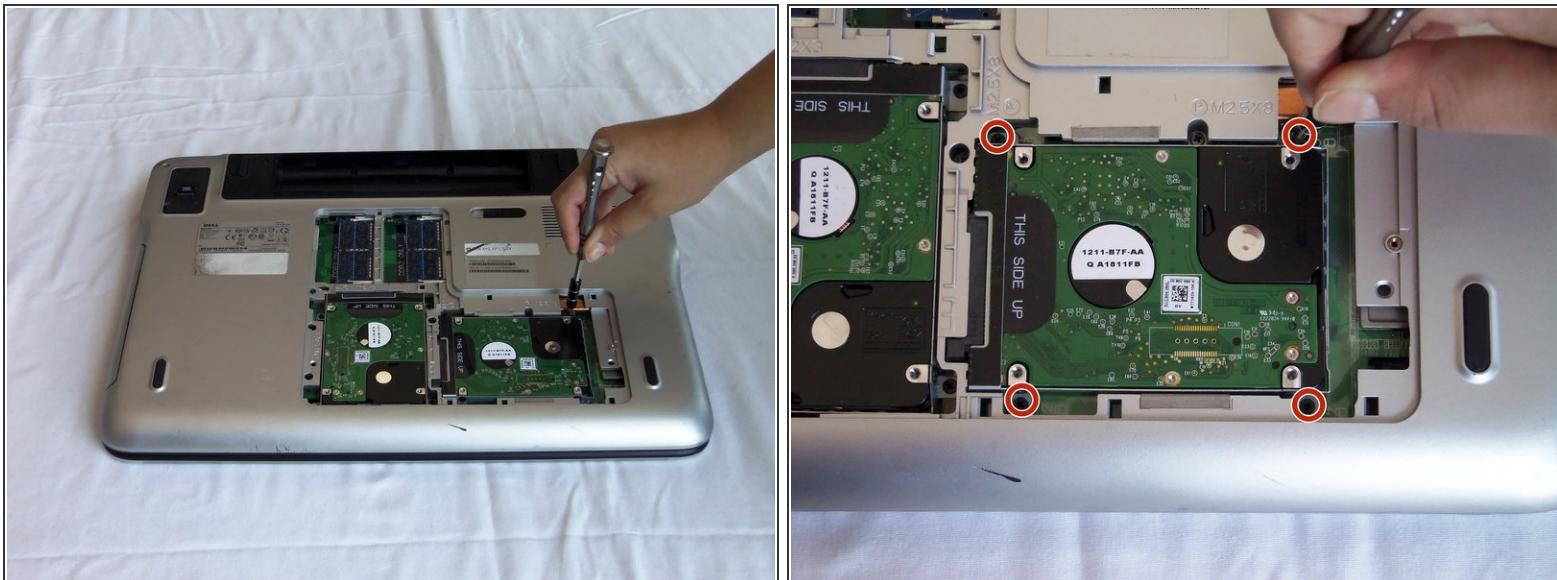


- Remove the four 4mm Phillips screws fastening the first hard drive.

Step 7



- Slide the hard drive with your hand towards the hole where the back panel assembly screw was located (in step 5) to disconnect it.
- Lift the hard drive up to remove it from the case.

Step 8

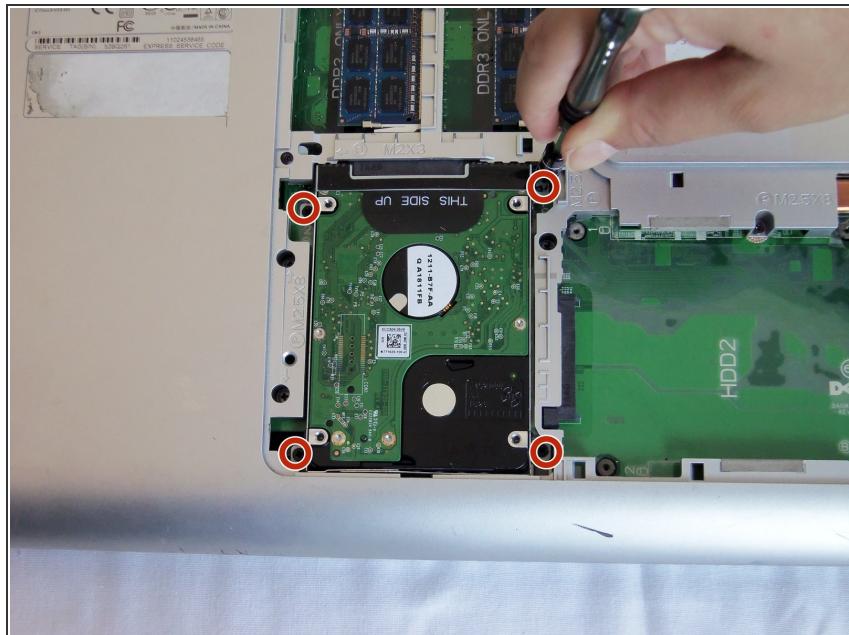


- Remove the four 4mm Phillips screws on the second hard drive.

Step 9




- Slide the hard drive towards the edge nearest you to disconnect it.

Step 10

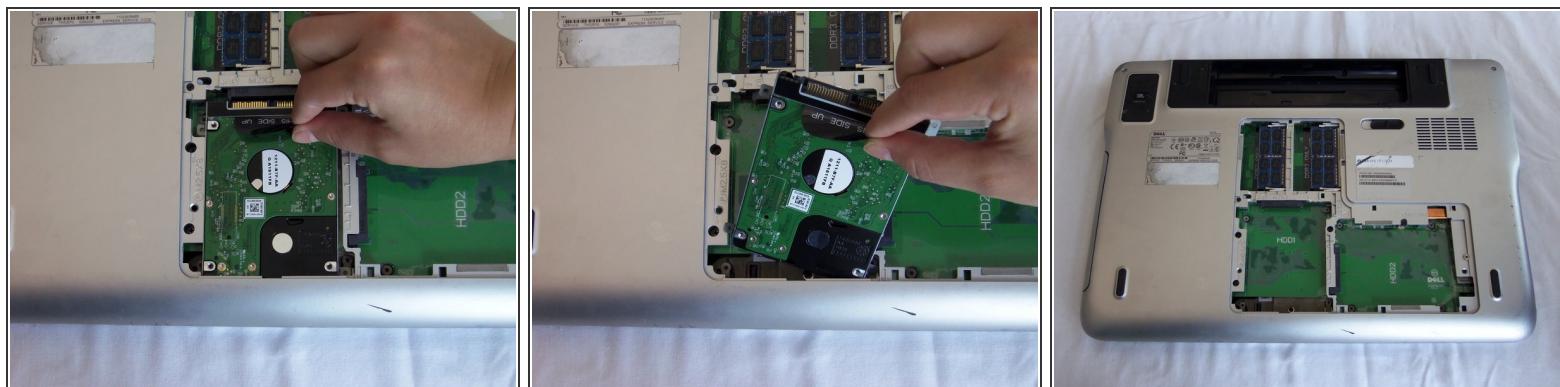

- Using the tab that says "THIS SIDE UP," pull away from the laptop to remove the hard drive.


Step 11

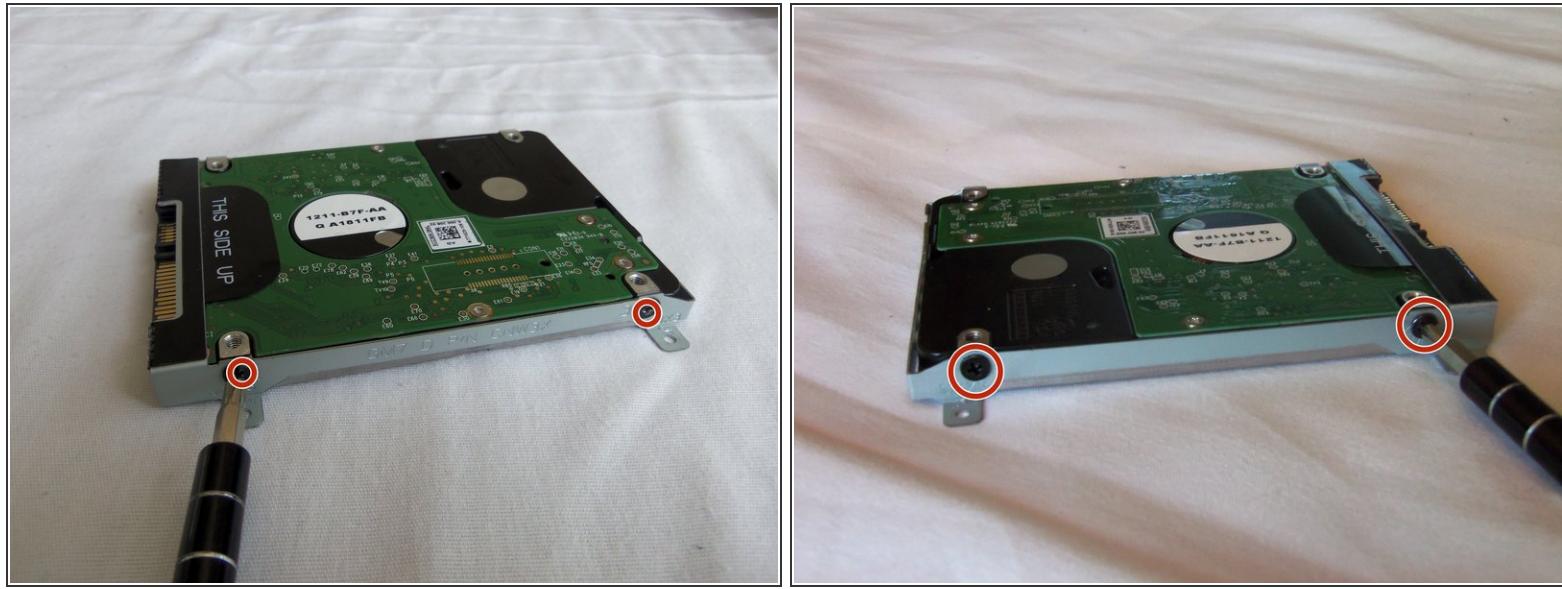

(i) Repeat this step for each hard drive.

- Unscrew the two 4mm screws from each side of the hard drive casing with a Phillips screwdriver.

Step 12

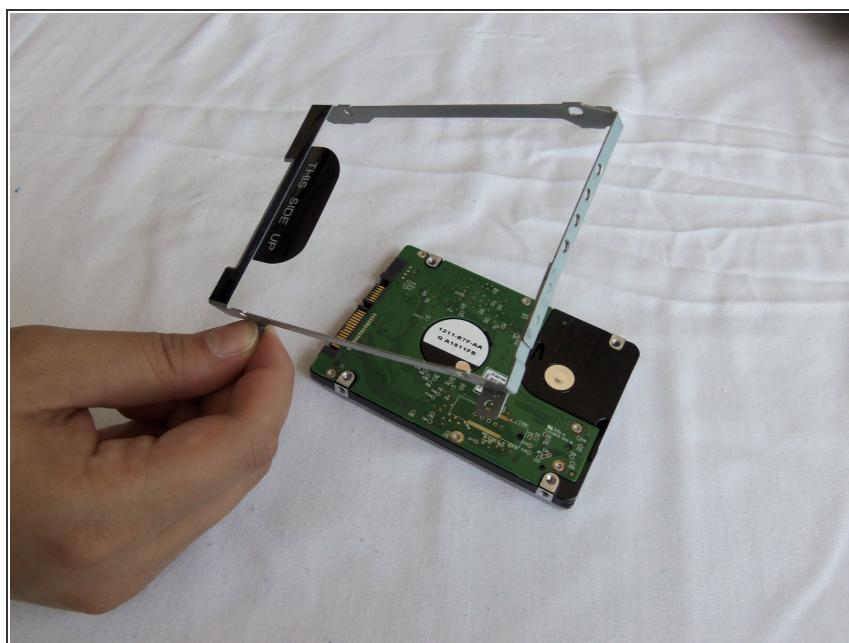

- Remove the hard drive casing.

To reassemble your device, follow these instructions in reverse order.