


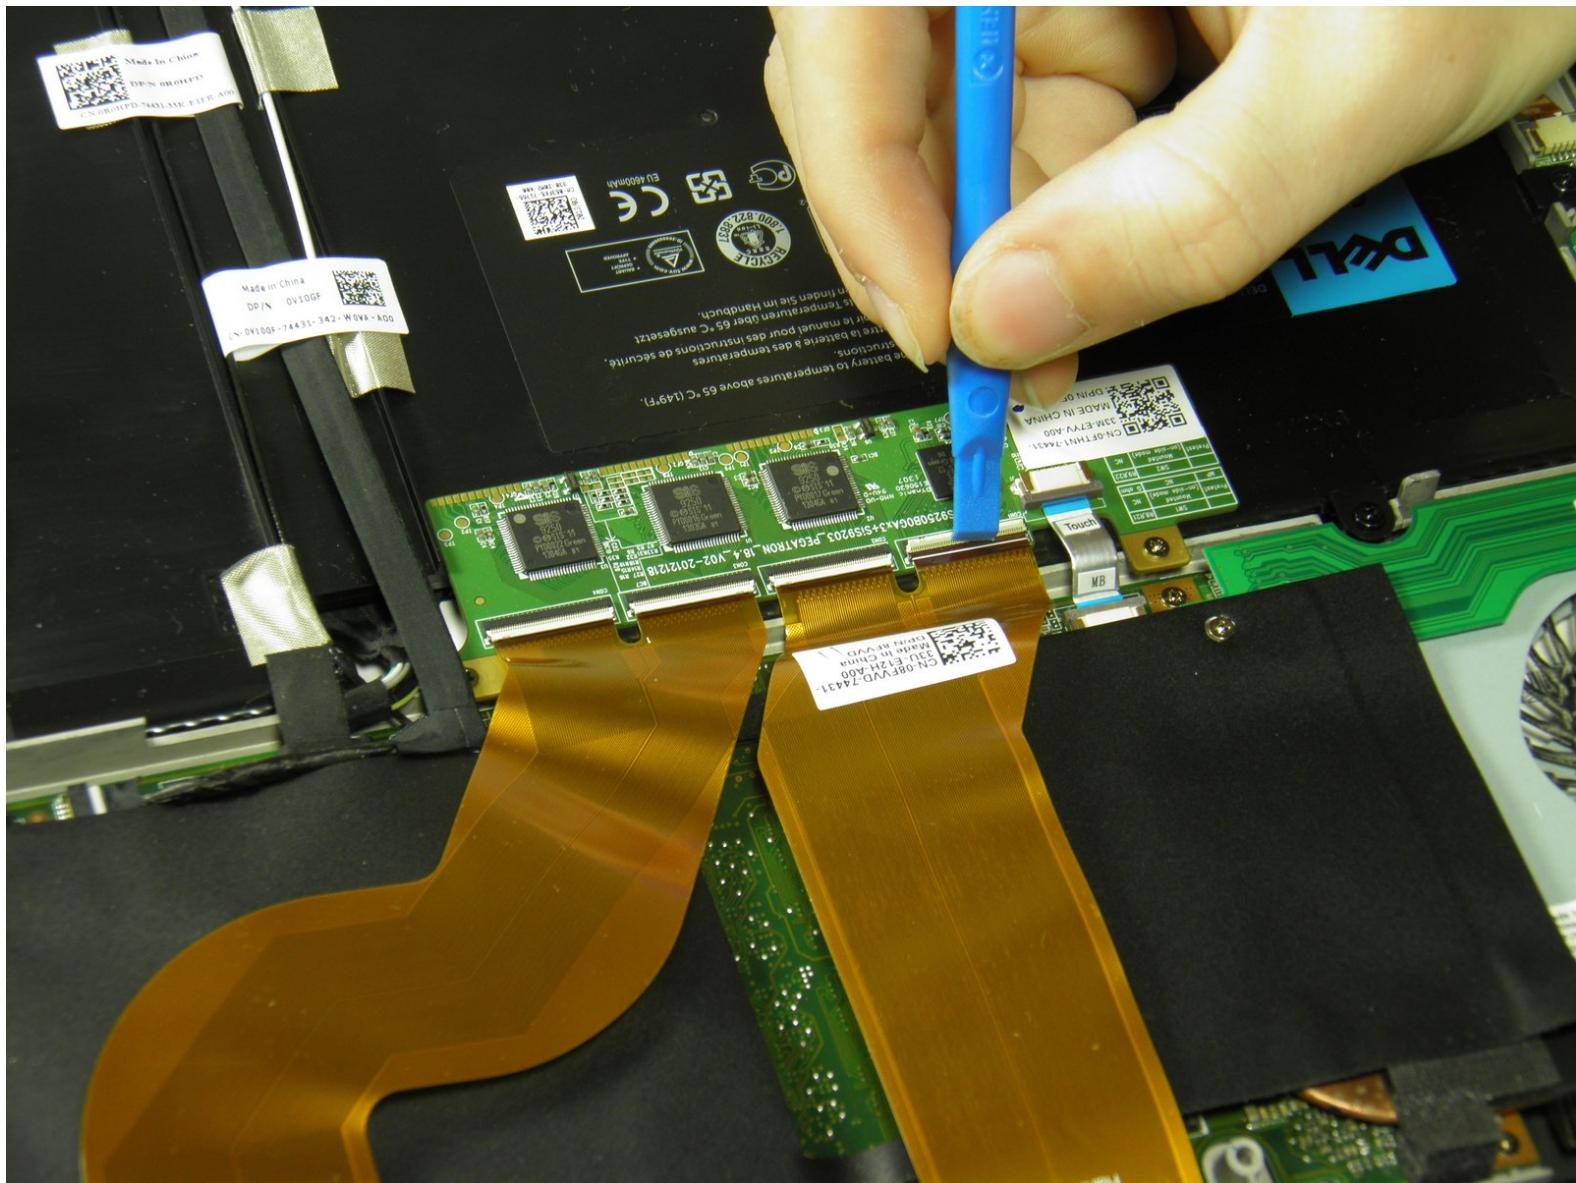

# Dell XPS 18 Internal Cover

## Prerequisite

Written By: Austin Weir



## INTRODUCTION

This guide is used as a prerequisite for replacing internal parts in the Dell XPS 18

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T9 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Cover



- Turn the device on its screen.
- Remove the ten 4mm screws using a T8 Torx screwdriver.

## Step 2




- Gently flip out support feet located near the bottom of device.

## Step 3





- Gently lift the back cover off the device. The back cover should come off easily.

## Step 4 — Internal Cover

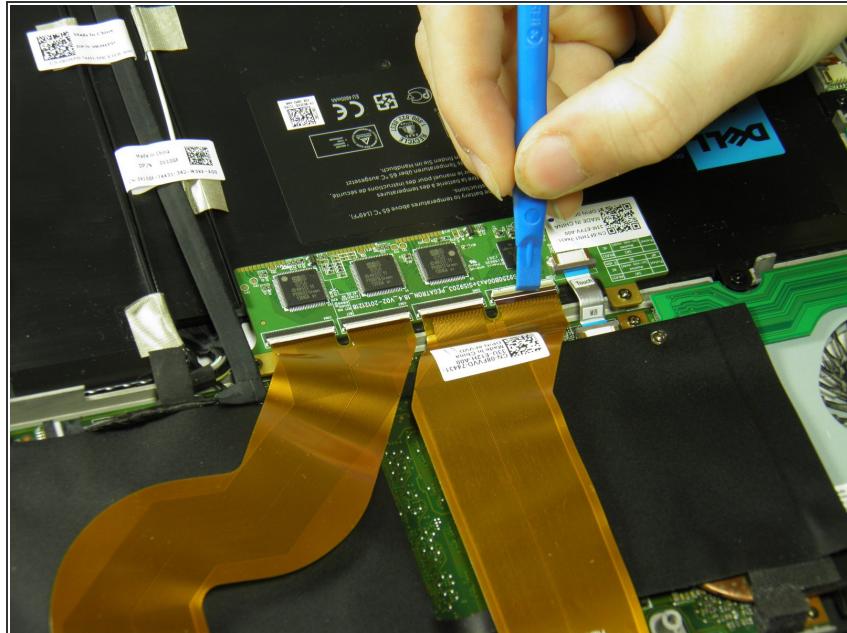

- Use the opening tool's angled edge to lift the clasps securing the screen and motherboard cables.

## Step 5

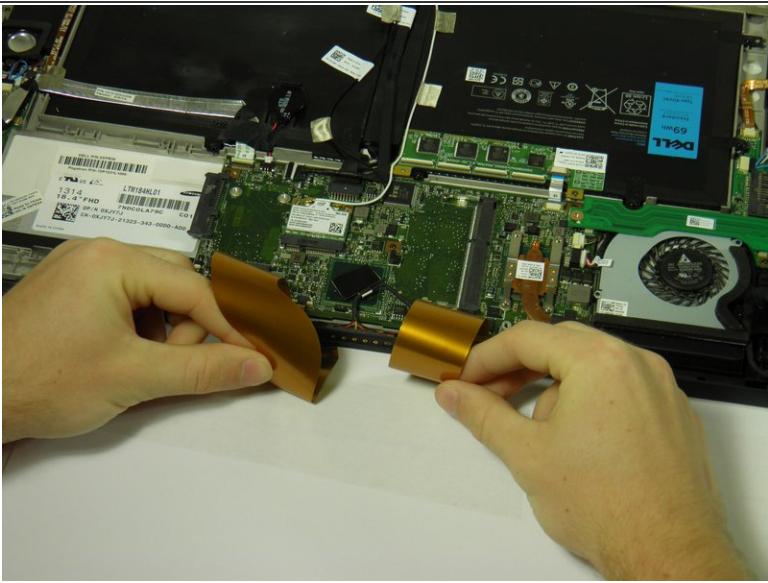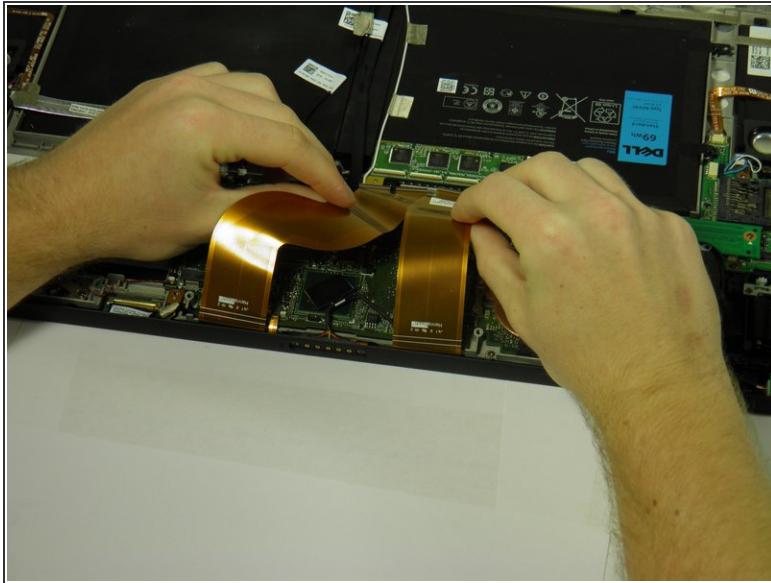

- Disconnect the screen and copper colored motherboard cables and tuck them under the device to prevent future hassle.

## Step 6



- Remove the two black 3mm screws from the internal cover with a Phillips 00 screwdriver.
- Remove the internal cover.

To reassemble your device, follow these instructions in reverse order.