


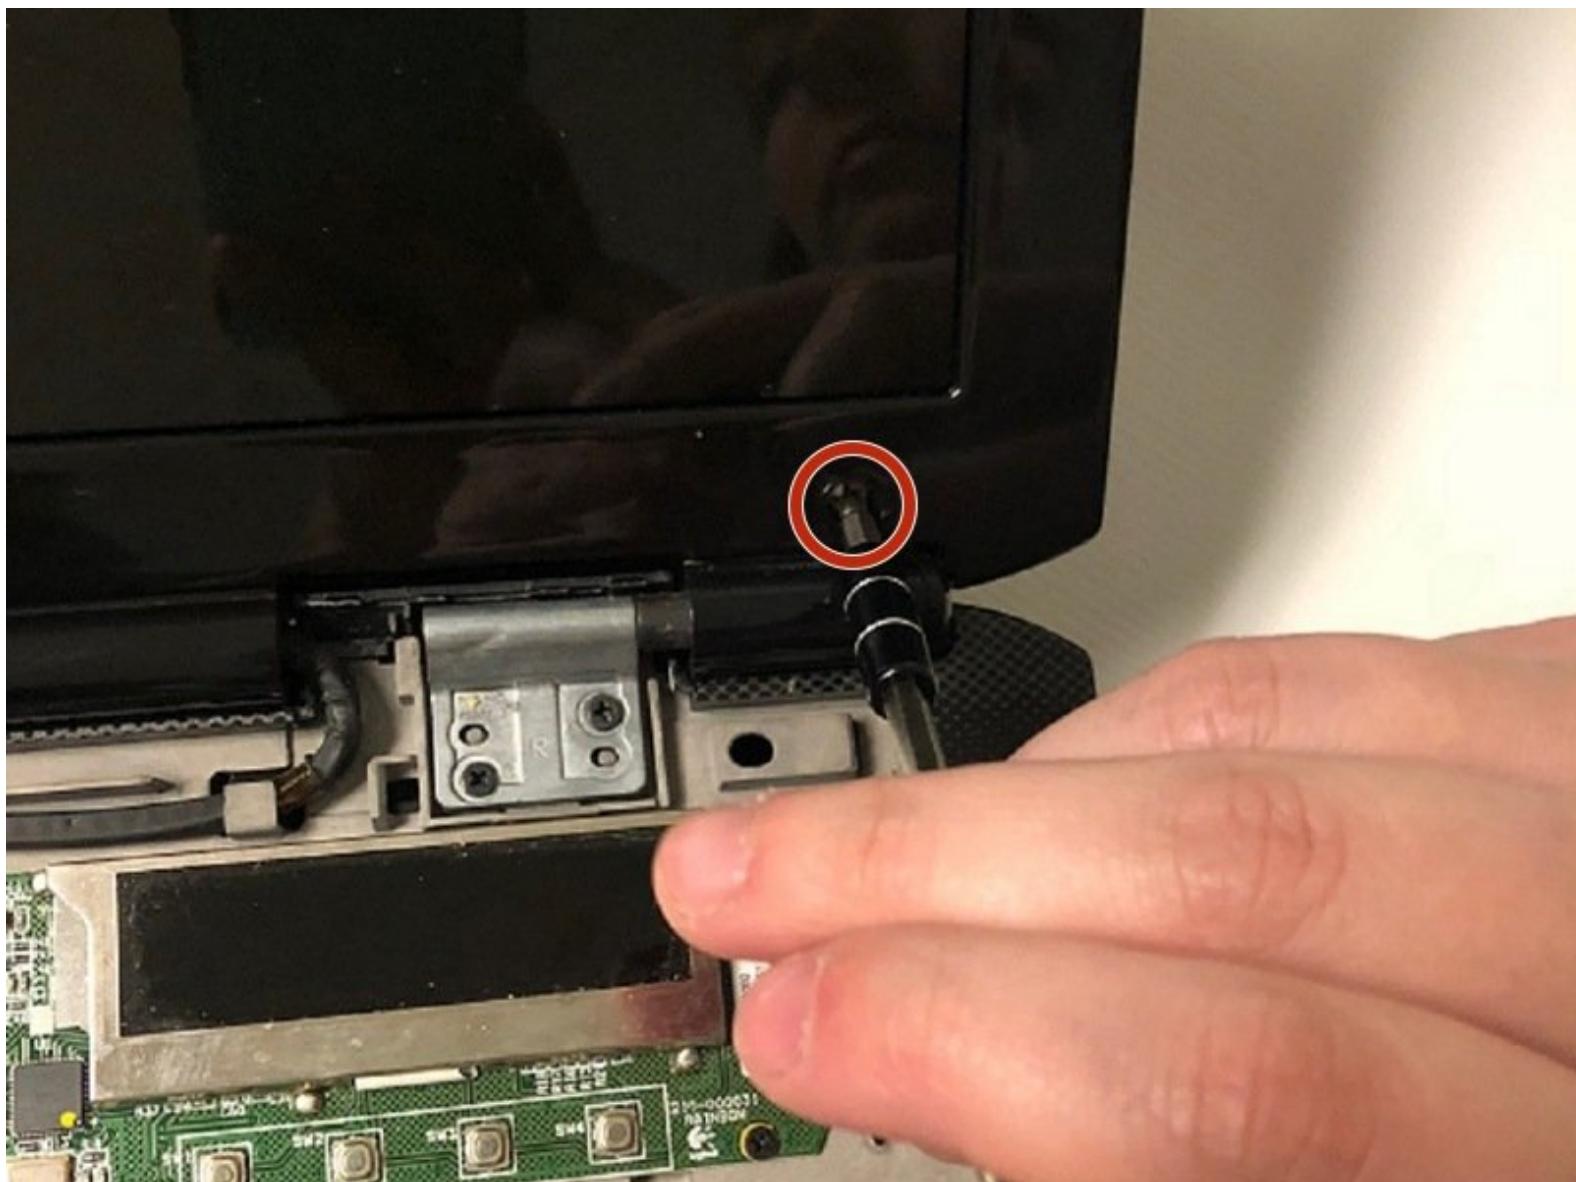

# Dell XPS M1730 Screen Replacement

This guide will assist you in replacing a Dell XPS M1730 screen.

Written By: Ethan Teel



## INTRODUCTION

Before you begin the LCD Screen Display replacement process, be sure to ground yourself. Grounding yourself prevents short circuiting the device, and/or shocking yourself. An easy way to do so would be to remove one of your shoes.

### TOOLS:

- 2 Hands (1)
- Phillips #0 Screwdriver (1)

## Step 1 — Battery



- Push the sliding button near the battery compartment.

## Step 2




- Slide the button next to the battery and lift up on the lip of the battery edge.

## Step 3



- Lift and remove the battery.

## Step 4 — Keyboard

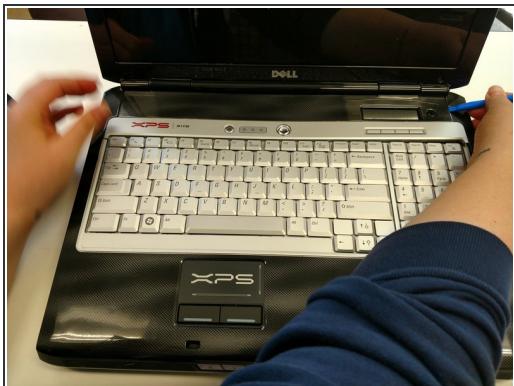

- Remove the plastic trim at the base of the screen screen. Start from the tab on the right side and work to the left side.

## Step 5



- Remove the four screws from the top of the keyboard bracket.

## Step 6




- Remove the keyboard by sliding it forward, off of the clips, and then lifting up.

## Step 7




- Lift the keyboard about 2 inches up from the laptop platform.
- From this angle the keyboard ribbon connector can be seen and disconnected.

## Step 8 — LCD Screen Display

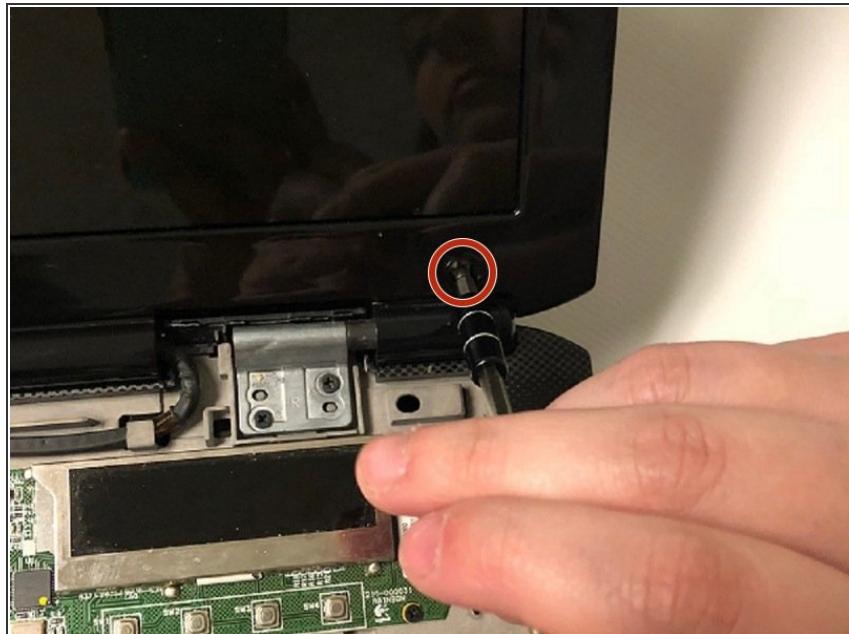

- Remove 2 M2x3mm screws that are located at the bottom of the plastic bezel with a PH0 screwdriver.

## Step 9

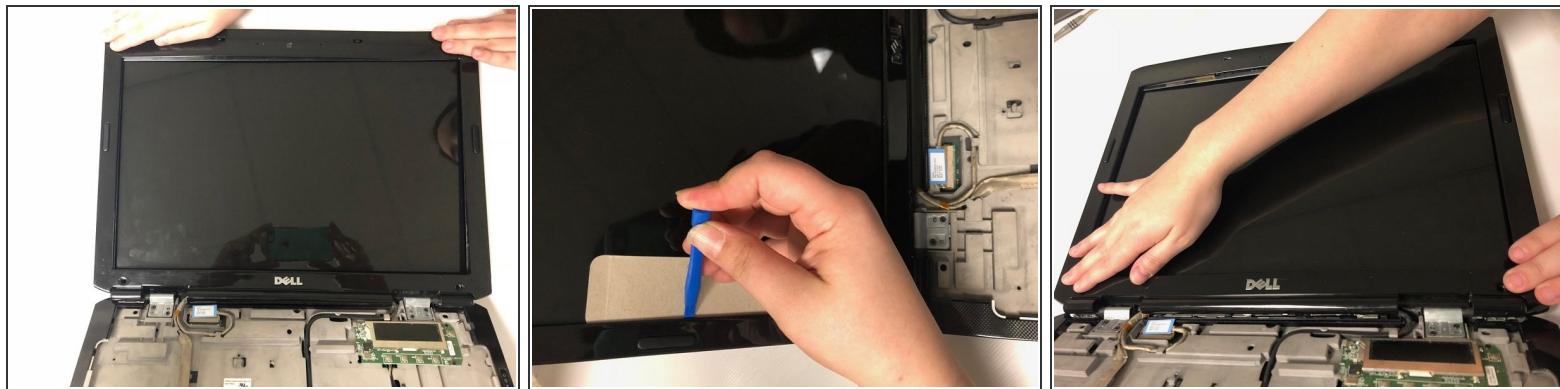


- Use iFixit plastic tool and a cutout of cardboard to pry out the plastic bezel around the edges of the LCD screen

## Step 10



- Disconnect the display connectors by removing them from the grooves and unplugging them.

## Step 11

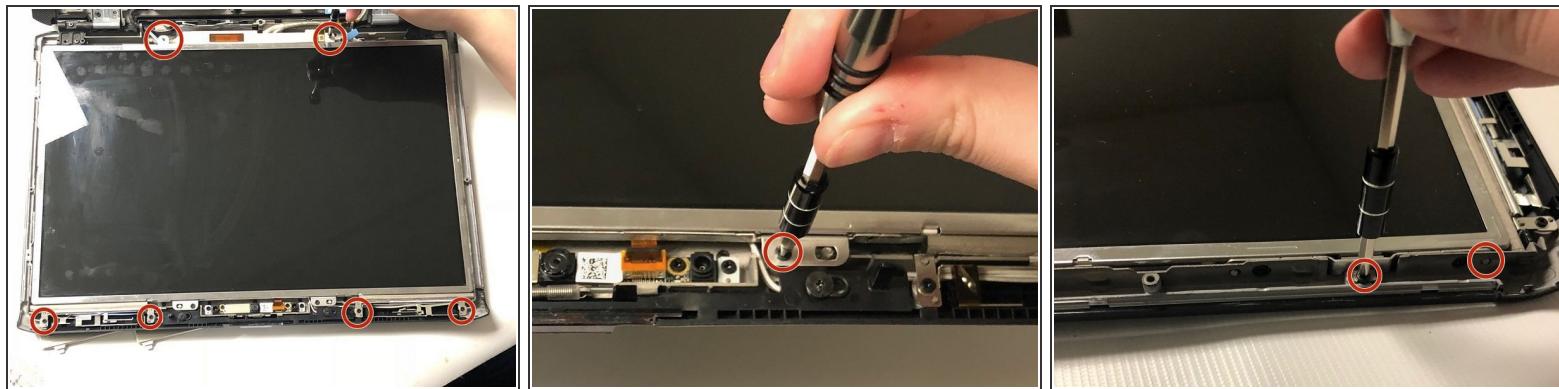

- Remove 12 M2x3mm screws along the edge of the screen frame with a PH0 screwdriver.

## Step 12



- Disconnect the display connector behind the top of the screen.

To reassemble your device, follow these instructions in reverse order.