



Dewalt DCD778 Battery Replacement

This guide will help you replace your battery on your Dewalt DCD778 hammer drill.

Written By: Brittany



INTRODUCTION

For this device, removing the battery is very easy and with the help of this guide you will be able to remove your battery in no time.

Step 1 — Battery



- Grab the drill in one hand and cup the battery (located at the bottom of the drill) with the other hand.

Step 2



- Use your other hand to push down on the yellow button on the battery.

Step 3



- Pull the battery in a horizontal direction away from the drill.

To reassemble your device, follow these instructions in reverse order.