




# Dexter cordless angle grinder switch ON/OFF button replacement

Written By: Dakhir Katchiev

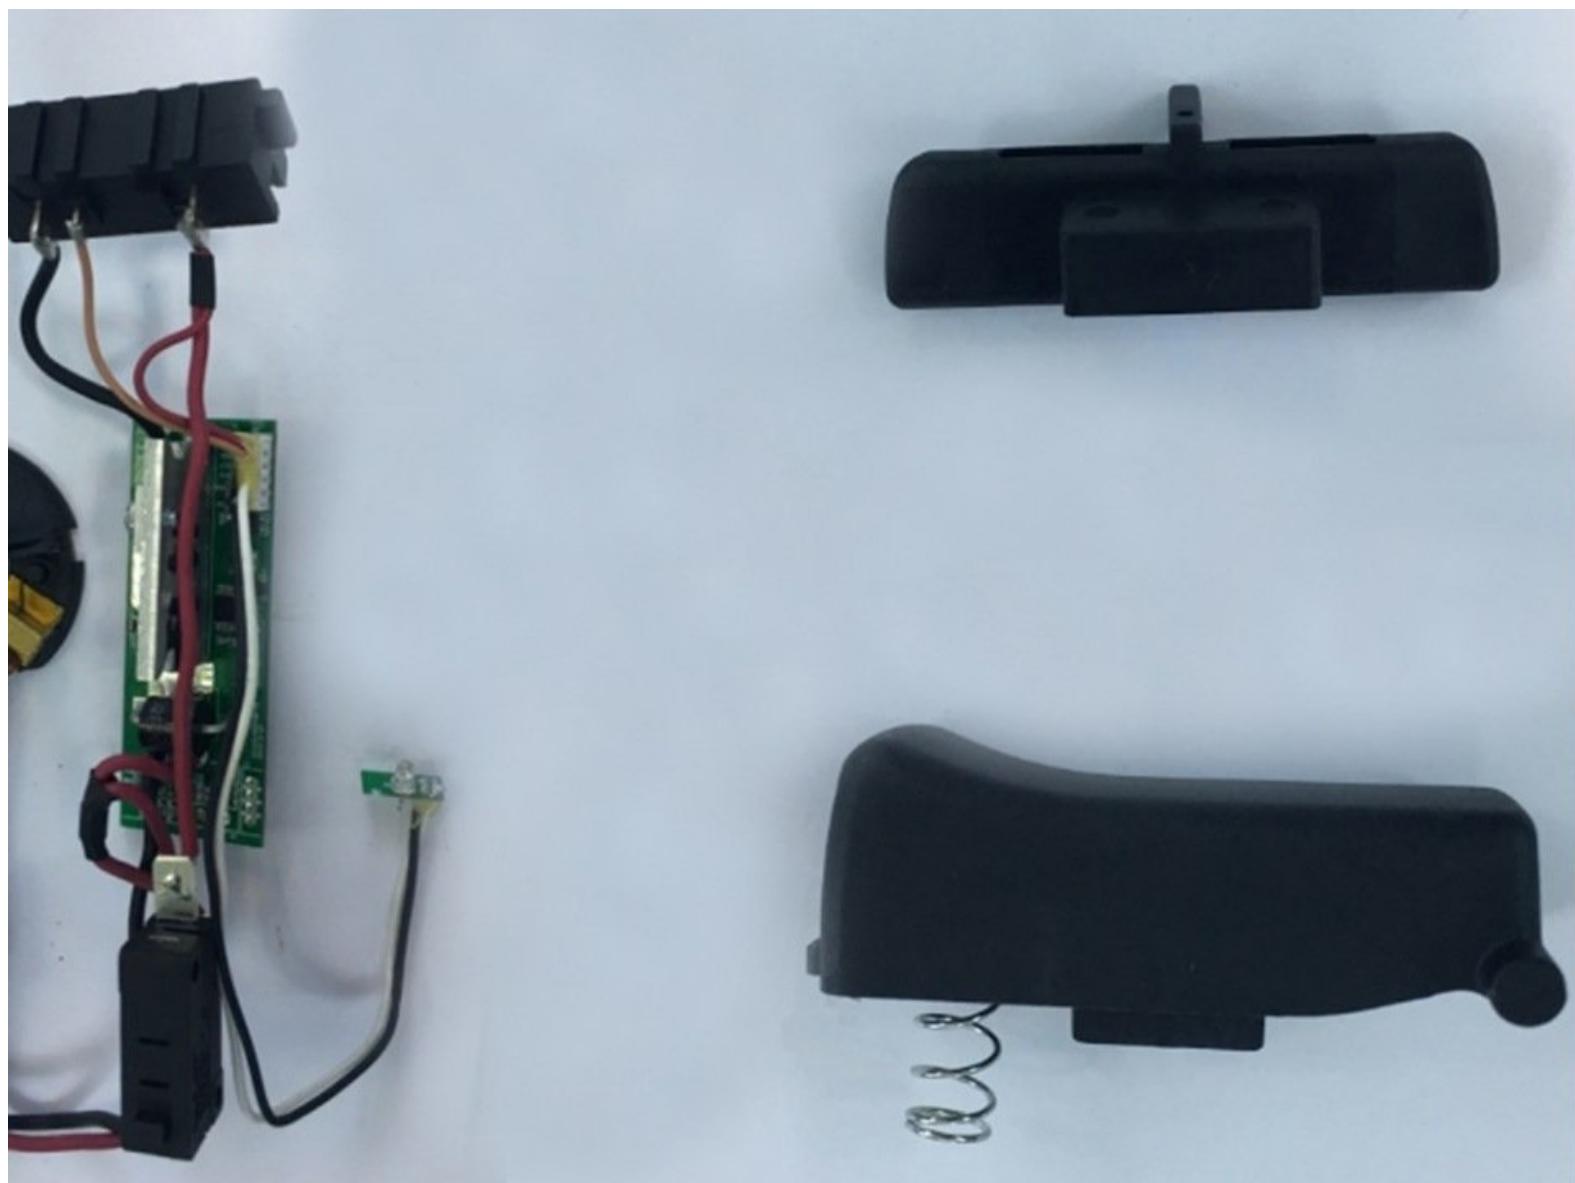


## Step 1 — switch ON/OFF button replacement



● 1

## Step 2

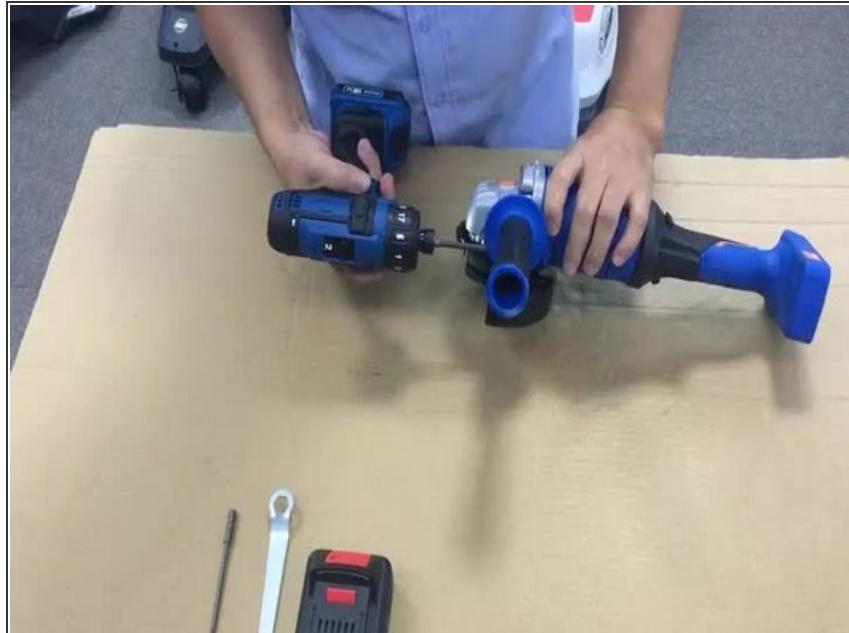

● 2

## Step 3



● 3

## Step 4



● 4

## Step 5



● 5

## Step 6



● 6

## Step 7




● 7

## Step 8



● 8

## Step 9

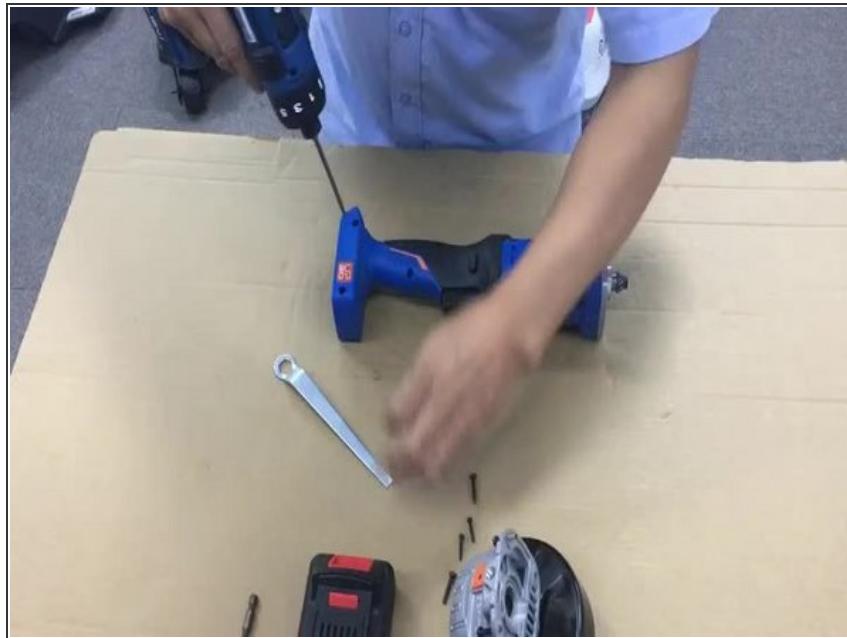

● 9

## Step 10



● 10

## Step 11



● 11

To reassemble your device, follow these instructions in reverse order.