



DigiLand DL718M Back Panel Replacement

This is the guide to replace the back panel on the DigiLand DL718M tablet device.

Written By: Alayna Knarian



 **TOOLS:**

- iFixit Opening Tools (1)

Step 1 — Back Panel



- Remove back panel by wedging the iFixit opening tool on all four sides of the device.

To reassemble your device, follow these instructions in reverse order.