




DigiLand DL718M Microphone Replacement

How to replace the microphone in the DigiLand DL718M.

Written By: Alayna Knarian

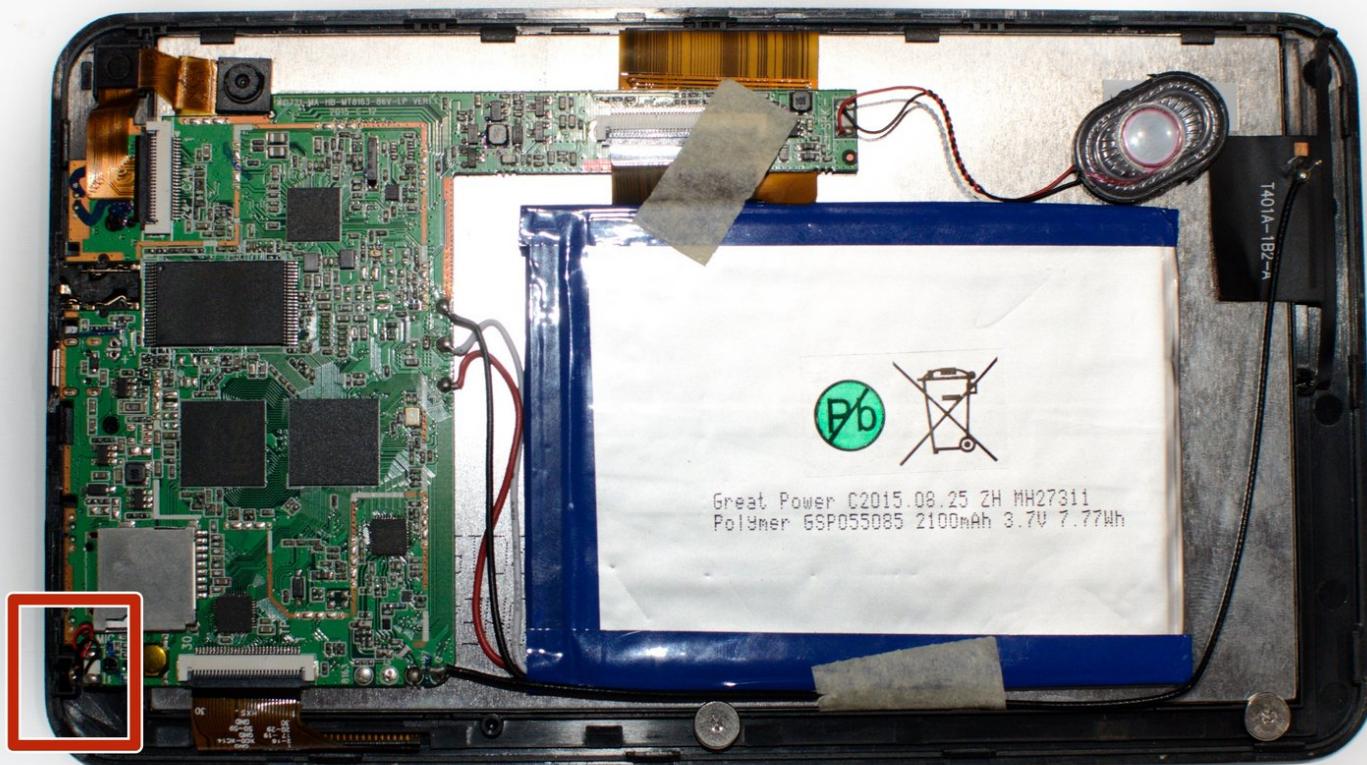

INTRODUCTION

Do other videos you watch have sound? In that case it probably isn't your speaker it is the microphone!

With this guide simple guide, you can work to replace the DigiLand DL718M microphone for sound clarity.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

Step 1 — Back Panel




- Remove back panel by wedging the iFixit opening tool on all four sides of the device.

Step 2 — Microphone

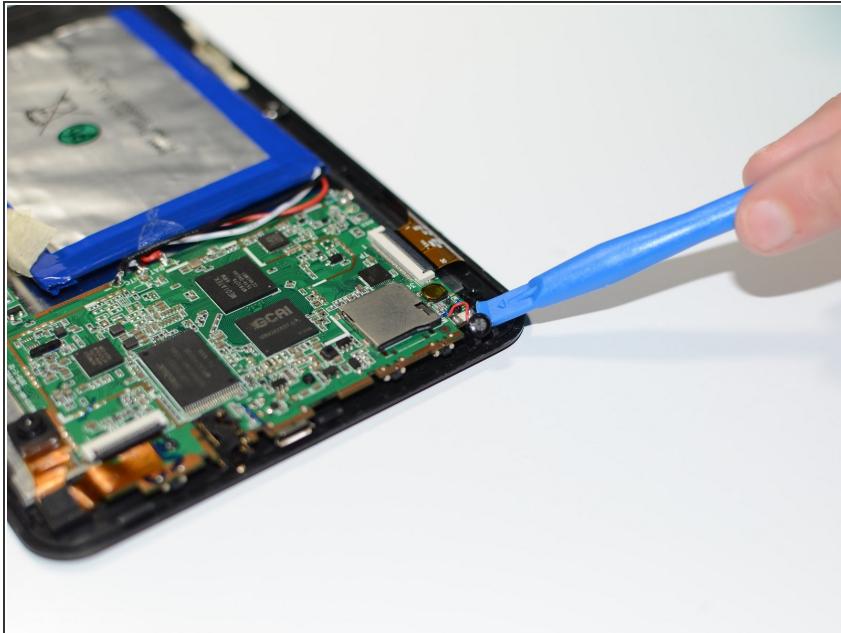

- Slide the small, circular microphone out of its slot in the bottom left corner of the device using an opening tool.

Step 3

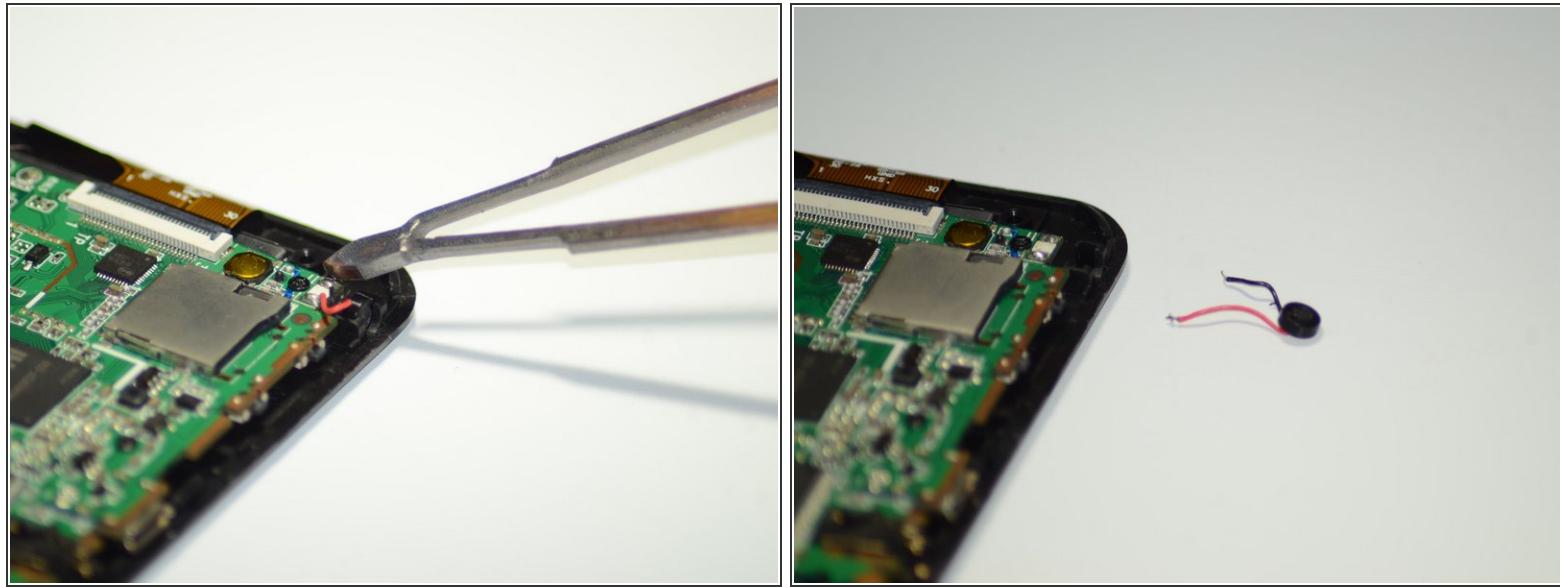

- Desolder the two wired connection (red and black) between the microphone and motherboard from the motherboard.
- Remove the microphone from the tablet.

To reassemble your device, follow these instructions in reverse order.