



DigiLand DL718M Screen Replacement

This guide will help you replace the screen on the DigiLand DL718M tablet device.

Written By: Alayna Knarian



INTRODUCTION

If your DigiLand DL718M tablet has a damaged or unresponsive screen, use this guide to replace the screen of the device.

If you are considering replacing your screen because of unresponsiveness, refer to the [DigiLand DL718M Troubleshooting](#) page to find out what could be causing this problem and if it can be fixed without replacing the screen.

This process requires you to remove the back panel of the device and thus expose the motherboard. Be careful when working with an exposed motherboard as you could damage it, if it comes into contact with moisture. It is motion-sensitive, and small aspects can be easily jostled out of place.

Before you begin, make sure to power the tablet off completely and disconnect it from any external power source.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Back Panel




- Remove back panel by wedging the iFixit opening tool on all four sides of the device.

Step 2 — Screen

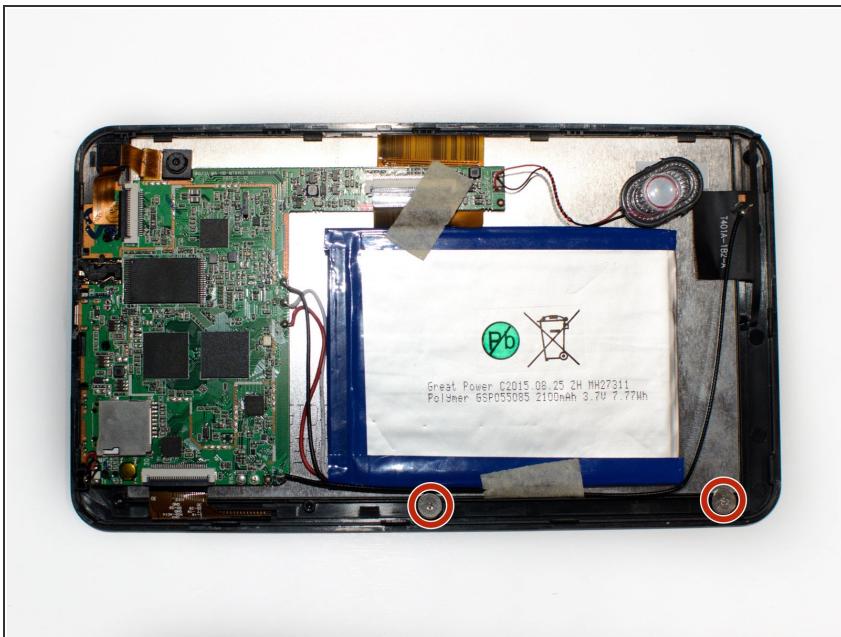


- Remove two silver Phillips #0 screws along the bottom of the internal panel.

Step 3

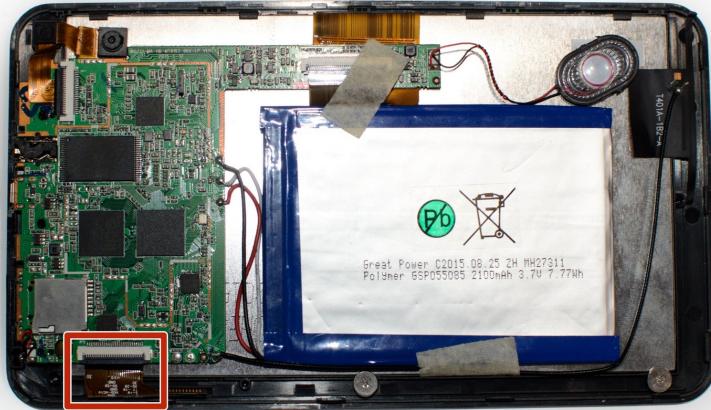


- Remove the ribbon in the bottom left corner of the motherboard by lifting the black tab and sliding the ribbon out from the slot underneath the black tab.

Step 4

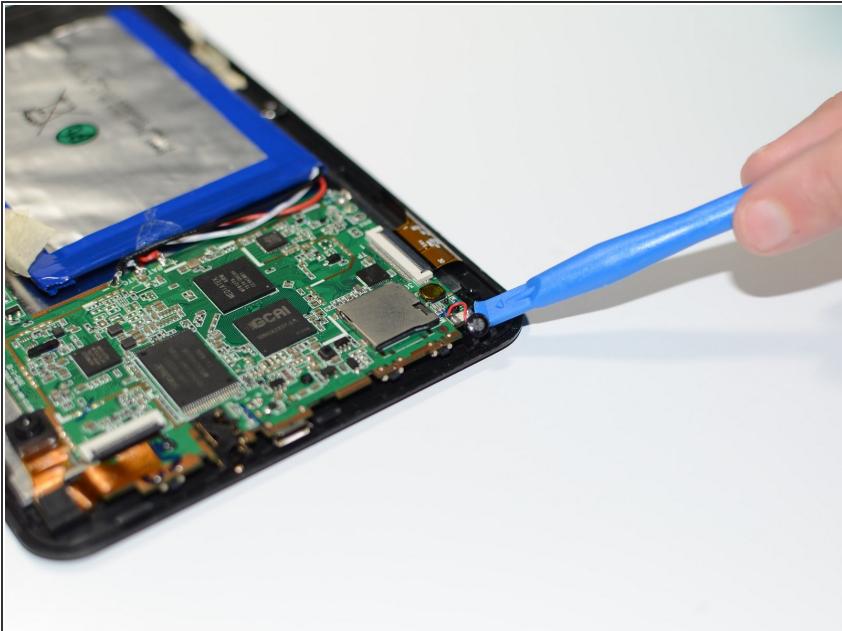


- Remove the small, circular microphone on the left side of the device by sliding it out of its slot using an opening tool.

Step 5

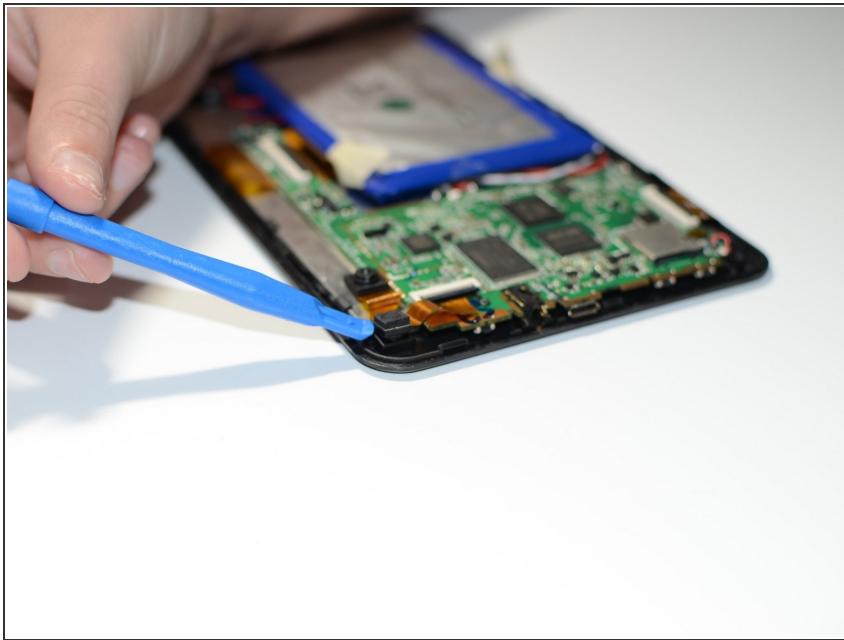


- Remove the front-facing camera in the top left corner of the device by sliding it out of its slot using an opening tool.

Step 6

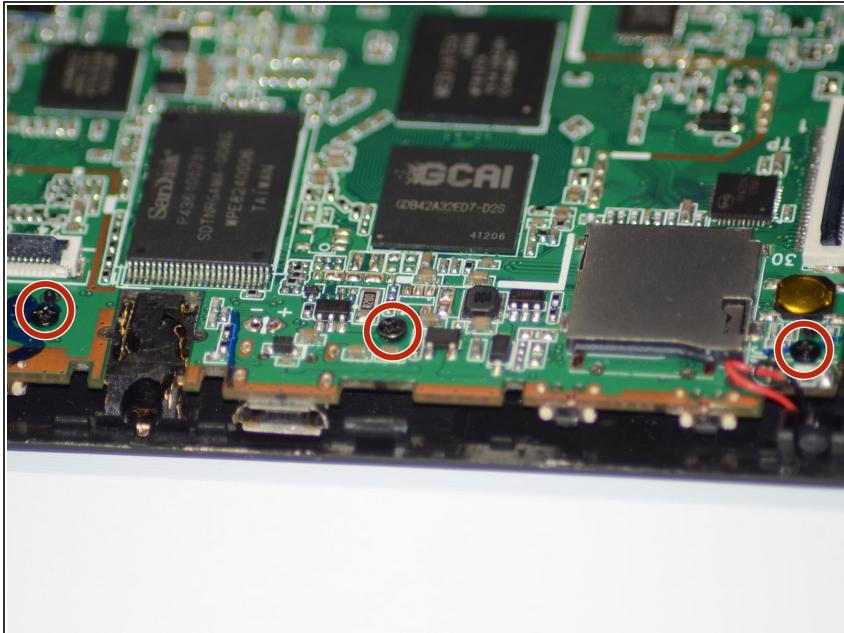


- Remove the three black Phillips #0 screws along the left side of the motherboard.

Step 7

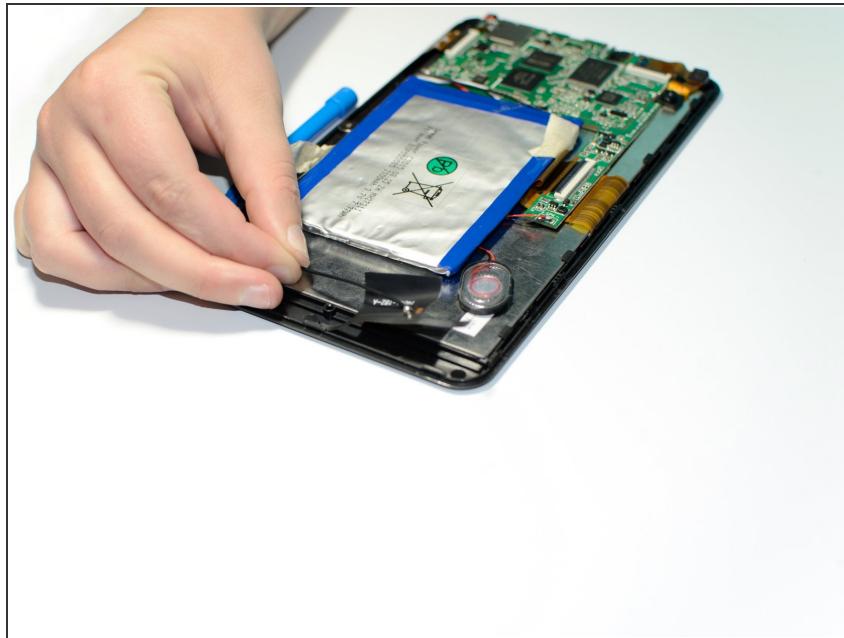

- Detach the black tape and the wire from the right side of the screen.

Step 8

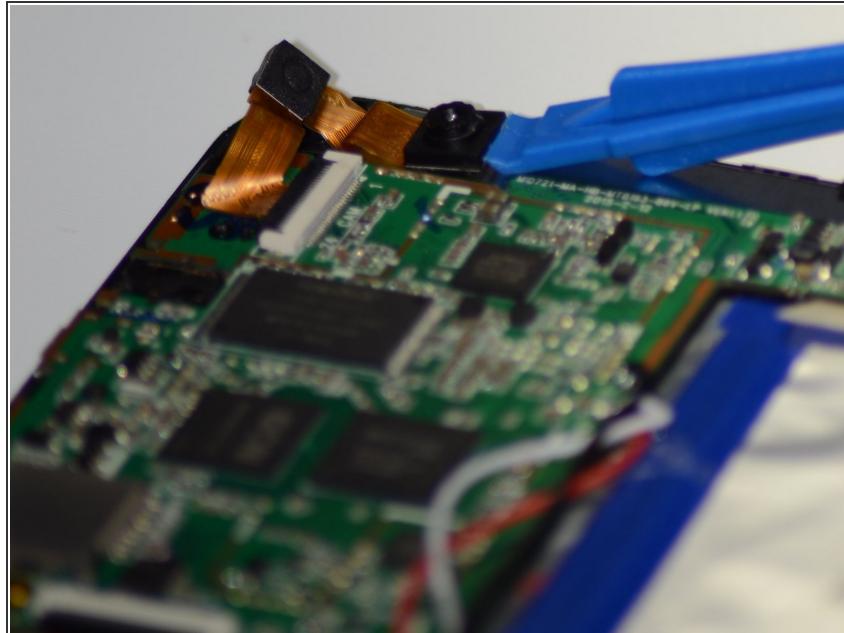

- Remove the rear-facing camera by prying it off of the back side of the screen using the an opening tool.

Step 9



- Lift the motherboard and remove it from the device using an opening tool.

i If there is any tape on the device that prohibits you from doing so, remove the tape.

Step 10




- Remove the ribbon above the battery by lifting the black tab and sliding the ribbon out from the slot underneath the black tab using an opening tool.

Step 11



- Pry the battery off of the back of the screen by wedging the iFixit opening tool underneath.

Step 12

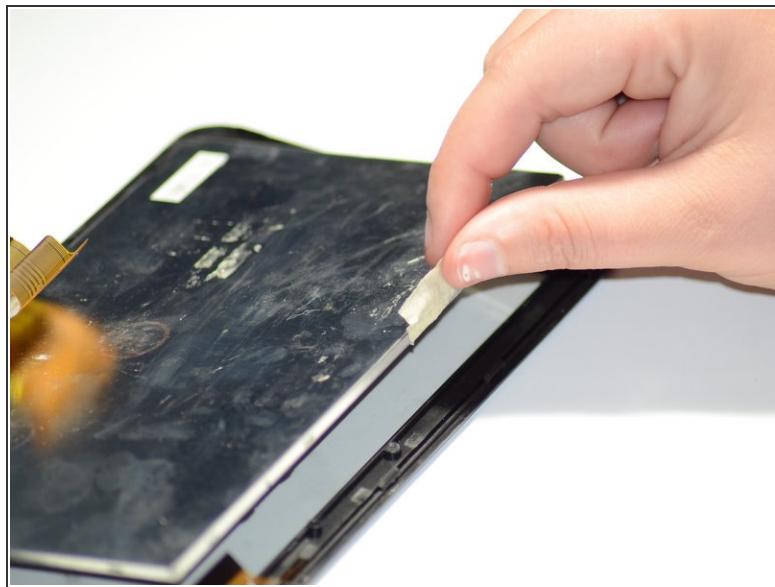

- Lift the screen from the plastic casing.

To reassemble your device, follow these instructions in reverse order.