



Digiland DL1168A Front/Rear Camera Replacement

How to replace a Digiland DL1168A camera.

Written By: Payton Boshears



INTRODUCTION

Here is a guide on how to replace your Digiland DL1168A camera and replace it with a new one.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)
- [Tweezers](#) (1)

Step 1 — Rear Case



- Using an opening tool, begin softly prying open device by first inserting it in between the front and back panels.
- Continue prying the edges while moving around the device's perimeter until the back can be easily removed.


Step 2



- Carefully lift back panel away from the body of the device.

⚠ Be gentle when lifting the back panel. The speaker wires are still connected to both the front and back panel.

Step 3

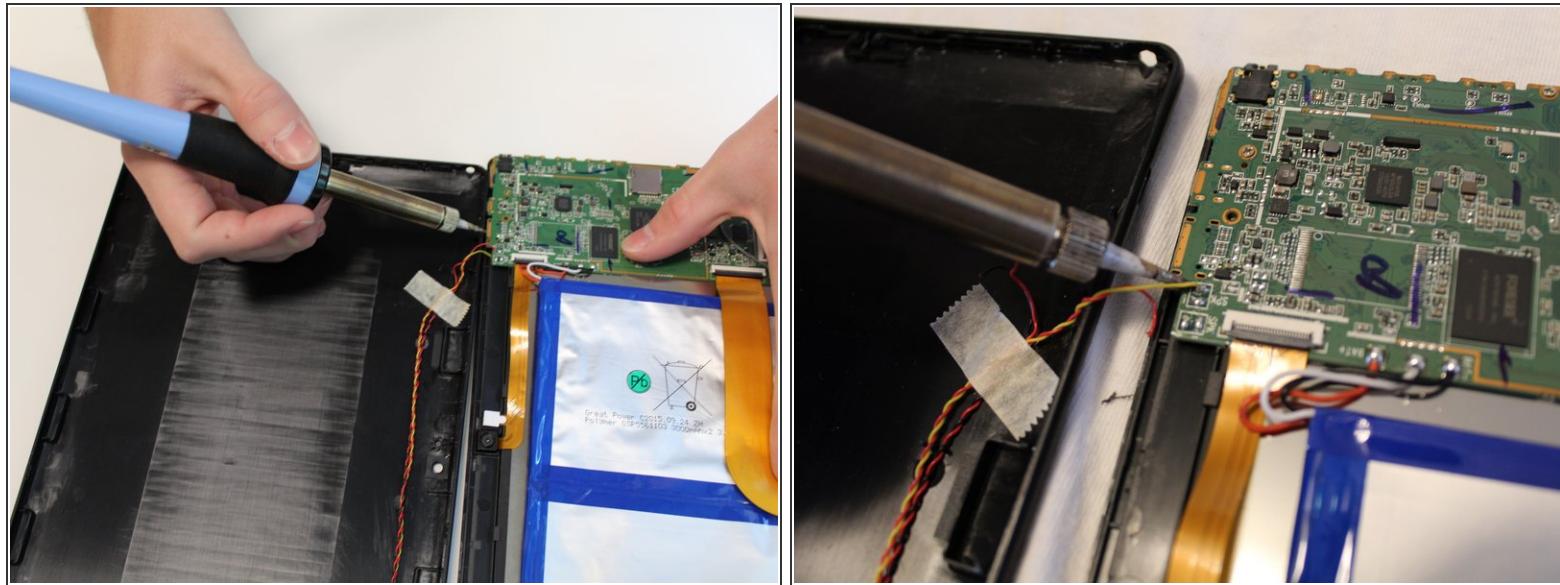


- Desolder the four wires connecting the rear case to the motherboard.
- Disconnect the wires from the motherboard.
- Remove the rear case from the device.

Step 4 — Front/Rear Camera



- Use tweezers to remove the cover that keeps the camera lens in place.


Step 5

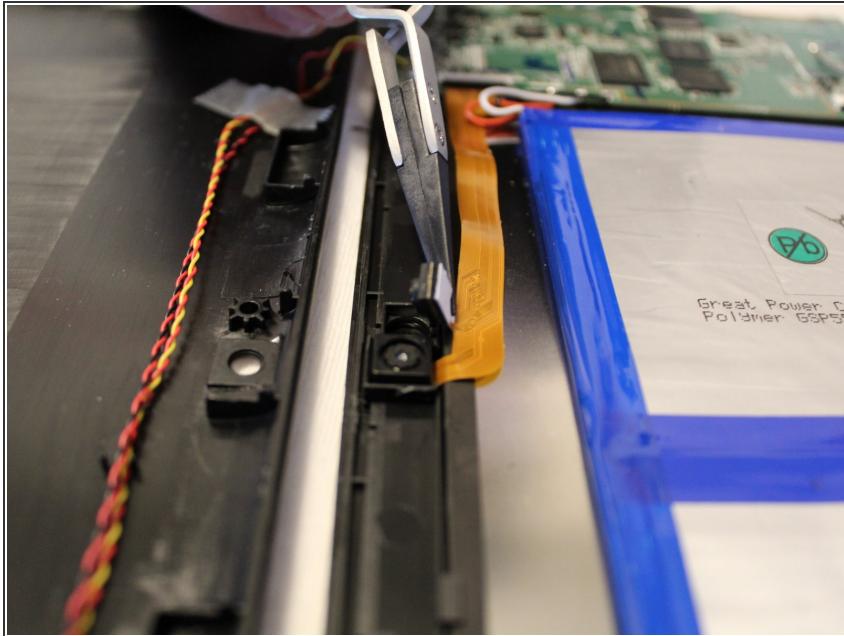

- Use tweezers to gently begin to lift the back piece off.

⚠ Lift gently because the lens is connected to the back piece by a small cord.

Step 6

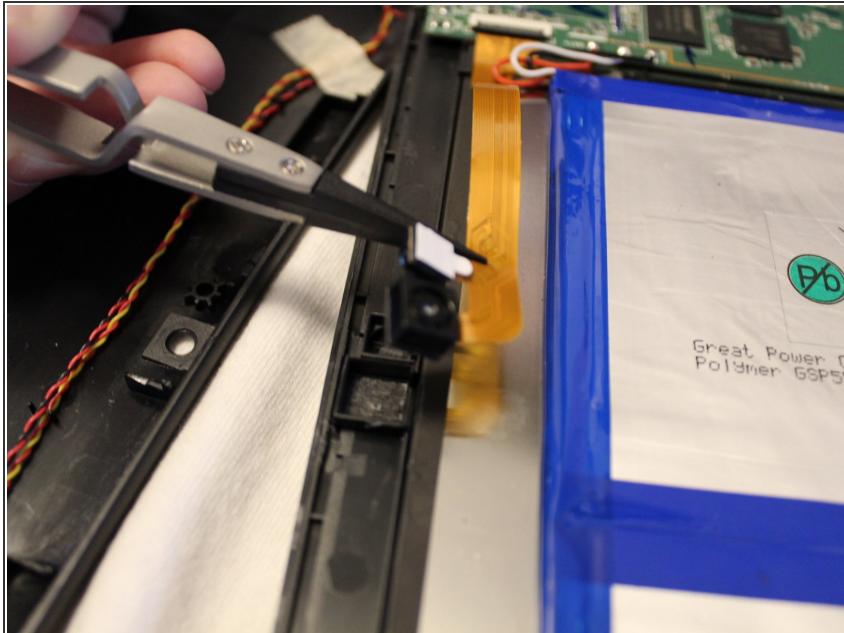

- After lifting gently both the lens and the back piece will be removed.

To reassemble your device, follow these instructions in reverse order.