




# Digitac Jazz Ultratab C725 Volume and Screen Buttons Replacement

Volume control and screen lock buttons replacement for the Digitac Jazz Ultratab C725.

Written By: Seth York

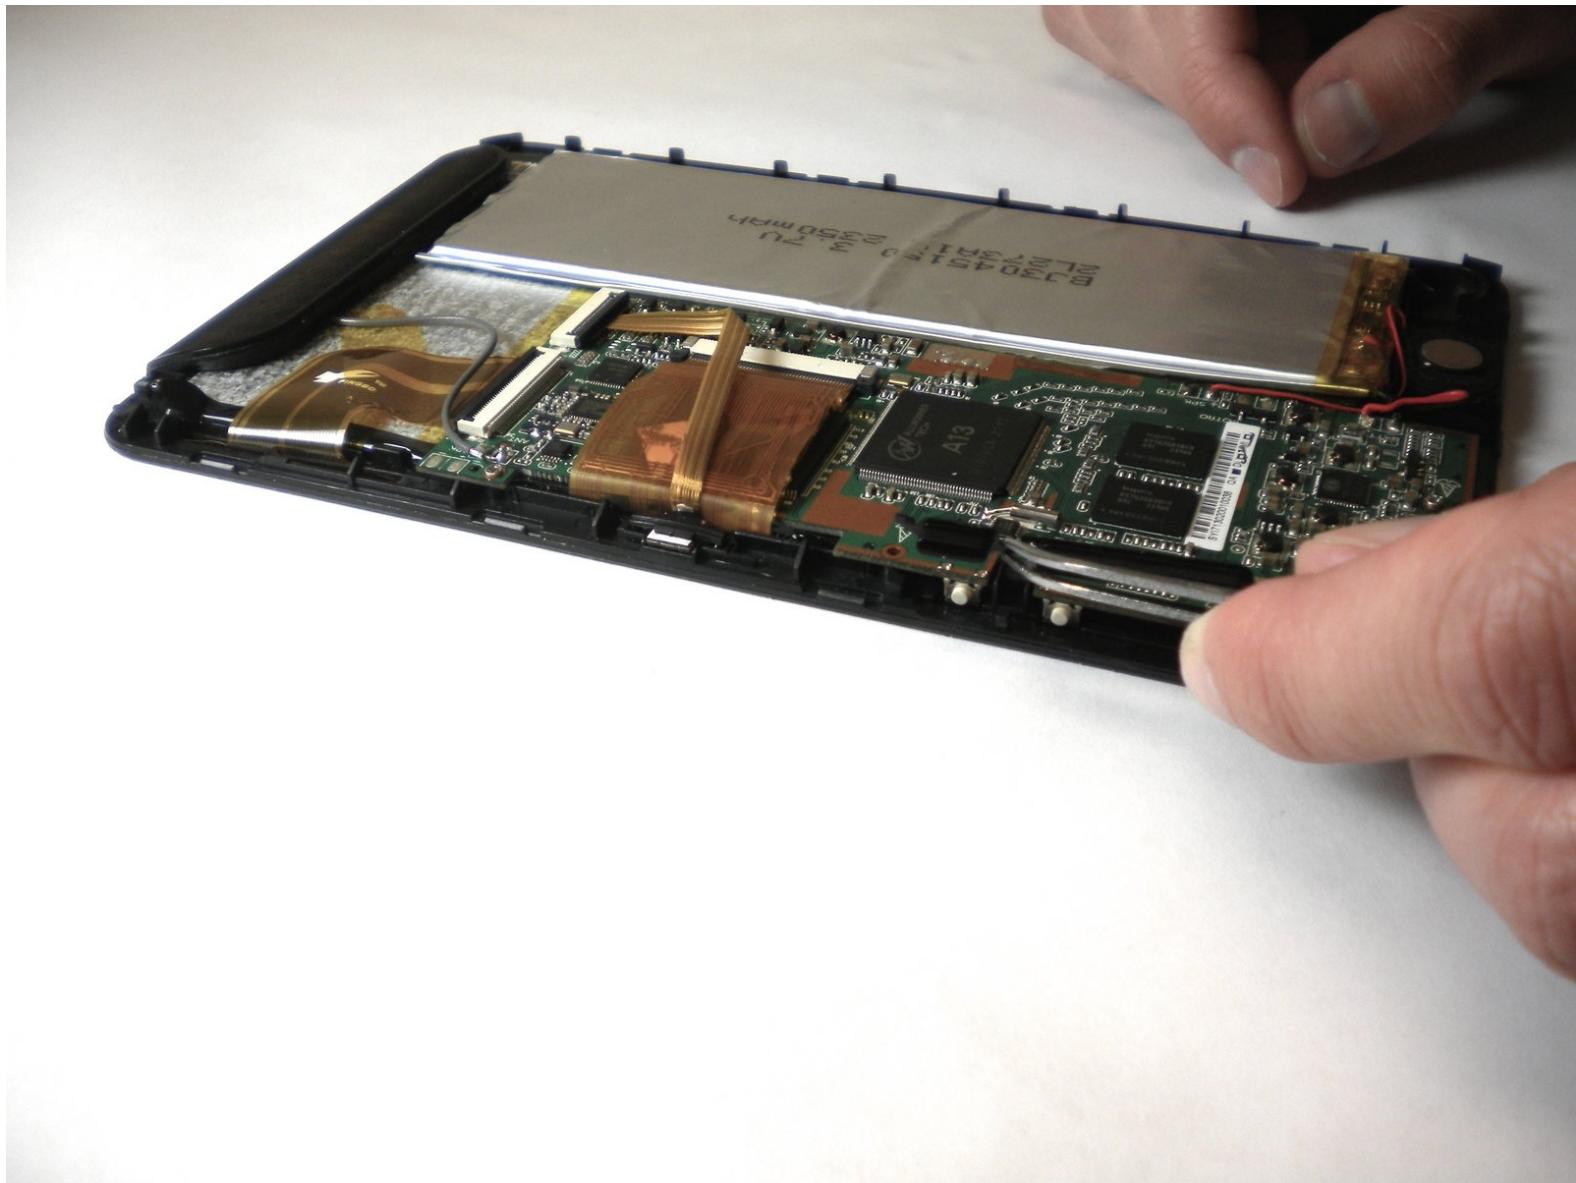


## INTRODUCTION

The following guide will show how to remove the volume control and screen lock buttons from the Digitac Jazz Ultratab C725 for replacement if needed.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

## Step 1 — Volume and Screen Buttons

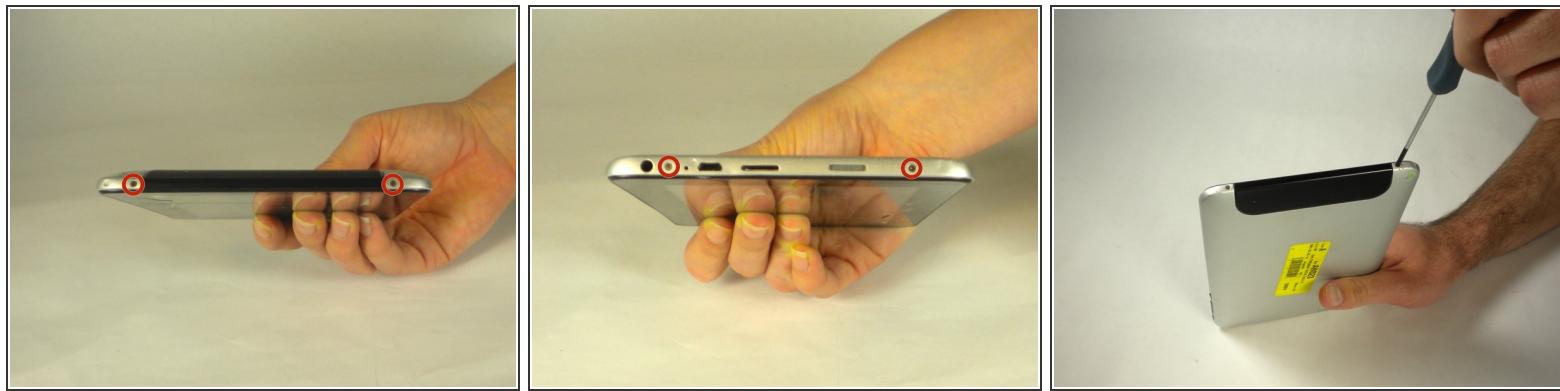

- Locate the four 3.5 mm Phillips head screws holding the silver back plate and the screen together. There are 2 screws on the top and another 2 screws on the bottom.
- Using the Phillips #00 Screwdriver, remove all 4 screws.

**⚠** Remove the screws with the least amount of force possible to avoid any damage to the threads. If thread damage occurs, screw removal will be much more difficult or may even become impossible.


## Step 2



- Flip your device so that the long side without the buttons is facing you.
- Insert the Plastic Opening Tool between the silver back plate and the screen about 1 inch from corner of the device on either side.
- Jimmy the Plastic Opening Tool until the screen unsnaps from the back plate.
- Work your way down the edge of the device, popping out all locations where the screen snaps into the silver back plate.
- Go around the corners with the Plastic Opening Tool and unsnap additional snap-in locations as necessary.

 Once the screen is loose, pull it towards you then lift it off to prevent damage to the buttons on the other side of the device.

## Step 3 — Freeing the buttons

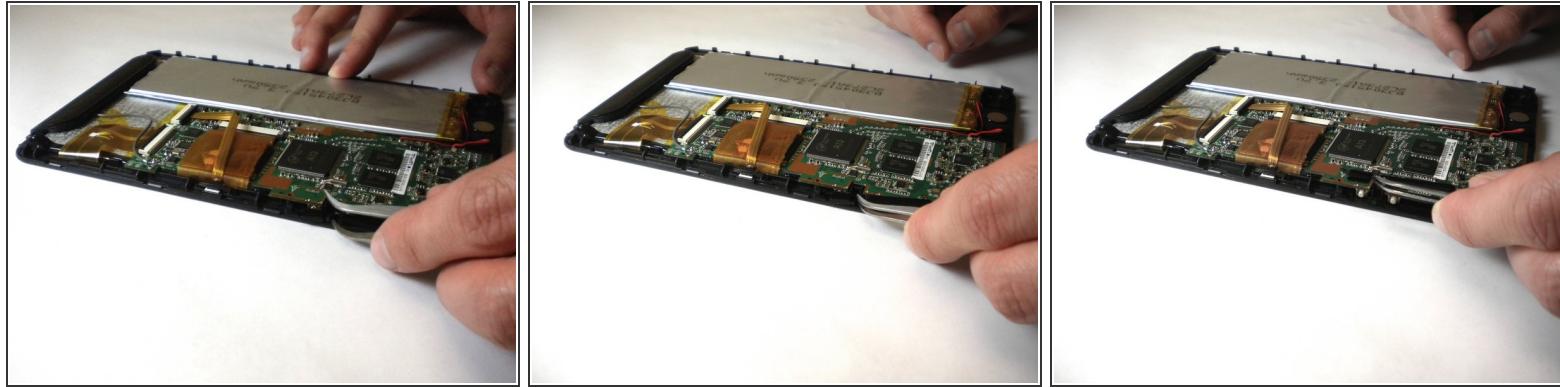

- Using a pair of tweezers poke the the square plastic piece between the buttons that connects them together (There is a plastic piece for each gap between buttons).
  - While poking the square piece in, simultaneously attempt to push it upward to release it.
- After the first one, use the pair of tweezers and do the same the second one. This should free the buttons from the device.
- Once the buttons are free, use the set of tweezers to grab the buttons and pull them out.

To reassemble your device, follow these instructions in reverse order.