



# Disassemble Proctor Silex® 2-Slice Extra Wide Slot Toaster Body

How to disassemble the entire toaster in order to reveal the internal components.

Written By: Carlos



## INTRODUCTION

### Disassembly

1. Flip toaster over.
2. Locate four phillips screws on the bottom of the toaster.
3. Loosen and remove.
4. Sides will pop out once screws are removed.

### TOOLS:


- Pro Tech Toolkit (1)

## Step 1 — Disassemble Proctor Silex® 2-Slice Extra Wide Slot Toaster Body



- 1. Flip toaster over.

## Step 2

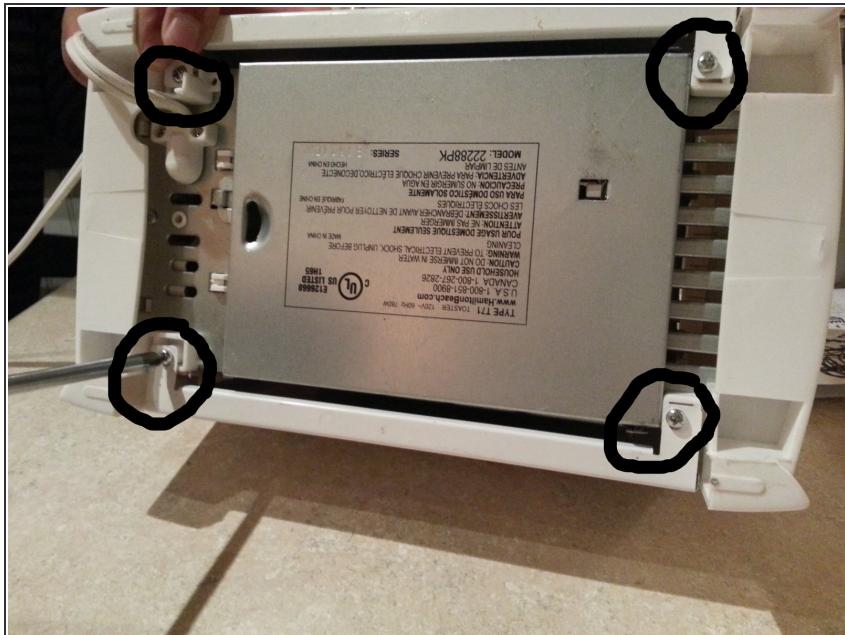

- 2. Locate four phillips screws on the bottom of the toaster.

## Step 3



- 3. Loosen and remove using a Phillips head screwdriver

## Step 4



- 4. Sides will pop out once screws are removed.

To reassemble your device, follow these instructions in reverse order.