



Disassembling 1999 Acura RL Remote A quick break down of the remote.

Written By: Chatosanchez89





TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Disassembling 1999 Acura RL Remote A quick break down of the remote.



- 1999 Acura RL Remote
- Use a nickel to open cover.

Step 2 — Open Remote



- Use a tool like this one to open the remote.
- Take out circuit board. Done.

To reassemble your device, follow these instructions in reverse order.