



# Disassembling APEX TM785CH Back Casing

Prerequisite Only. This guide explains how to remove the tablet's back casing.


Written By: Brian Graschel



 **TOOLS:**

- iFixit Opening Tools (1)

## Step 1 — Back Casing

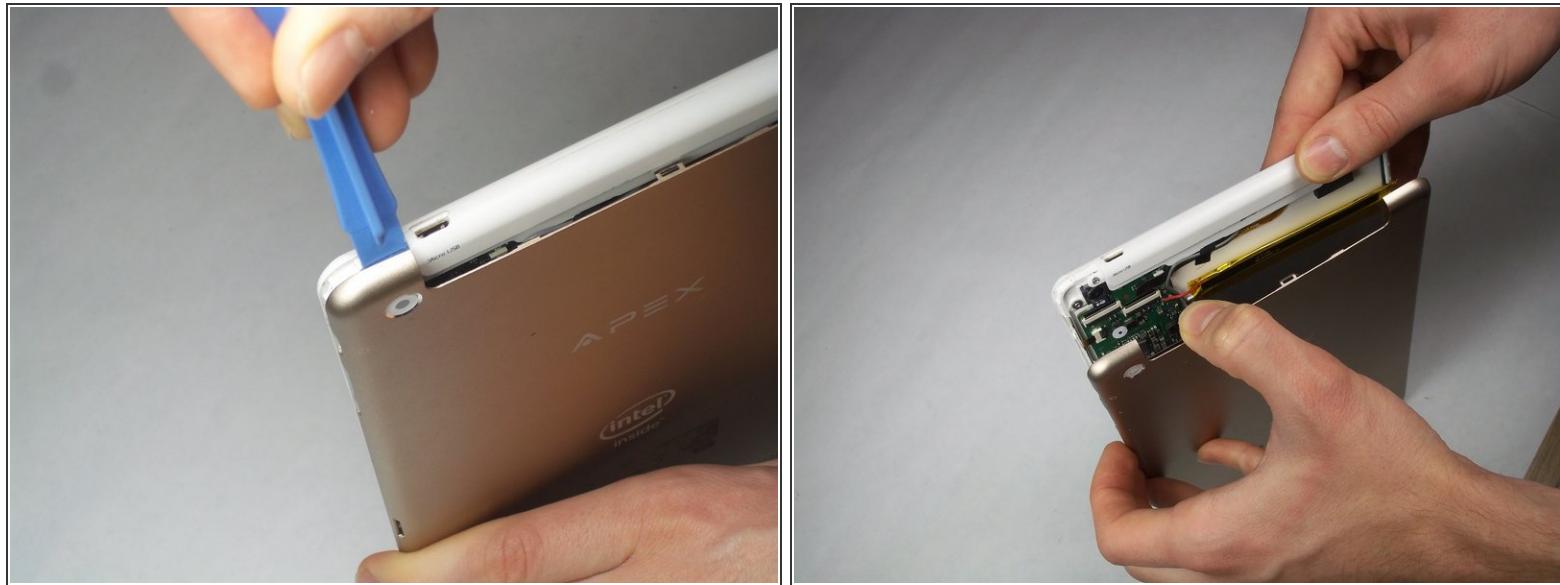

- Start by bending the tablet back at the top white-colored portion to expose an opening between the back cover and the tablet body.
- Wedge a plastic opening tool into the opening and push it down to force the back cover off.
- Move along the top edge of the tablet and repeat the step above.
- Pull the back cover away from the tablet body to completely remove it.

To reassemble your device, follow these instructions in reverse order.