



Disassembling Acer Iconia A1-830 Back Panel

Removing the the back panel of your Acer Iconia A1-830.

Written By: Matt Champagne



INTRODUCTION

Removing the back panel of your tablet gives you access to its inner components. Double check the position of your plastic opening tool before applying force, to make sure it doesn't slip out.

TOOLS:



- [iFixit Opening Tools \(1\)](#)

Step 1 — Disassembling Acer Iconia A1-830 Back Panel



- Prepare your working space. The ideal work space has a flat, level surface that is clean and well lit.
- Shut down your Acer Iconia A1-830.
- Remove any cables or exterior covers from your tablet.
- Place it on your work space, with the screen facing up.

Step 2

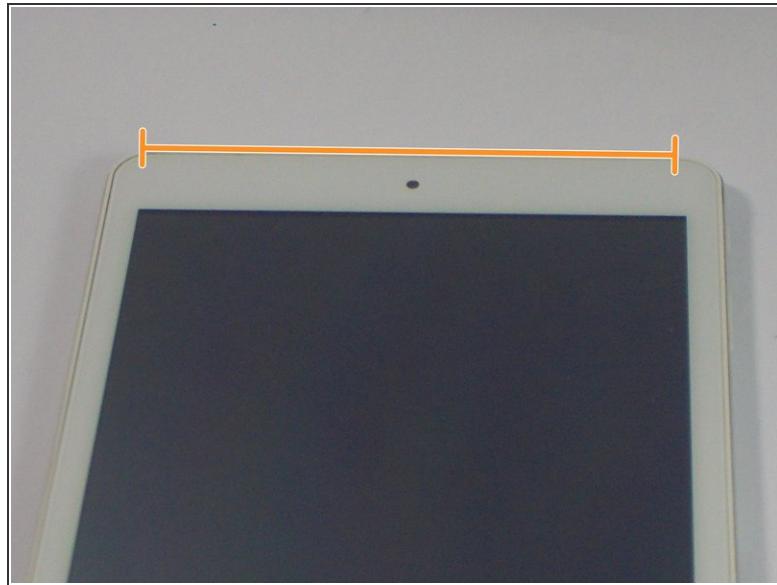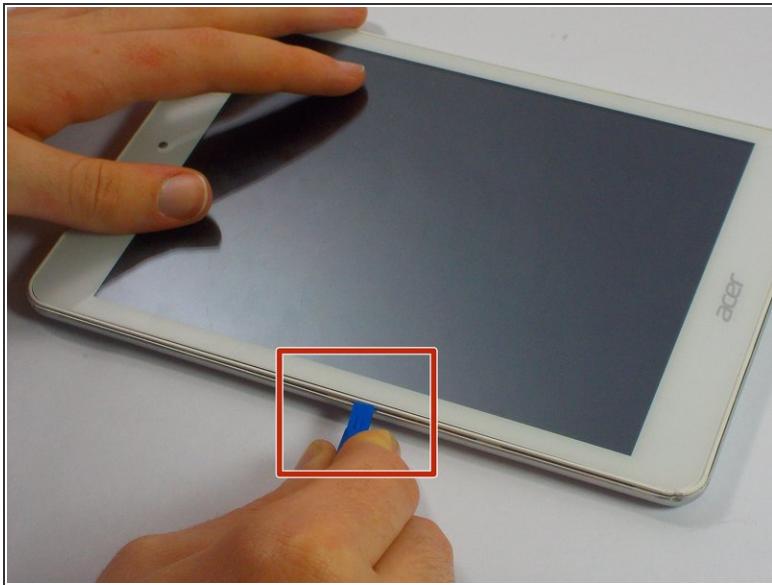

- Wedge the plastic opening tool into the tiny gap between the white plastic front bezel and the aluminum rear panel.
- Do not try to pry apart the top edge on the front side near the front-facing camera.

To reassemble your device, follow these instructions in reverse order.