



# Disassembling Asus Eee PC 1000HE Lower Assembly

How to take apart the lower portion of the laptop containing the motherboard, keyboard, touchpad and peripherals.

Written By: adammw

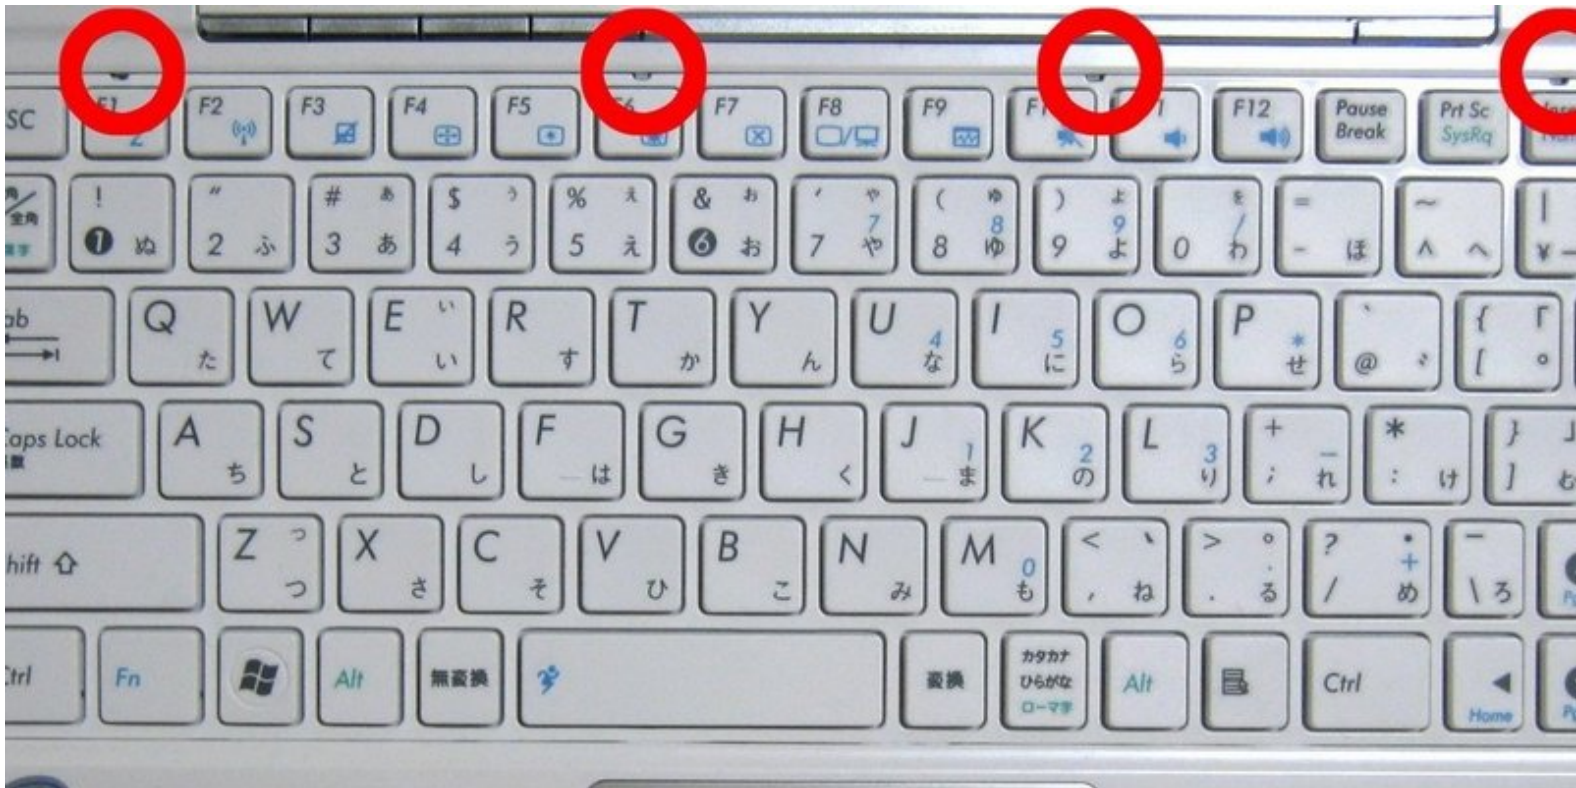


Image source: <http://netbooked.net/blog/how-to-fix-your-asus-eee-pc-1000he-keyboard-flex/>



## PARTS:

- [Double-sided thermal tape](#) (1)
-

## Step 1 — Lower Assembly



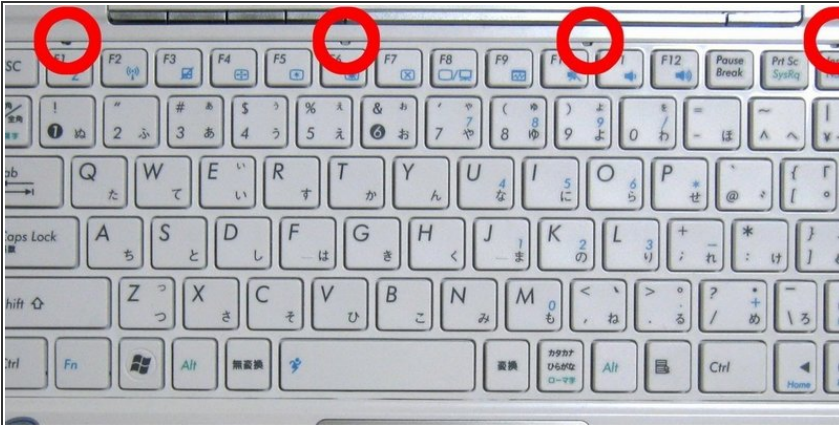


Image source: <http://netbooked.net/blog/how-to-fix-your-asus-eee-pc-1000he-keyboard-flex/>

- Turn off the power and remove the battery before working on your Eee PC
- Start by removing the keyboard
  - There are four latches on the top of the keyboard, use a paper clip or other object to disengage the latches
  - You may have to pull the keyboard up enough with the object - there is no spring mechanism to pop the keyboard out. One trick is after lifting it enough, to slide it (not too much) upward to remove the bottom side.
  - The keyboard assembly has also two plastic retention points on the sides, and some thermal tape sticking the keyboard down.
- ⚠ Caution: the keyboard has a ribbon connector underneath it which must be carefully unplugged before fully removing the keyboard.

## Step 2

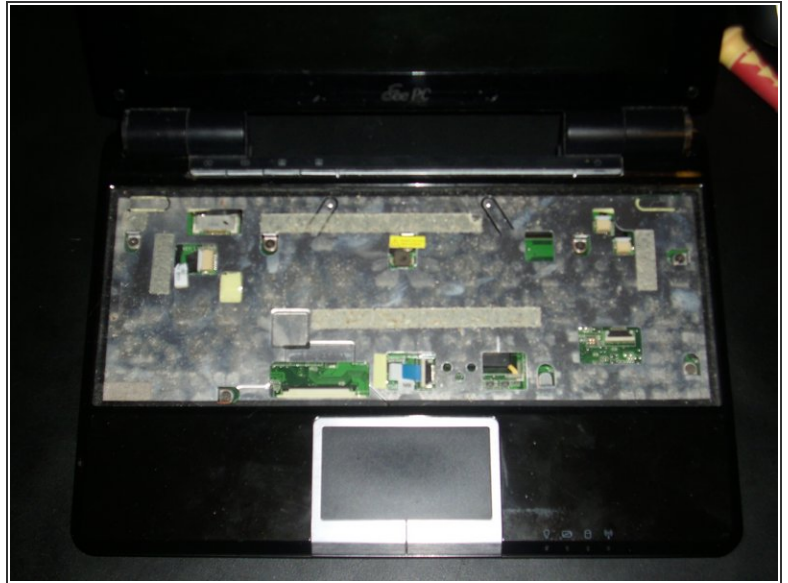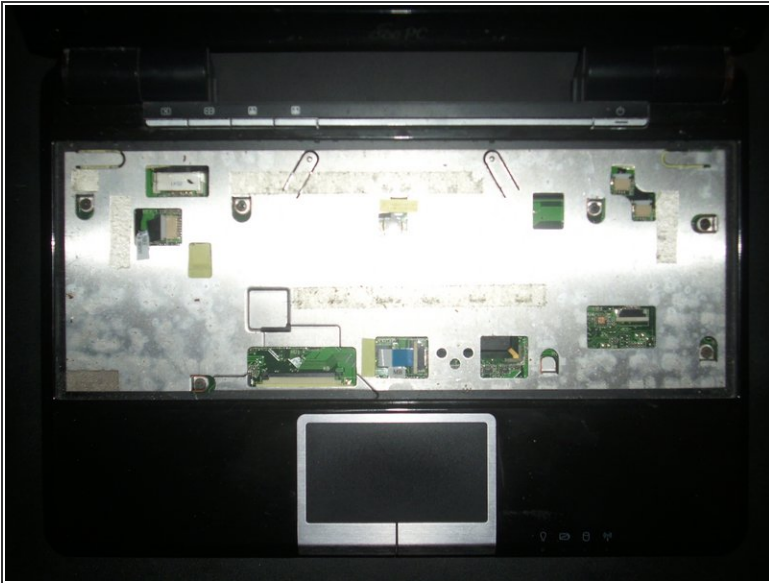

- 7 screws hold the front plate to the motherboard, as well as the ones on the rear of the PC.
- Before taking off the case, you need to disconnect the touchpad and hotkeys cables.

To reassemble your device, follow these instructions in reverse order.