



Disassembling Axis 214 PTZ Camera (English/Slovenščina)

How to disassemble Axis 214 PTZ camera.

Written By: lukahlastec



INTRODUCTION

How to disassemble Axis 214 PTZ camera.



TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — Disassembling Axis 214 PTZ Camera (English/Slovenščina)



- 4 screws

Step 2



- 7 screws

Step 3




- Remove (4) Phillips screws.
- Carefully disconnect the ribbon connector.
- Odklopi konektor.

Step 4




- Remove (4) Phillips screws. 4 screws, težko odšraufati
- If replacing the logic board, remove (2) cables at the connectors. Odključi priključke (označi kateri je kateri !)
- At the underside of the logic board, disconnect the connector. Izključi konektor (na kontektorju so spredaj številke)

Step 5

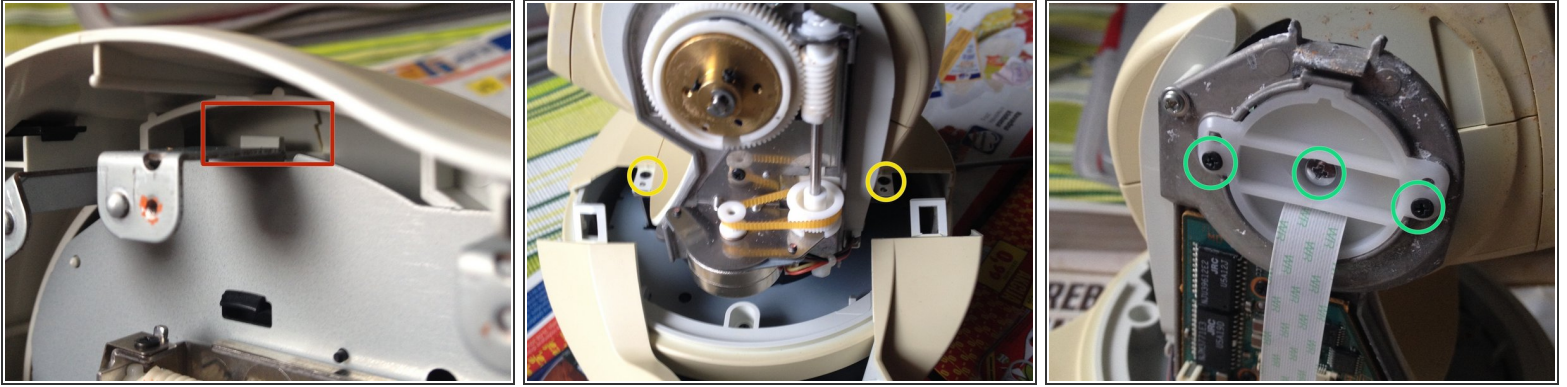

- Gently press back the plastic clip at both sides. Izključi plastični zatič na obeh straneh
- Remove 2 screws. 2 šraufa.
- Remove (3) Phillip screws. 3 šraufi (2+1)

Step 6 — Odključitev heada

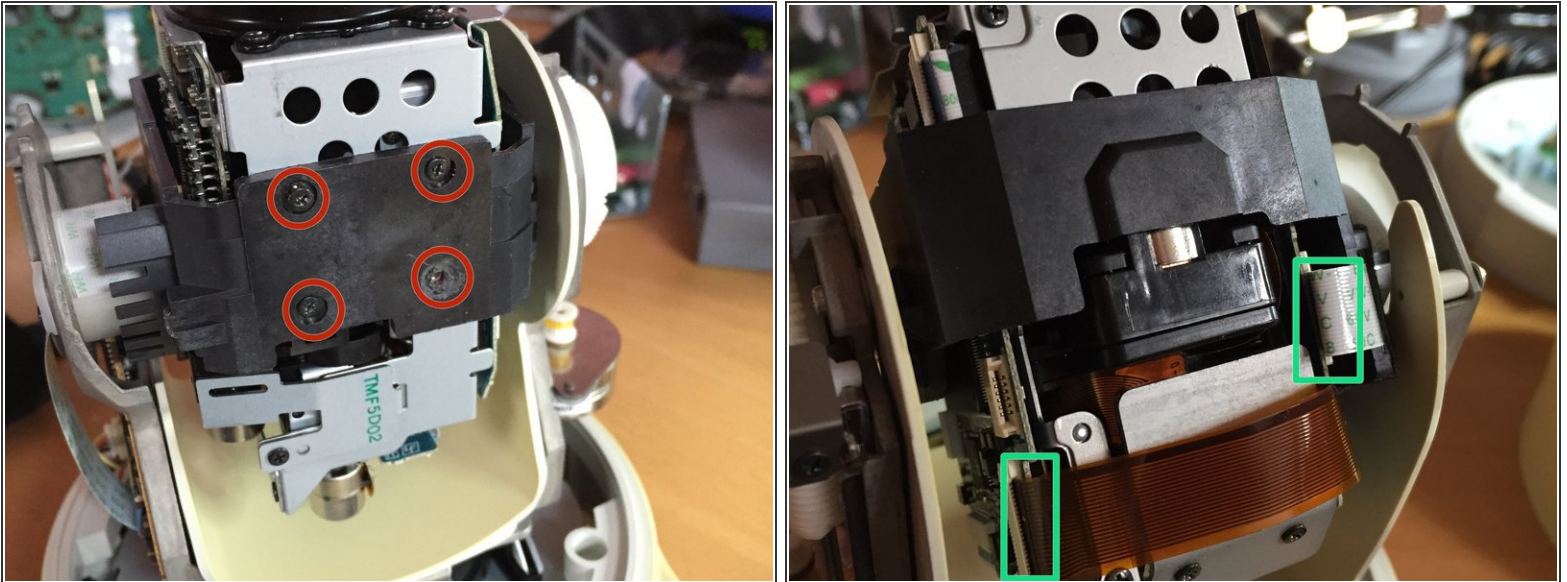



- Remove (4) Phillips screws. 4x vijak.
- Carefully disconnect ribbon and flex cables. 2x flat in odstraniš glavo iz kletke (v bistvu asmo 1 flat!)

Step 7



- Remove (2) Phillip screws. 2 šraufa(samo odtegneš, pustiš notri).
- Remove (1) protective clip. 1 varovalna sponka.

Step 8

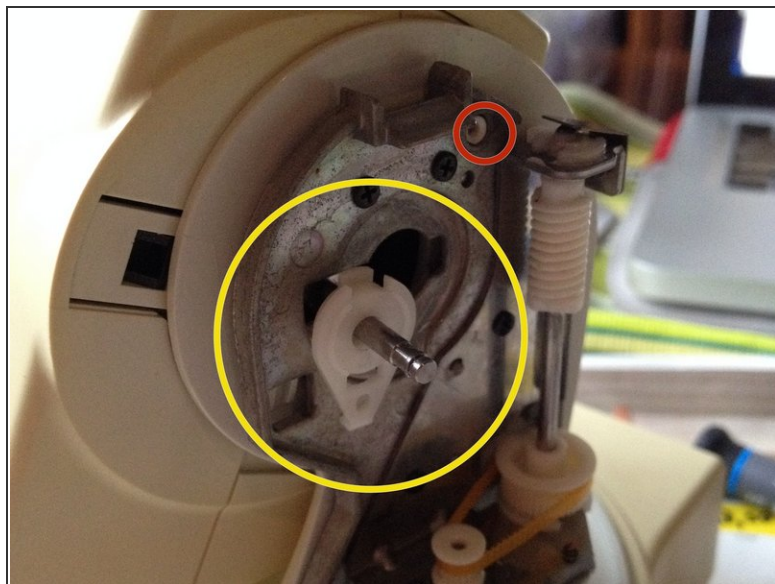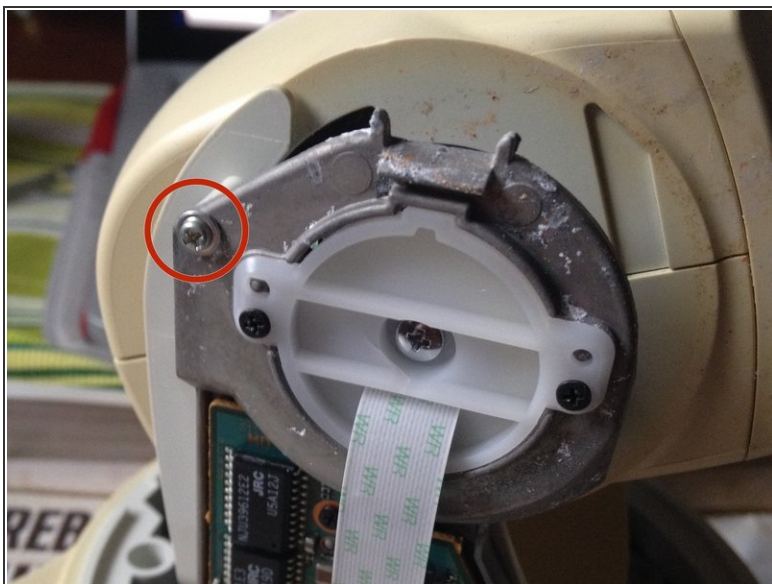



- Remove 2 screws one on each side. 2 šraufa
- Turn the latch mechanism to the right. obrni zatič na desno.

Step 9



- It is difficult to disassemble.
- Težko za razstaviti

Step 10

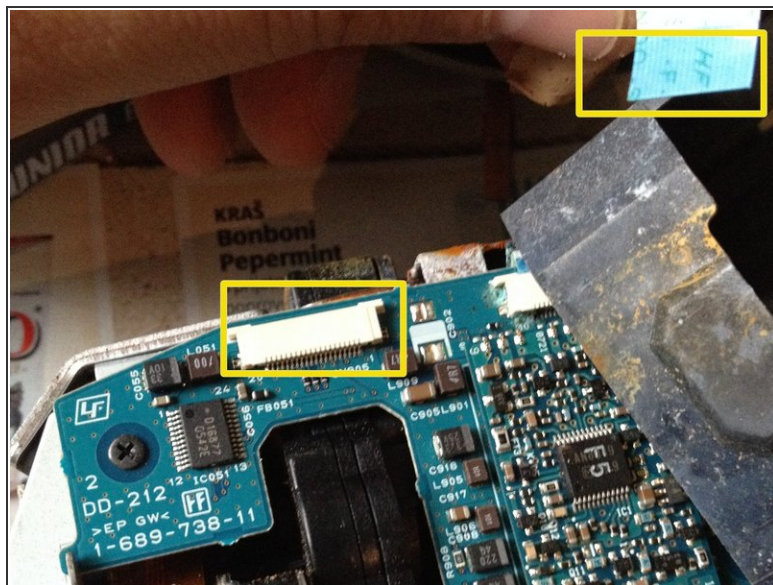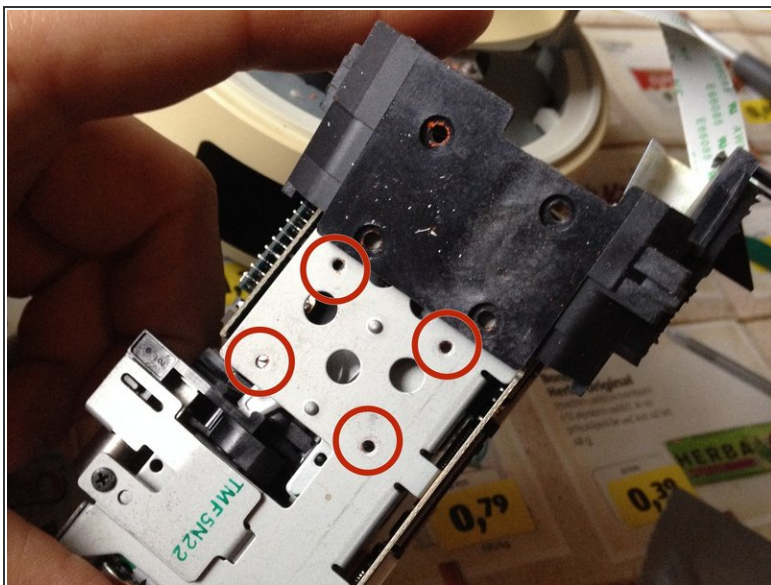

- Remove (4) recessed screws. 4 šraufi, odstraniš plastiko, pazi na flat kabel.
- Disconnect flat Ribbon Cable. Flat kabel.

To reassemble your device, follow these instructions in reverse order.