



Disassembling Canon Pixma MP480 Rear and Side Panel

Disassembling the rear and side panels of the Canon Pixma MP480 allows access to the printer's components.

Written By: Kevin Cole



INTRODUCTION

This guide will show you how to disassemble the back and side panel of the printer.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Rear and Side Panel



- Remove the following two Phillips screws:
 - Two 7.85 mm Phillips #1 screws

Step 2



- Pull the back cover off by lifting up on the cover.
 - You may need to pull firmly as it requires quite a bit of force.

Step 3



- Open the front tray.

Step 4



- Lift the scanner compartment.

Step 5



- After opening up the scanner compartment, make sure the blue lever locks into place, keeping the compartment open.

Step 6



- Push the blue lever back while twisting it clockwise in order to remove the lever from its slot.
- After removing the lever, close the scanner compartment and the scanner cover.

Step 7



- Use the plastic opening tool to pry open the side cover.

Step 8



- Flip the printer so that you are facing the underside.
- Use the plastic opening tool to remove the corner of the side panel from the pin.
 - Plastic pin.

Step 9



- Using the plastic opening tool, remove the side panel by loosening it from the bottom of the printer.

To reassemble your device, follow these instructions in reverse order.