



# Disassembling Canon PowerShot SD800 IS

## Front Cover

Remove the front cover.

Written By: Jeremy Rabaino



## INTRODUCTION

Removing the front cover allows access to the flash assembly.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Cover



- Remove one 2.25mm screw on the bottom.

## Step 2



- Remove two 2.25mm screws on the right side looking from the front.

## Step 3



- Remove one 4.7mm screw on the side with the AV output.


## Step 4



- Pull off the back cover.


**i** The back cover tends to stick in the top corner (near the mode dial) due to a metal clip. Jiggle the cover side to side as you pull it out.

## Step 5 — Front Cover

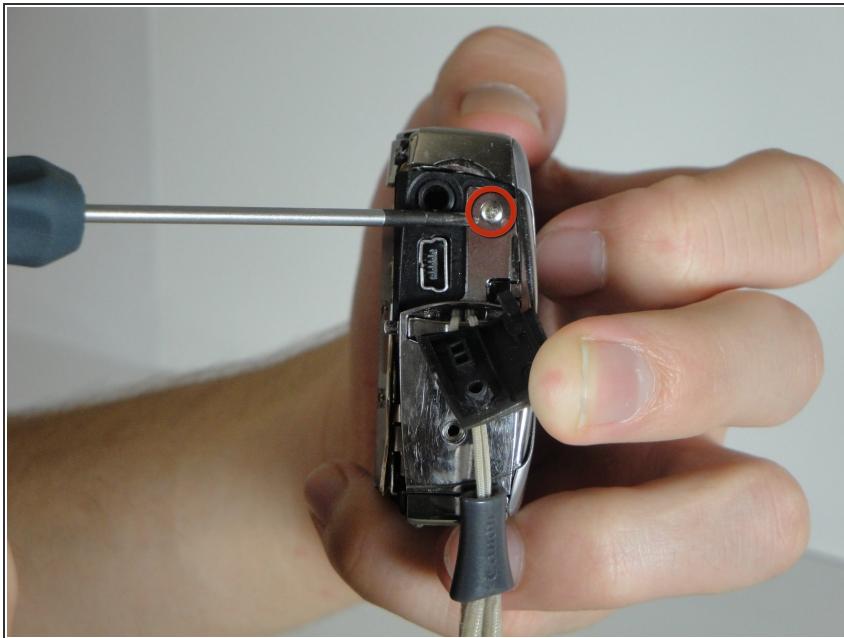

- Remove the 3.9mm screw in the AV housing on the left side from the front of the camera.

## Step 6

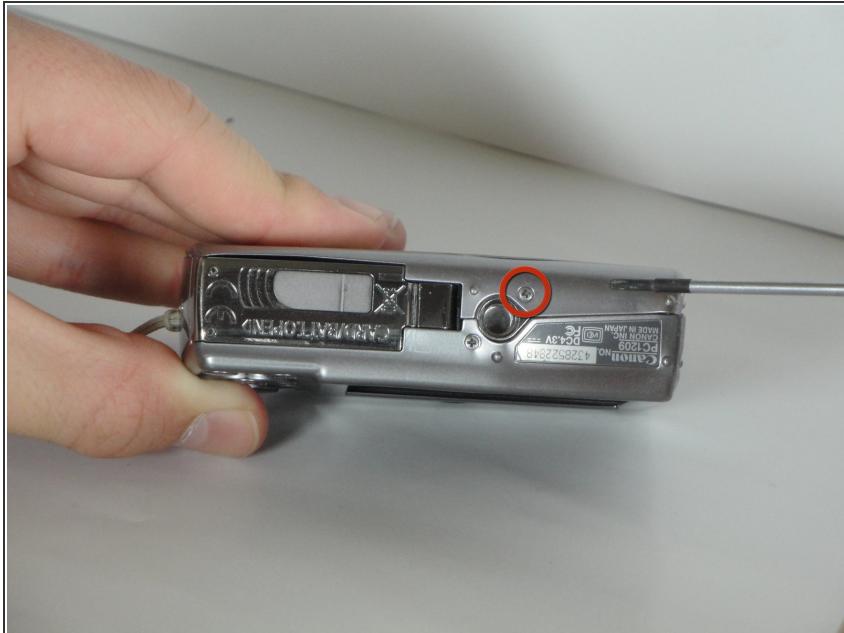

- Remove one 2.25mm screw on the bottom of the camera.

## Step 7



- Pull off the front cover.

To reassemble your device, follow these instructions in reverse order.