



Disassembling Canon PowerShot SD850 IS Case Removal

Written By: Peter Tran



INTRODUCTION

How to remove the outer casing of your Canon PowerShot SD850 IS.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Using your fingernail, slide the light gray tab towards edge of camera.
- Slide the light gray door and pull up to open the door.
- *(i)* In the camera shown in the photos, there is not a Memory Card or Battery.
- Both Battery and Memory Card slots should be visible.


Step 2

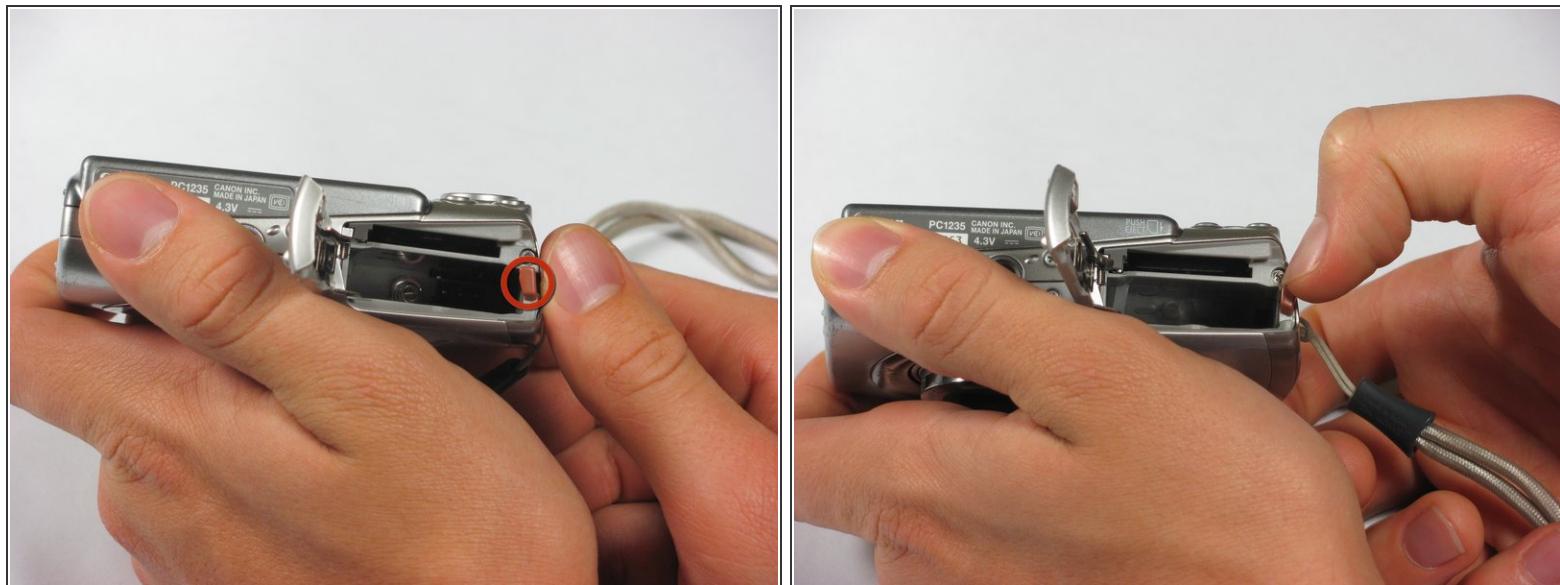

- Use your fingernail and slide the small brown tab towards the edge of the camera.
- The battery will pop up.
- Pull battery straight out of battery holder.

 When putting the battery back in, make sure it the battery is oriented so the terminals connect.

Step 3 — Case

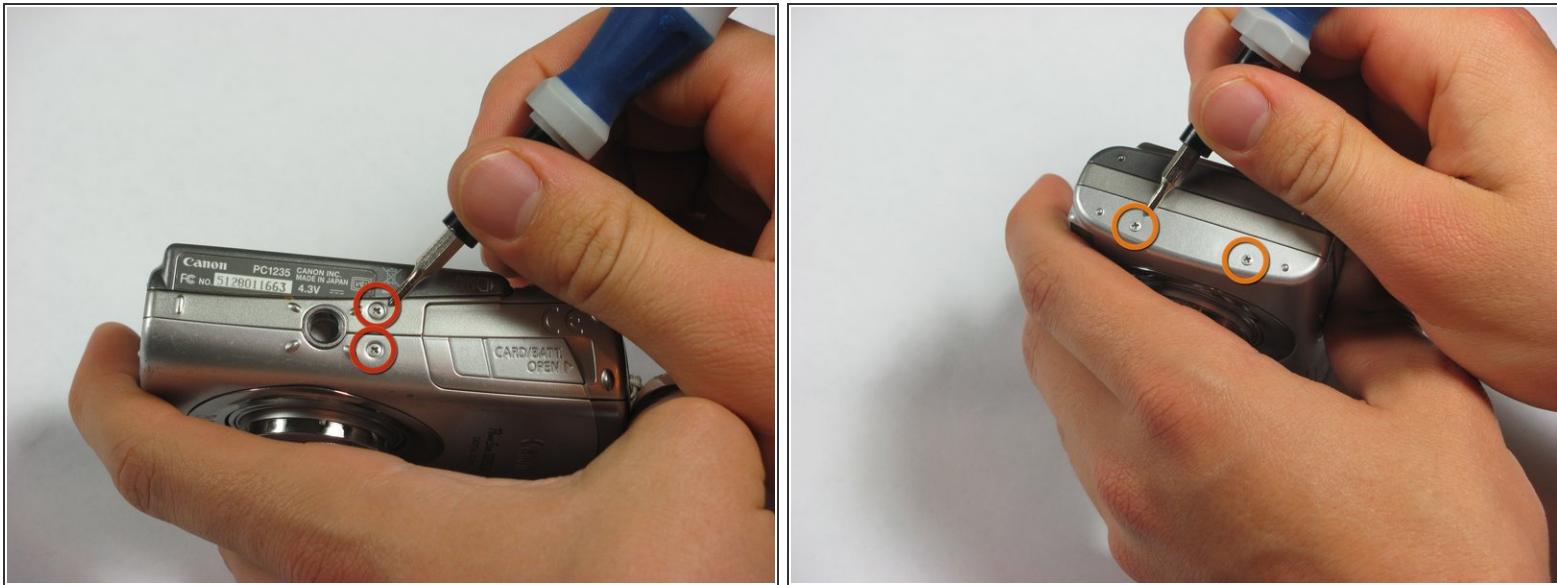

- Remove the following 4 screws:
 - Two 2.8 mm Phillips #00 at the bottom of the camera.
 - Two 2.75 mm Phillips #00 on the opposite side of the wrist strap.

Step 4




- Open the A/V OUT DIGITAL flap on the side of the wrist strap.
- Remove the 2.75 mm Phillips #00 under the A/V OUT DIGITAL flap on the side of the wrist strap.

Step 5




- On the bottom of the camera, use your fingernail to slide the light gray tab towards the edge of the camera.
- Slide light gray door and pull up to open the door.
- Remove the 8.35 mm Phillips #00 next to the brown tab that holds the battery.

Step 6

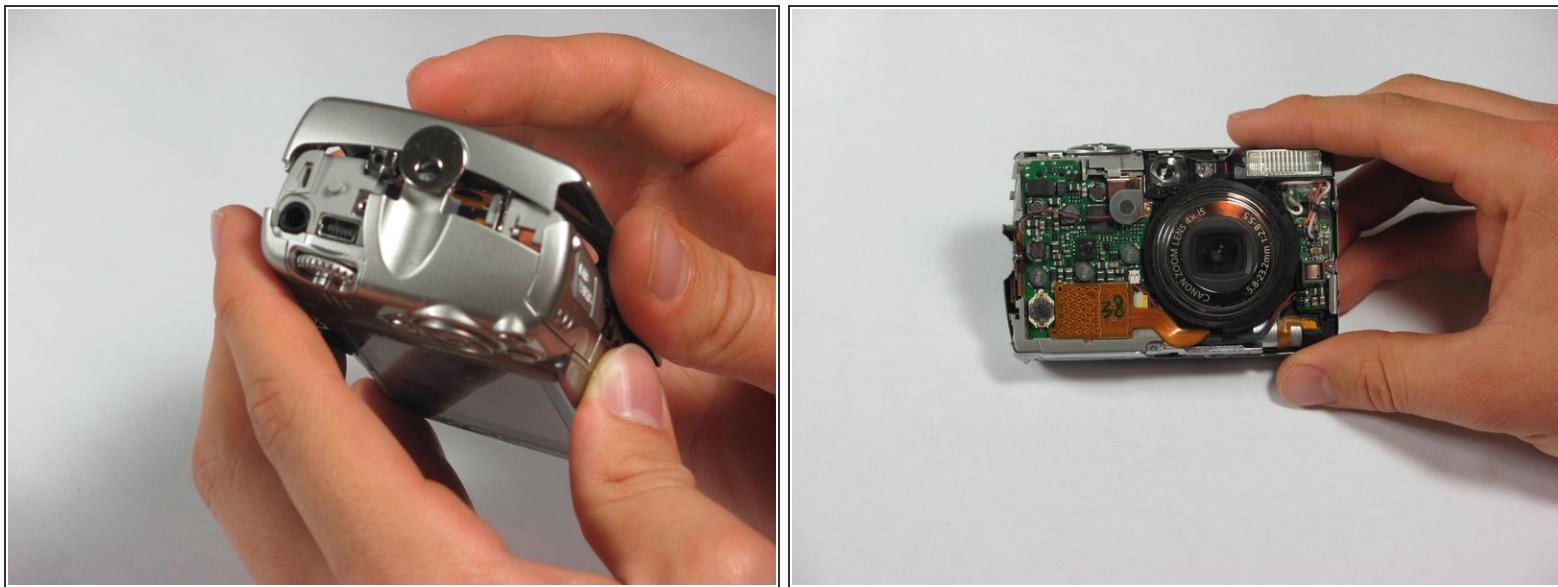


- Gently pull the front cover straight out from the camera. This will expose the wiring on the front of the camera.

Step 7

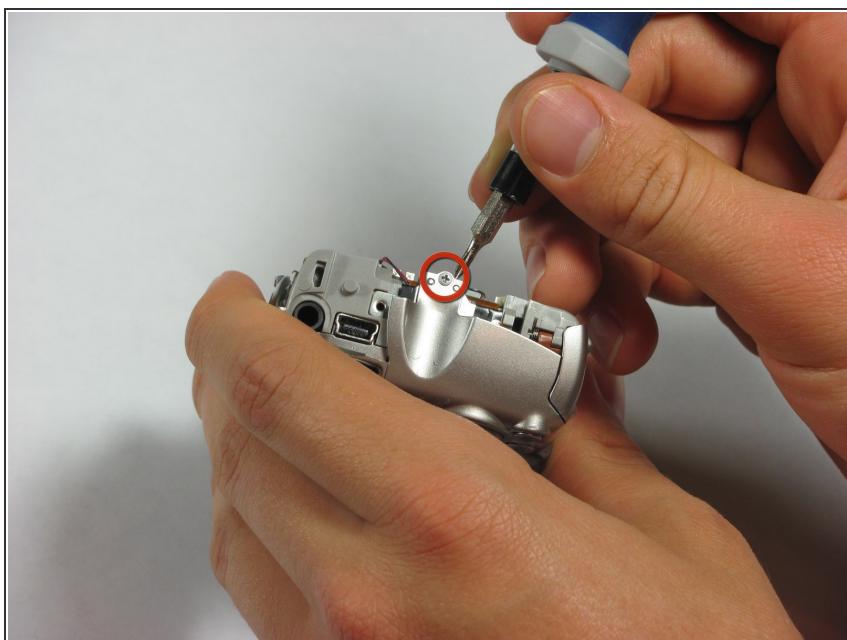

- Remove the 2.75 mm Phillips #00 next to A/V OUT DIGITAL.

Step 8

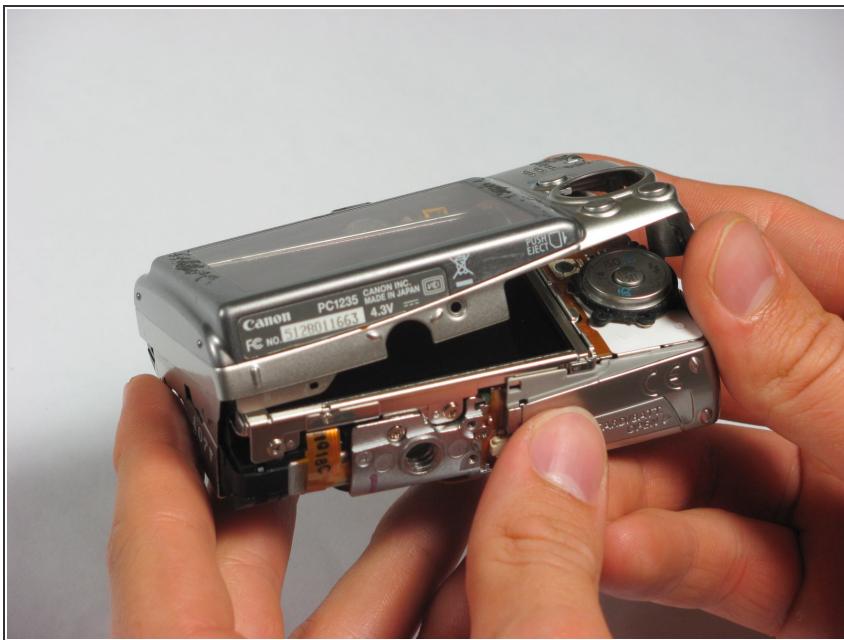

- Slide the back casing (with the screen protector) off to reveal the LCD and back wiring.

To reassemble your device, follow these instructions in reverse order.