




Disassembling Canon Powershot SD880 Flash

How to remove the flash device.

Written By: Robert Manno

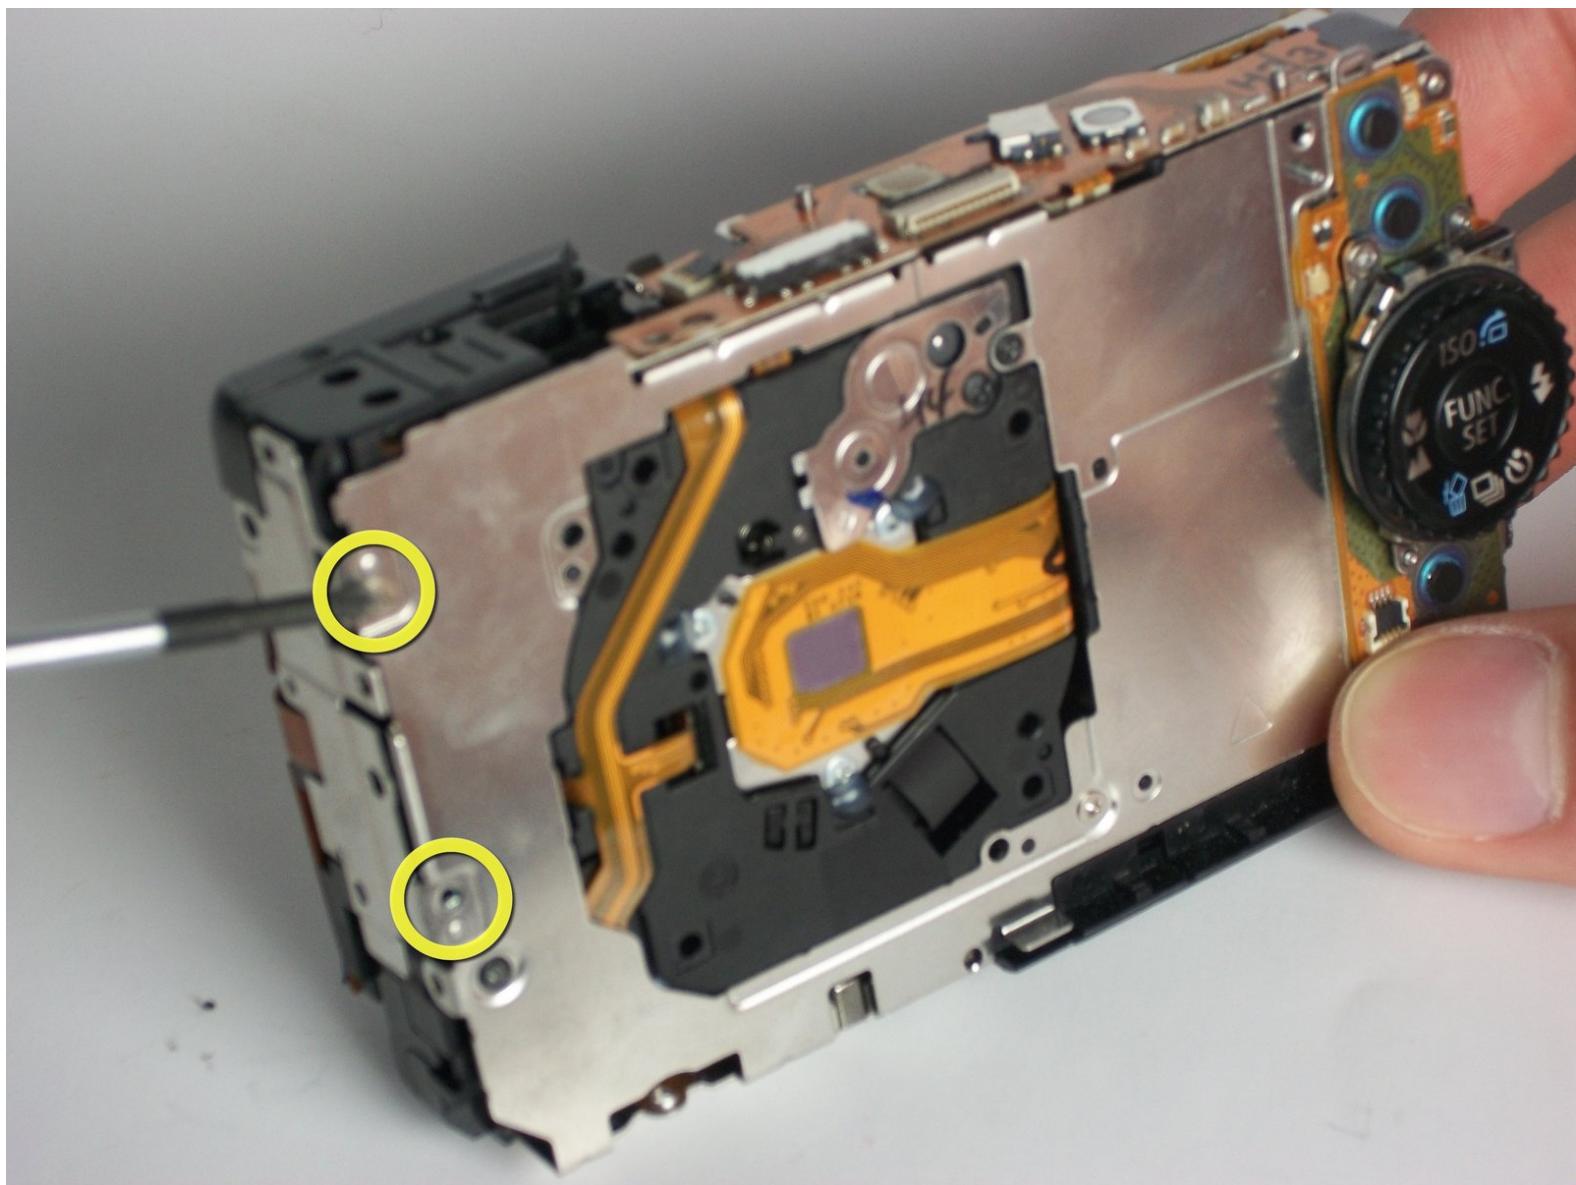

INTRODUCTION

The flash device has a few delicate connections and should be handled with care.

TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Tweezers** (1)

Step 1 — Back Cover Removal




- Remove the 2 screws (2.41 mm long) on the side of the camera next to the LCD screen.
- Remove the 2 screws (4.08 mm) on the other side. One is located under the rubber USB flap.
- Remove the last screw (2.59 mm) located on the bottom of the camera.
- Slowly pull the back cover of the camera.

Step 2 — Front Cover Removal



- Remove the screw (2.59 mm) from the bottom of the camera.
- Remove the screw (4.08 mm) from the menu button side of the camera.
- Note: the 2 screws on the other side of the camera were already removed when taking off the back cover.

Step 3 — Top Panel

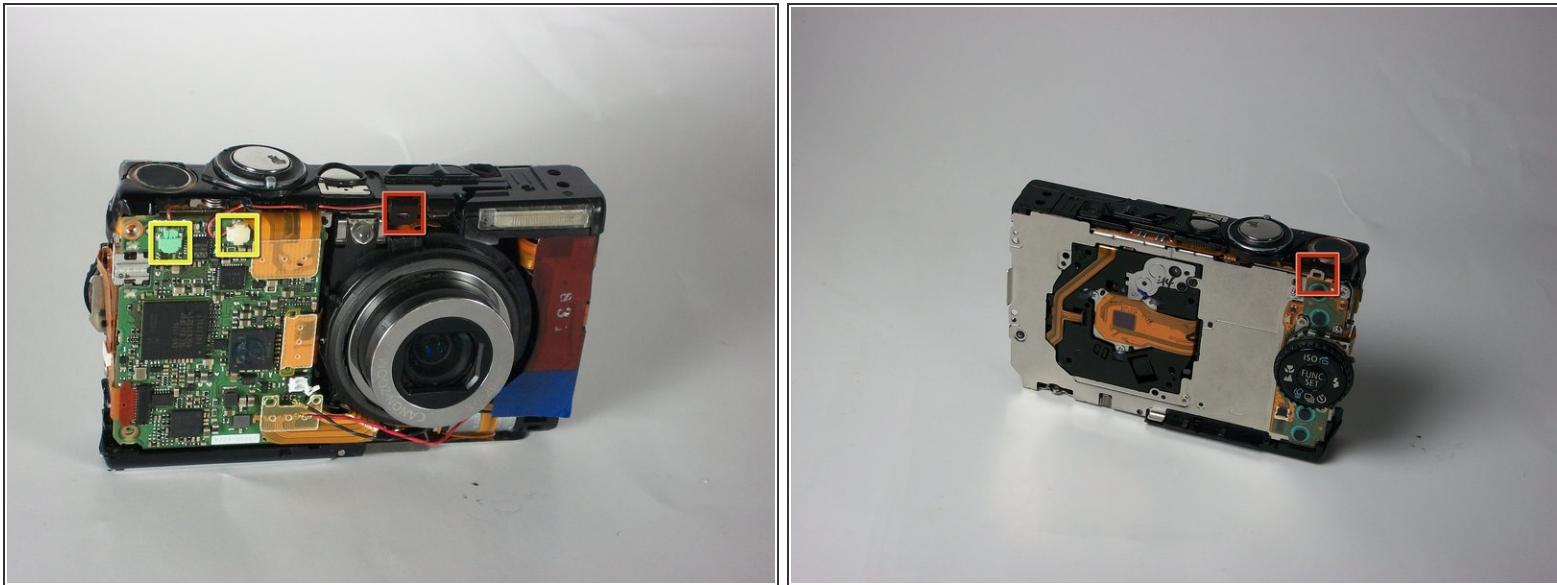


- Unplug the green and white plugs connecting the top panel to the top of the logic board.
- Dislodge the tab above the lens.
- Dislodge the back tab.

Step 4 — LCD Display



- Remove the screws (2.88 mm) at the top right corner and bottom left corner of the LCD screen.
- Disconnect the ribbons connecting the screen to the camera.
- Lift off the screen.

Step 5 — Disassembling Canon Powershot SD880 Flash

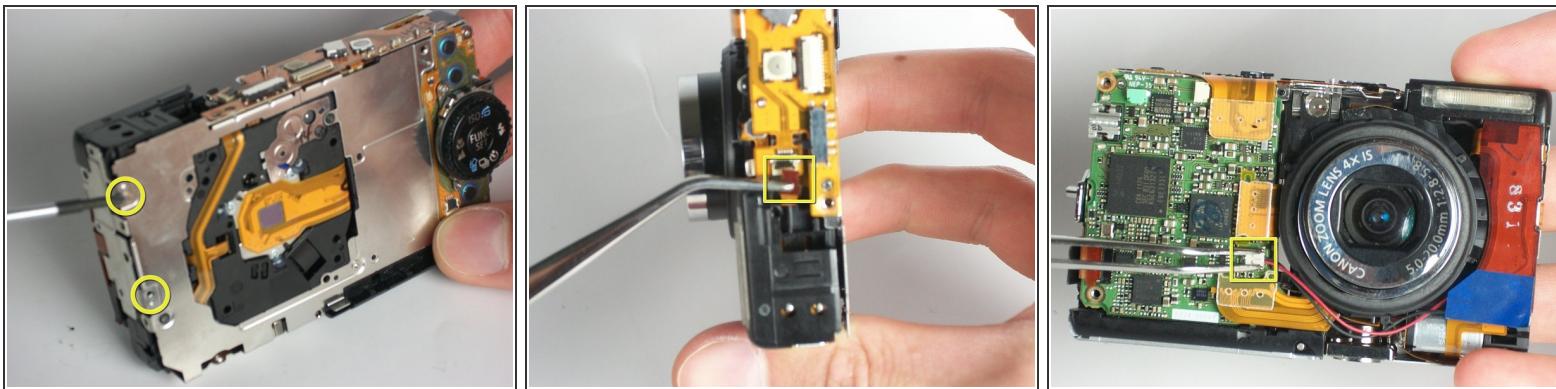

 Use caution when removing the flash. The capacitor may still have a charge.

- Remove 2 screws (1.75 mm) from the back with a screwdriver, disconnecting the metal guard.
- Pull the ribbon on the top of the camera to unplug it.
- Disconnect the white plug connected by red and black wires.

To reassemble your device, follow these instructions in reverse order.