




Disassembling Casio Exilim EX-Z850 Outer Casing

How to remove the outer casing for the Casio Exilim Z850.


Written By: Logan

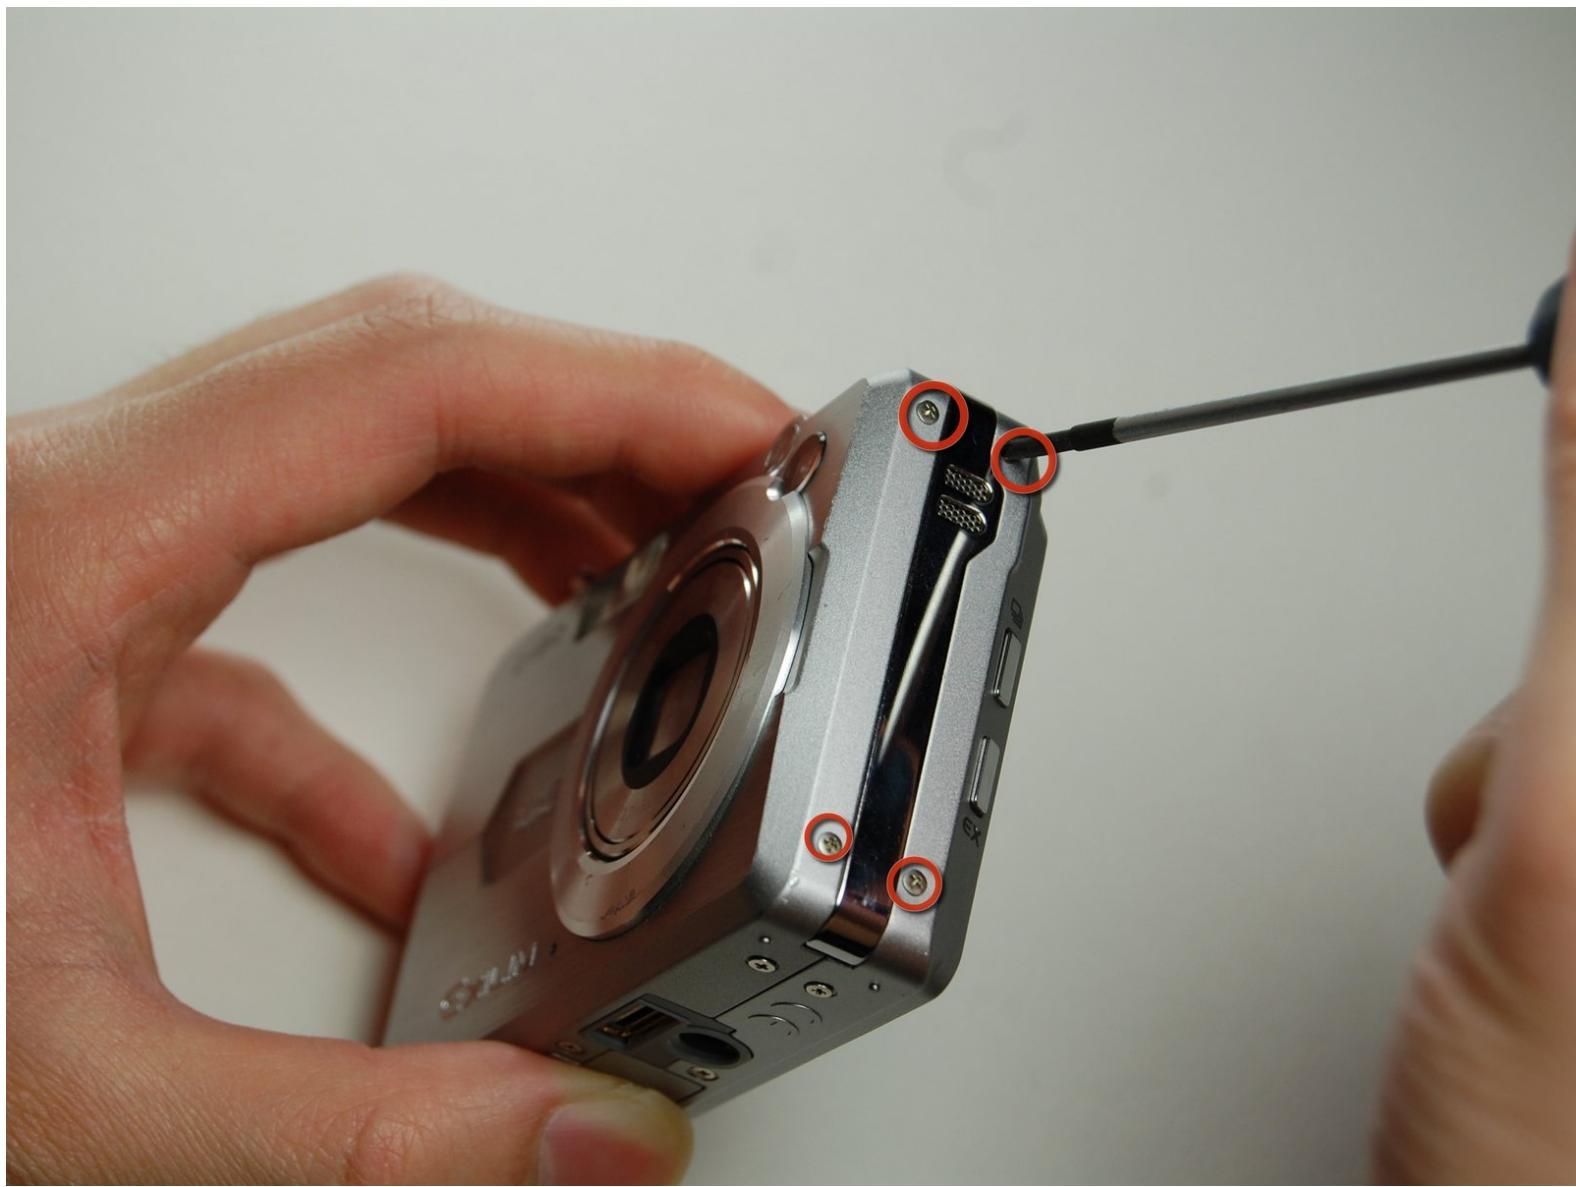

 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Outer Casing

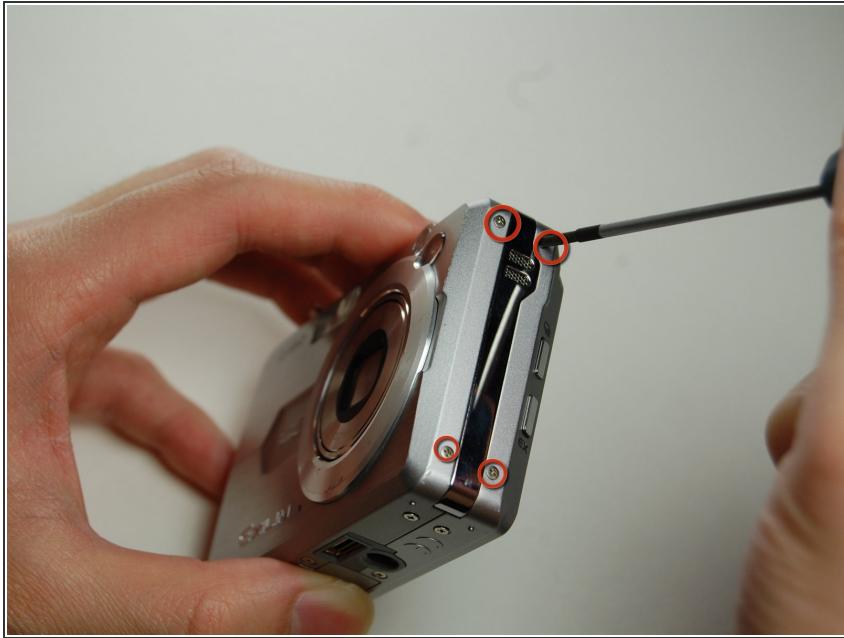

- Remove all four screws on the side of camera with speaker.

Step 2



- Remove all four screws from side of camera with wristband attachment.

Step 3



- Remove all four screws on bottom of camera.


⚠ Note: Bottom screws are longer than the top ones, so label accordingly for easy reassembly.

Step 4



- Once all screws have been removed, gently pry open bottom casing.
- With tweezers, carefully remove ribbon from LCD screen.
- Set bottom casing aside.

Step 5

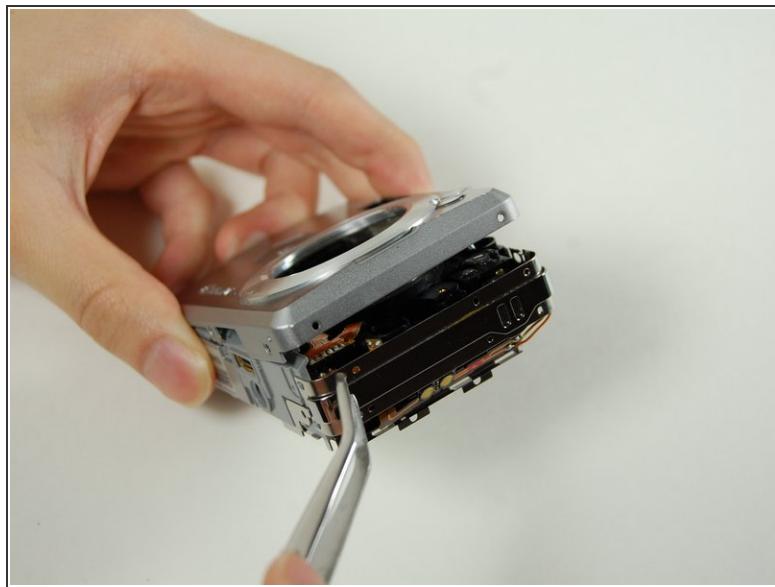

- Pry apart the top casing using tweezers.
- Set the top casing aside.

To reassemble your device, follow these instructions in reverse order.