



Disassembling DeWalt D28110 Gear Case

This guide will walk through removing the gear case from the plastic casing.

Written By: Will Young



INTRODUCTION

Prerequisite Only

TOOLS:

- T15 Torx Screwdriver (1)

Step 1 — Disassembling DeWalt D28110 Gear Case



- Using the T-15 screwdriver, remove the four 22-mm torx screws on the gear case.

⚠️ Unplug the grinder before any disassembly.

Step 2



- Pull out the gear case.

To reassemble your device, follow these instructions in reverse order.