



Disassembling Dell OptiPlex FX170 Case

Prerequisite Only

Written By: Frank Pecka



INTRODUCTION

Prerequisite Only

TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

Step 1 — Case



- With the base stand facing upwards, unscrew the 6mm Phillips #2 screw.
- Pull the base stand straight up from the device.

Step 2



- Unscrew and remove the eight 4mm Phillips #0 screws (four on top, four on bottom) from the top and bottom of the device.

Step 3



- Run the flat side of the spudger along the entire line of the case starting from the back where the power plug and a small screw are located.

⚠ Use care to not apply excessive force that could damage retaining clips while running the spudger along the case.

Step 4



- Once the clips have been released, gently disengage the cover from the rest of case by pulling in opposite directions.

To reassemble your device, follow these instructions in reverse order.

