



Disassembling Epson PPC650 Camera Casing

Disassembling the camera casing to access the viewing screen

Written By: Brittany



 **TOOLS:**

- [Spudger \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

Step 1 — Disassembling Epson PPC650 Camera Casing



- Make sure the camera is turned off here.
- Remove batteries from the battery compartment located on the bottom of the camera
- Remove SD card for the card reader compartment located on the flat side (left side) of the camera

Step 2



- Remove 2 screws on the rounded side of the camera wisdom here.

Step 3



- Remove 3 screws on the flat side of the camera
 - All silver screws go into the side of the camera that is silver
 - All black screws go into the side of the camera that is black

Step 4



- Remove 4 screws from the bottom of the camera
 - All silver screws go into the side of the camera that is silver
 - All black screws go into the side of the camera that is black

Step 5



- Separate the front and back pieces of the cameras plastic casing using a spudger here.
- WARNING: When pulling the front plastic casing, be careful of the wire that are connected to the aperture control
- Use minimal force so that the plastic casing does not break
- When separating the small silver sliding indicator for view/off/playback may fall out
- The plastic viewing window located on the top of the camera may also become lose and fall out

To reassemble your device, follow these instructions in reverse order.