



# Disassembling Ericsson CF 388 Antenna

This guide will allow the user to safely remove the antenna.

Written By: Niccolas Tones



## Step 1 — Antenna



- Locate the antenna at the top of the phone.
- Grab the antenna between your thumb and forefinger with one hand. With the opposite hand, hold the phone firmly.
- Remove the antenna by slowly pulling it out of the socket away from the phone.
- Note: If necessary, wiggle antenna carefully to loosen.

To reassemble your device, follow these instructions in reverse order.