




Disassembling Ericsson CF 388 Phone Casing

This guide will allow the user to open and disassemble the phone casing, showing all the major components.


Written By: Niccolas Tones

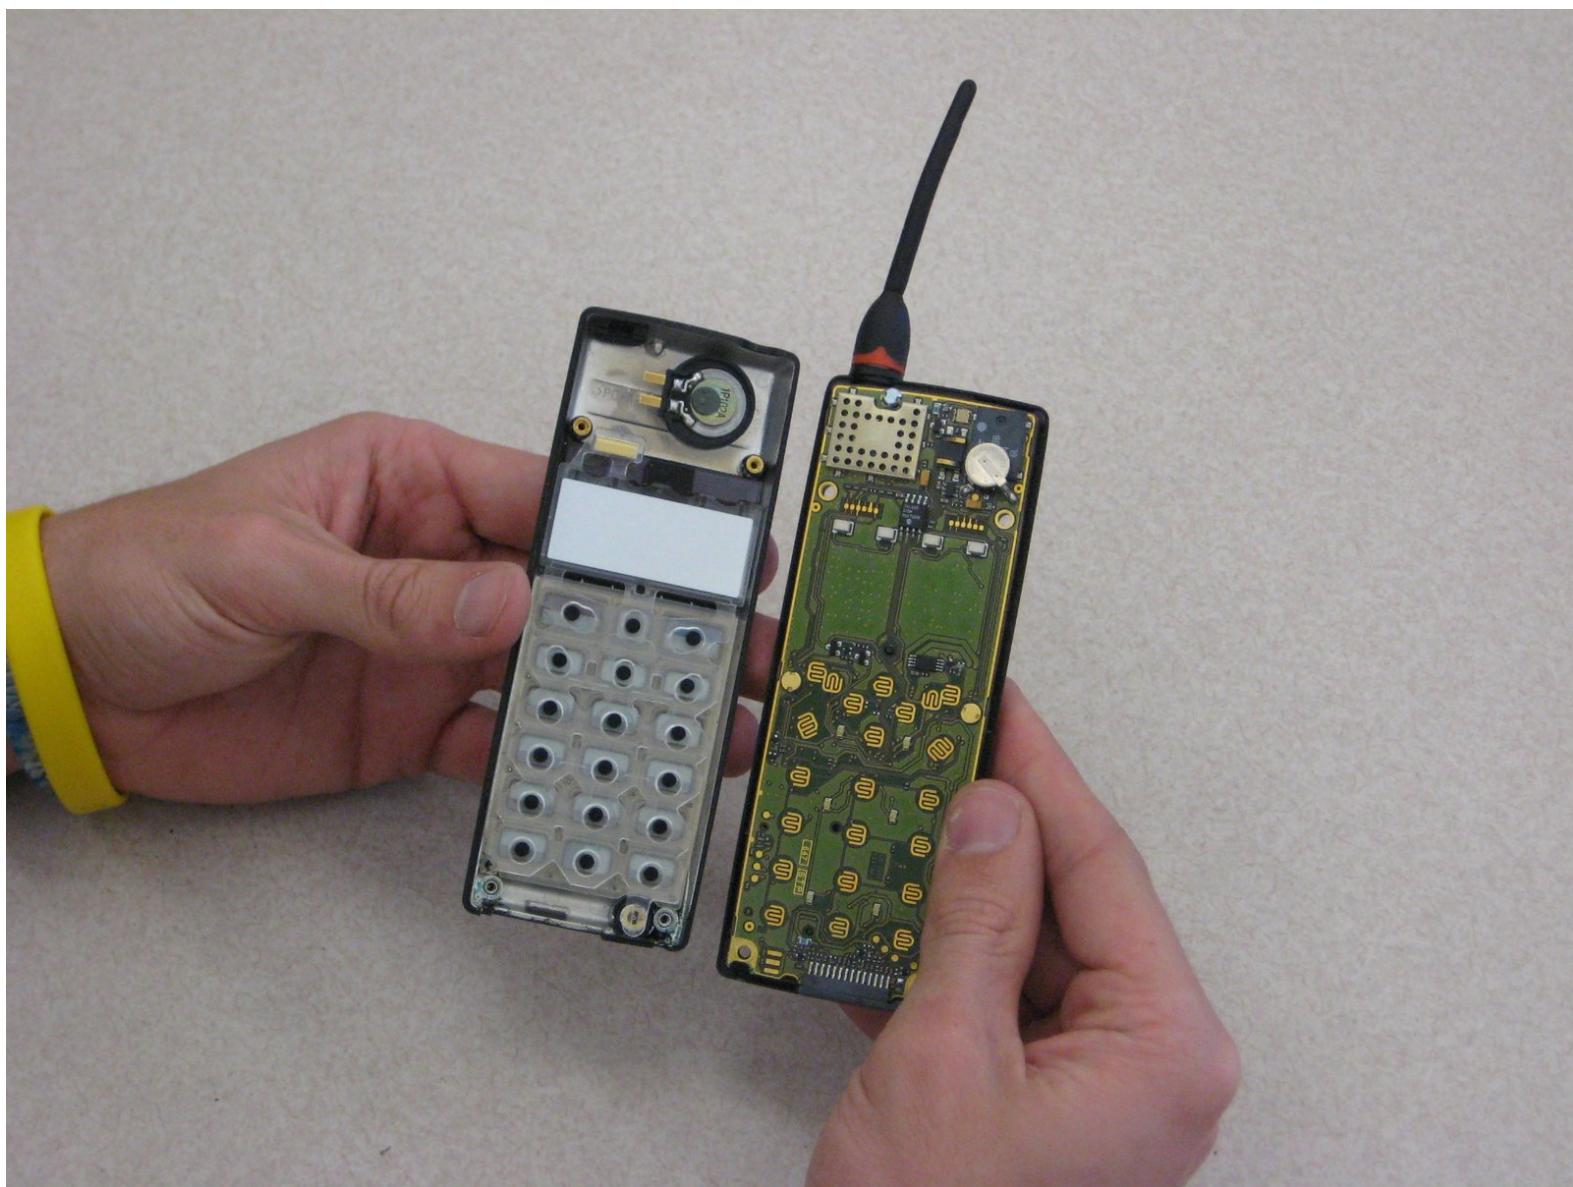

 **TOOLS:**

- **T6 Torx Screwdriver (1)**
- **Spanner 2.6 Screwdriver (1)**

Step 1 — Disassembling Ericsson CF 388 Battery

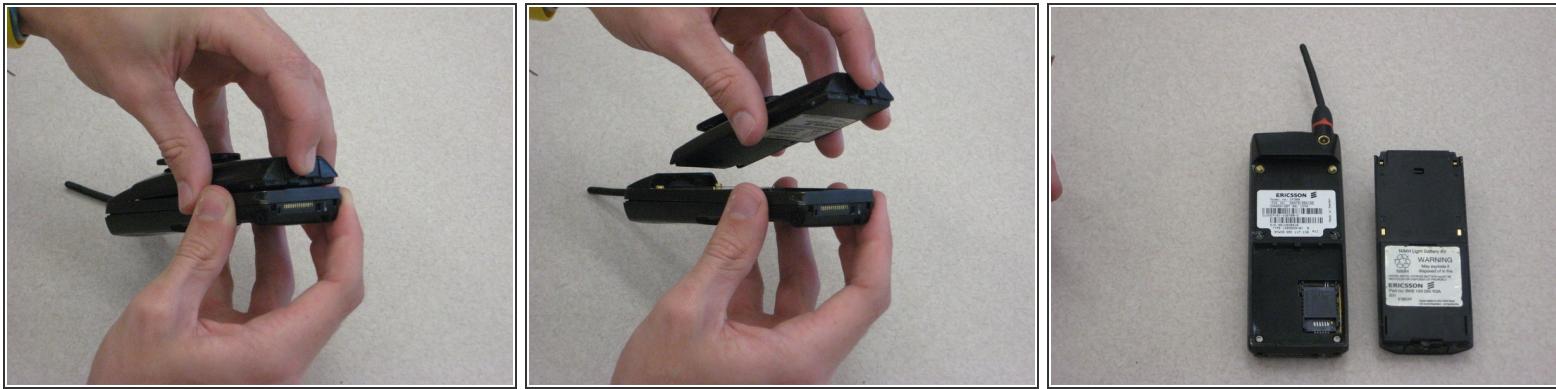

- To remove the battery from the casing, grab the front panel and back panel with opposite hands (as shown). The back panel is the same as the battery.
- With your index finger, push in the button on the bottom of the battery to release it.
- Pull the battery away from the phone.

Step 2 — Phone Casing



- After removing the battery, the front phone casing becomes accessible.
- Locate the two star-shaped T6 screws on the bottom end of the rear of the phone, underneath the battery, as indicated by the red circles.
- Remove these two screws using the Torx T6 Screwdriver.


Step 3



- Locate the top two U-shaped screws on the back of the phone, as shown by the red circles.
- Remove these two screws with a SP 2.6 screw driver.

(i) Note: Remove gray plastic grommets with screws.

Step 4

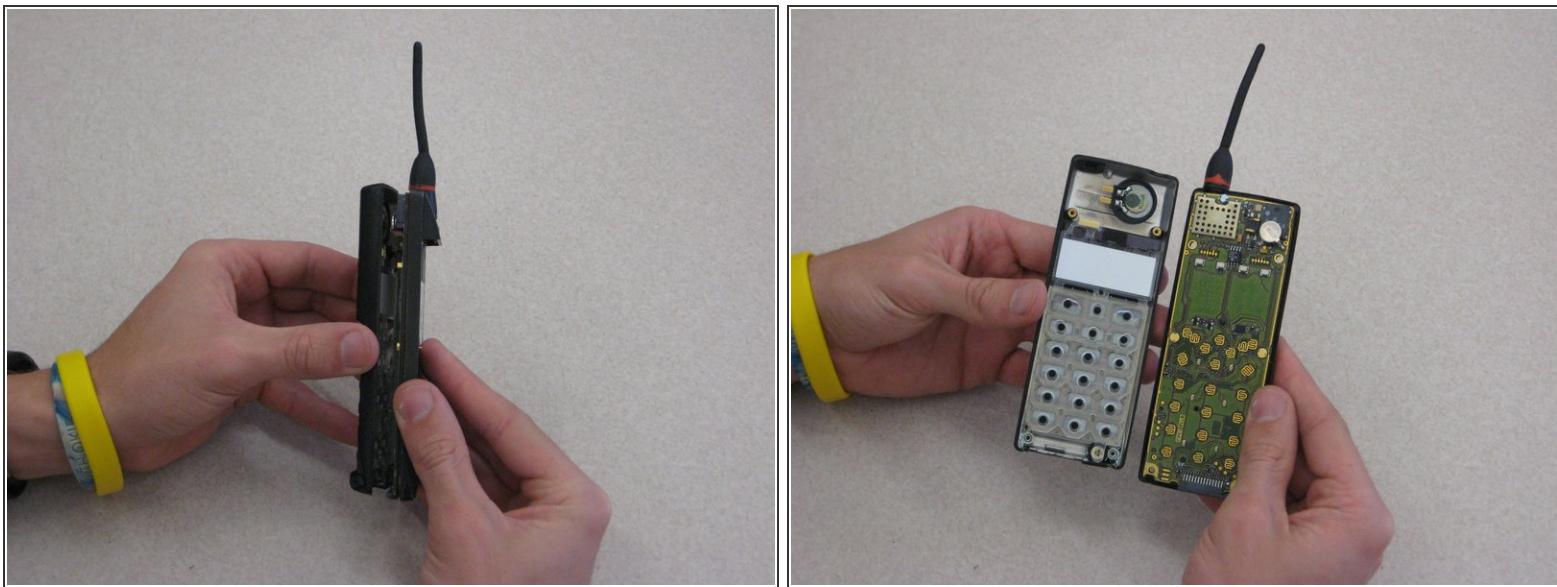

- Grab opposite panels of the phone casing and carefully open and pull apart the phone, as shown in the image.

(i) Note: Be careful not to damage the circuit board and components as you open the casing.

To reassemble your device, follow these instructions in reverse order.