




Disassembling Flip Video Circuit Board

Written By: Elizabeth

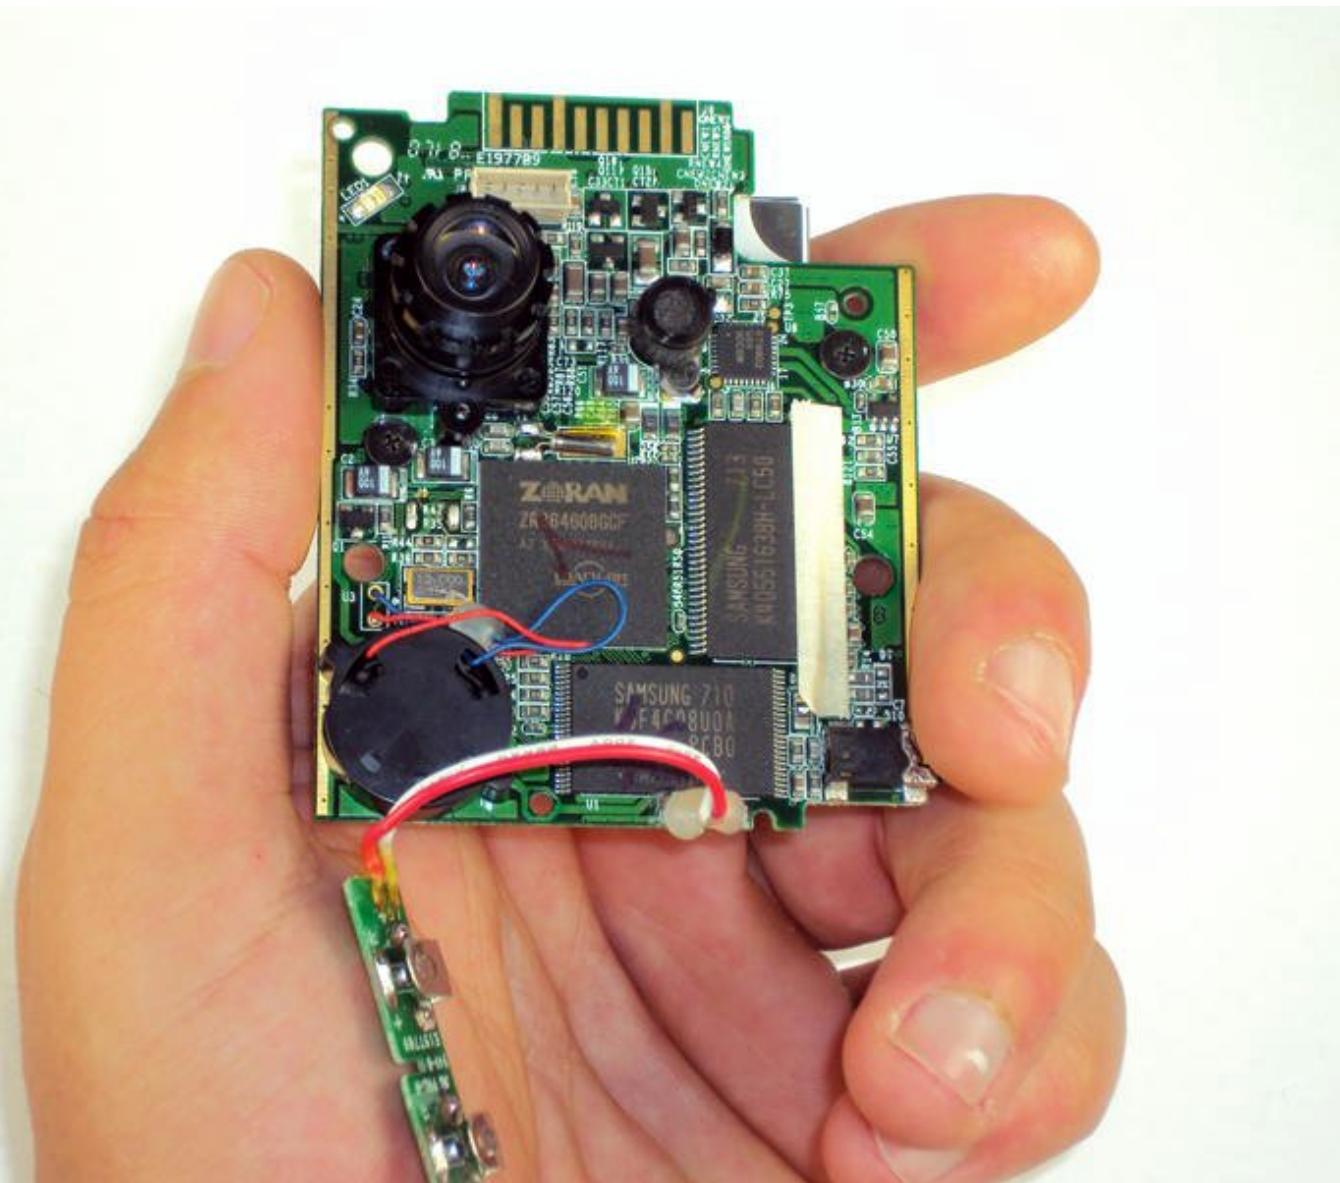


INTRODUCTION

This guide will show you how to open your Flip Video and remove the main circuit board.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Outer Shell

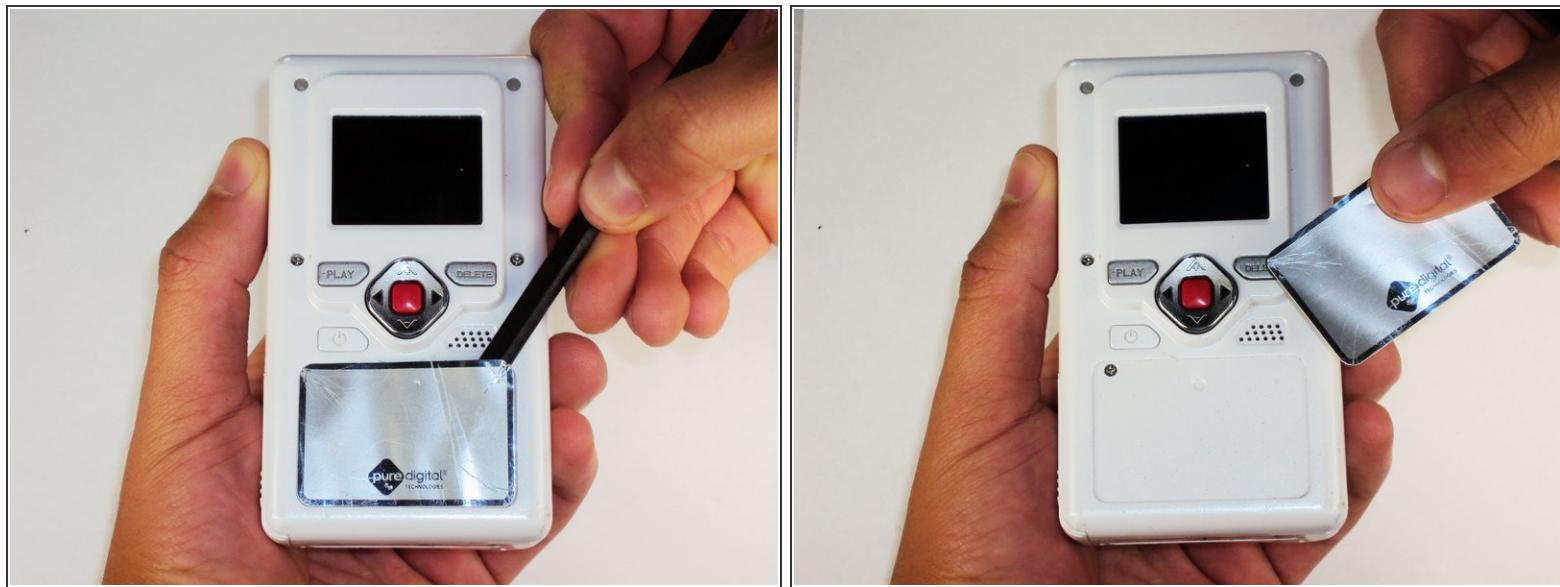

 Turn off the device and take the batteries out.

- Remove metal sticker under the LCD screen with a spudger.


 This may require a large force to pry off the glued sticker.

Step 2



- Remove the 4 gray screw caps with the spudger. These cover the screw heads and protect from dirt or grime.

Step 3

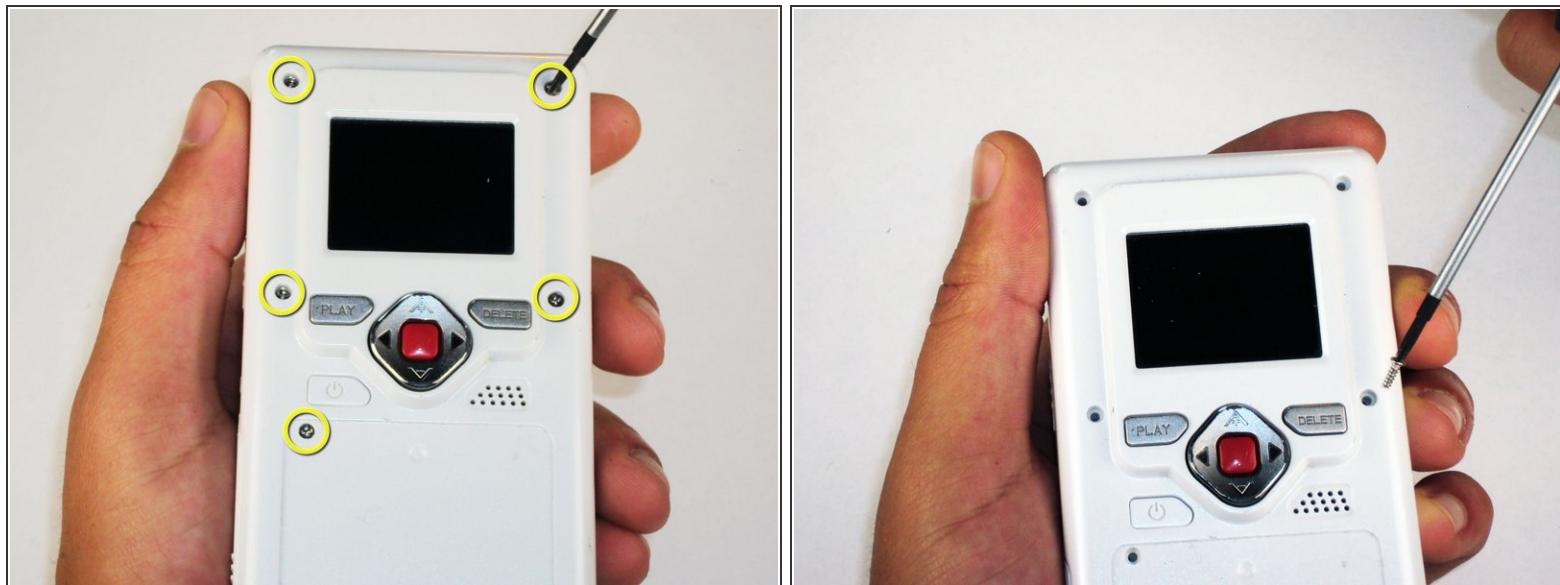

- Remove the 5 10mm screws with the #00 Phillips screwdriver. These connect the back of the outer shell to the front of the outer shell.

Step 4




- Open battery door. This can be done by gently depressing and sliding the battery down downward.

Step 5




- Use the spudger to separate outer shells.
- The spudger must be inserted between the shell halves to pry the edges apart.
- Slowly work around the outside to separate the halves.

Step 6 — Circuit Board

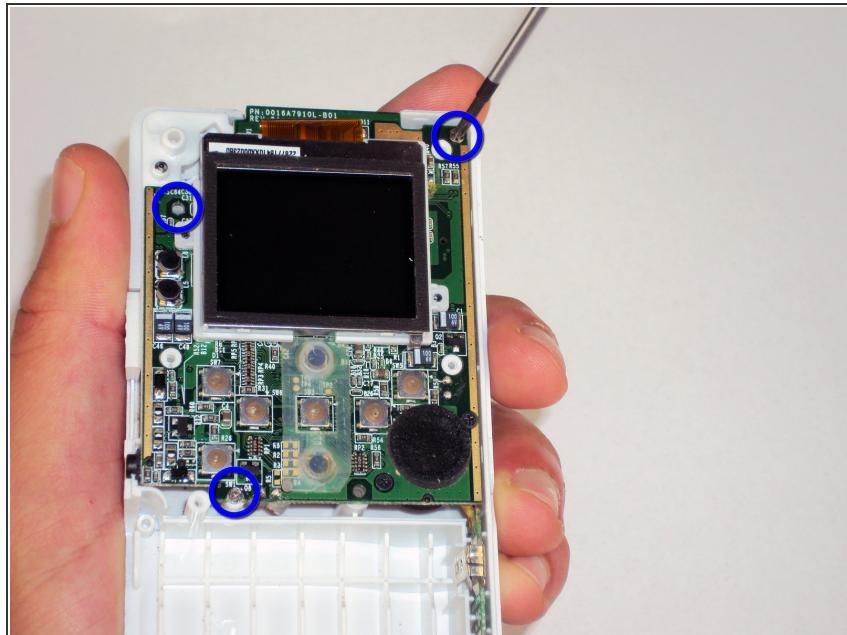

- Remove the 3 5mm screws securing the circuit board to the front shell with the #00 Phillips screwdriver.


Step 7

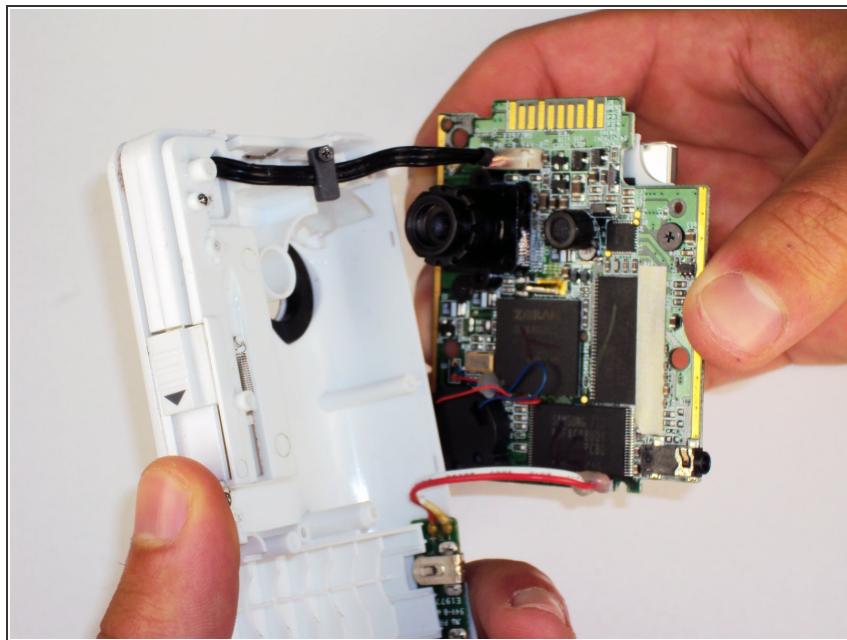

- Slowly lift the left side of the circuit board.


 Do not attempt to remove the circuit board completely yet. It is still connected to the device.

Step 8

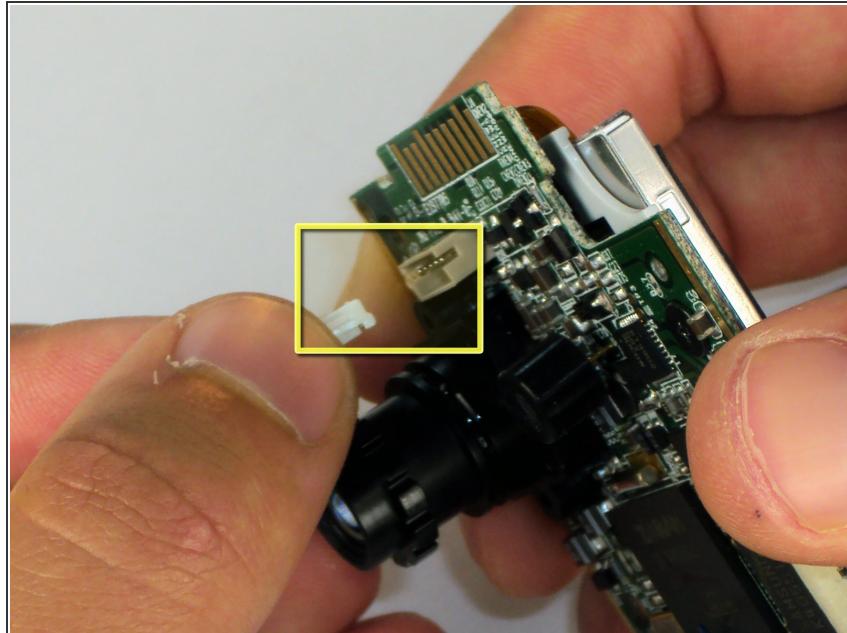

- Disconnect the USB port cable from the back side of the circuit board.

Step 9

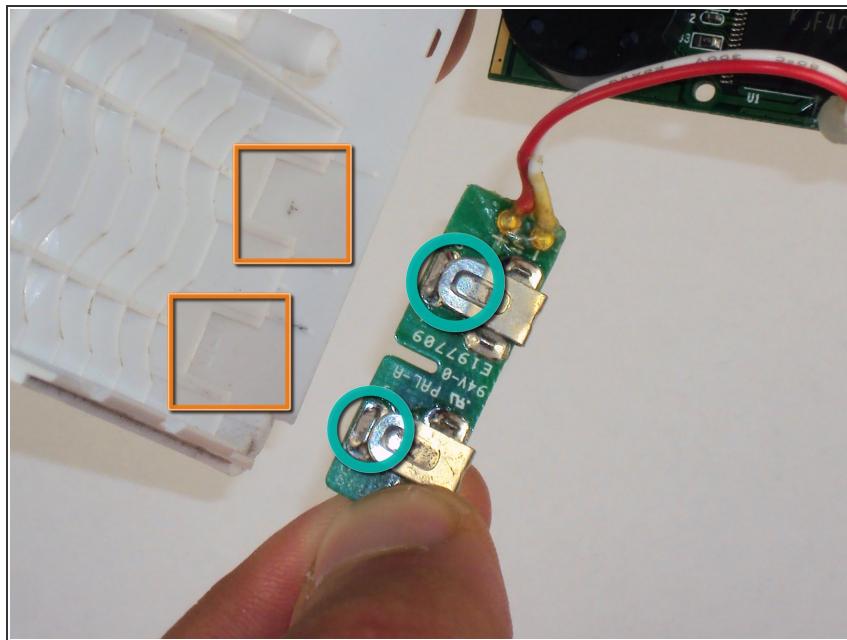

- Slide out the battery contacts.
- Battery contacts
- Slot where battery contacts were located

To reassemble your device, follow these instructions in reverse order.