



Disassembling IBM ThinkPad A30 BIOS Battery

This disassembly shows how to remove the ThinkPad's BIOS battery.

Written By: Alan



INTRODUCTION

Remove the ThinkPad A30 BIOS battery.


The following steps will be shown:

- Battery removal
- BIOS battery removal

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Battery

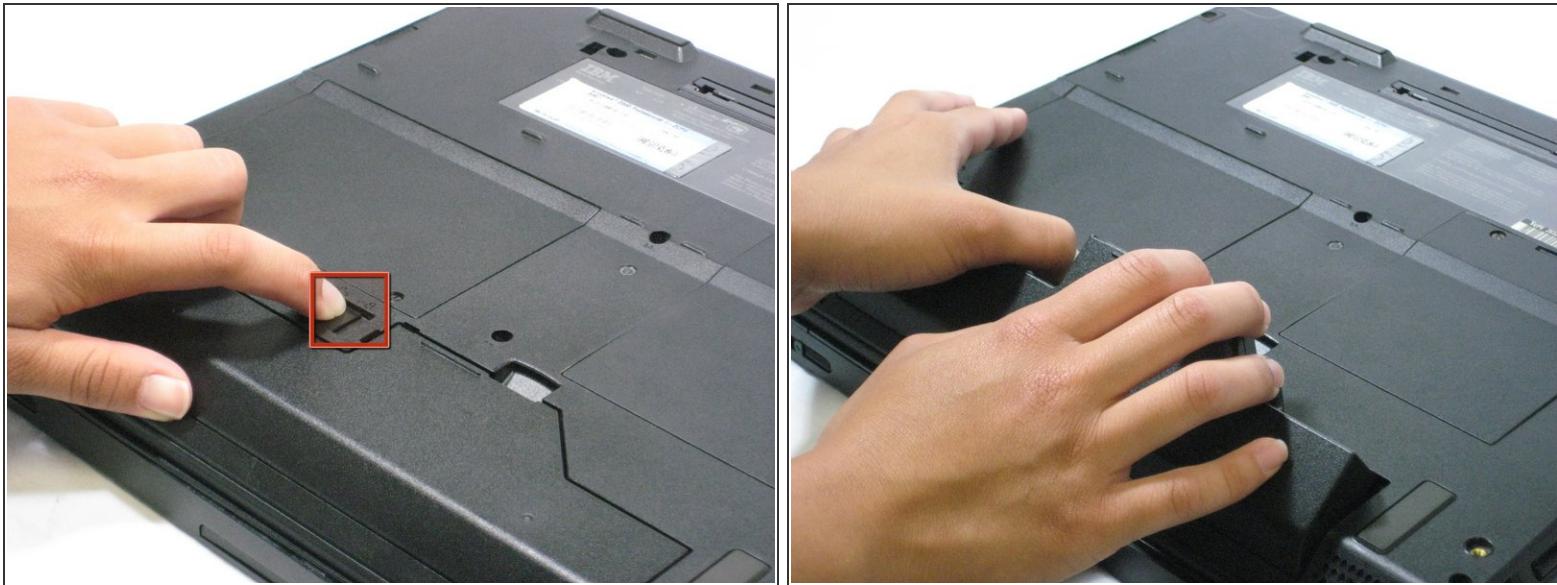

(i) Flip the ThinkPad over so that it is upside down.

- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it upwards away from the laptop.

Step 2 — BIOS Battery



- Remove the two 5.3mm cover screws.
- Gently lift the cover.
- Take out the BIOS battery by unplugging it from the computer.

To reassemble your device, follow these instructions in reverse order.