



Disassembling IBM ThinkPad A30 CPU

In this guide, you will disassemble the laptop in order to replace the CPU


Written By: Jessica



 **TOOLS:**

- Flathead 3/32" or 2.5 mm Screwdriver (1)

Step 1 — Battery

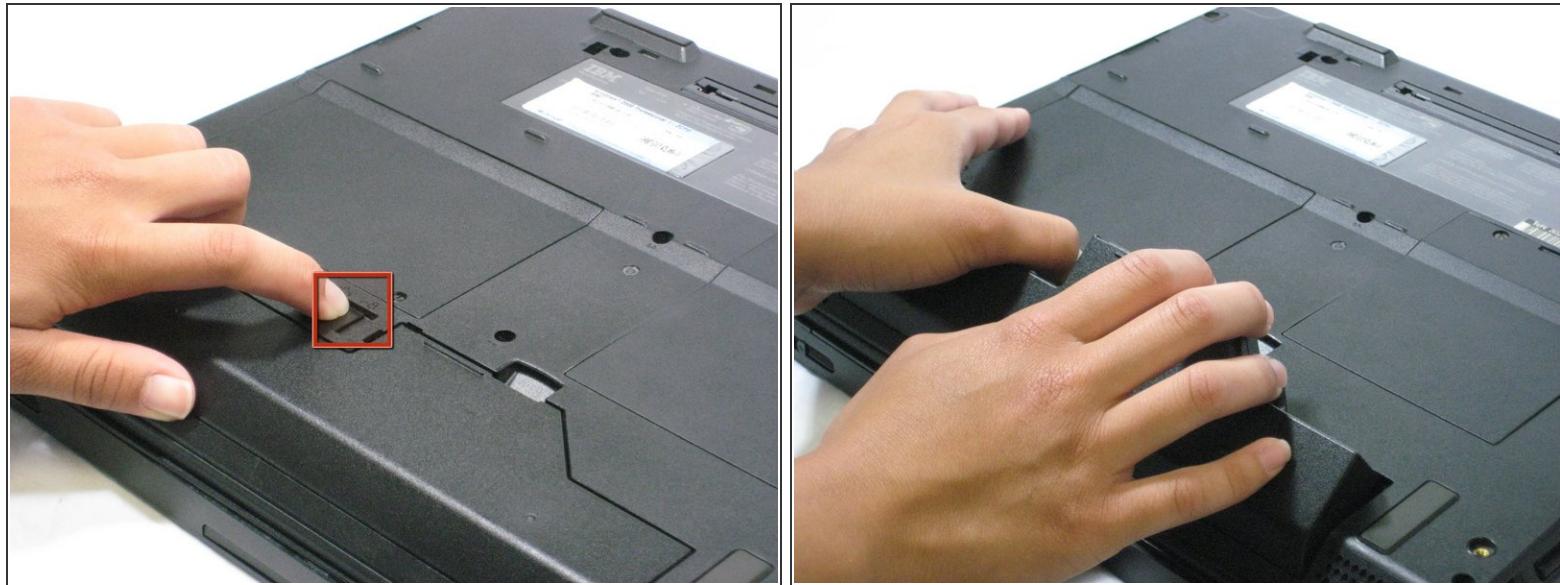

ⓘ Flip the ThinkPad over so that it is upside down.

- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it upwards away from the laptop.

Step 2 — Hard Drive



- Remove the highlighted screw with a Phillips #1 screwdriver.
- Pull the hard drive out.

Step 3 — Upper Case



(i) Make sure the laptop is upside down and oriented in the direction shown.


- Remove the six 16.7mm screws inside the circled holes.

Step 4



- Rotate the ThinkPad so that the hard drive bay is facing you.
- Remove the black cover to reveal a 14.8mm screw.
- Remove the uncovered screw with a Phillips #0 screwdriver.



Step 5

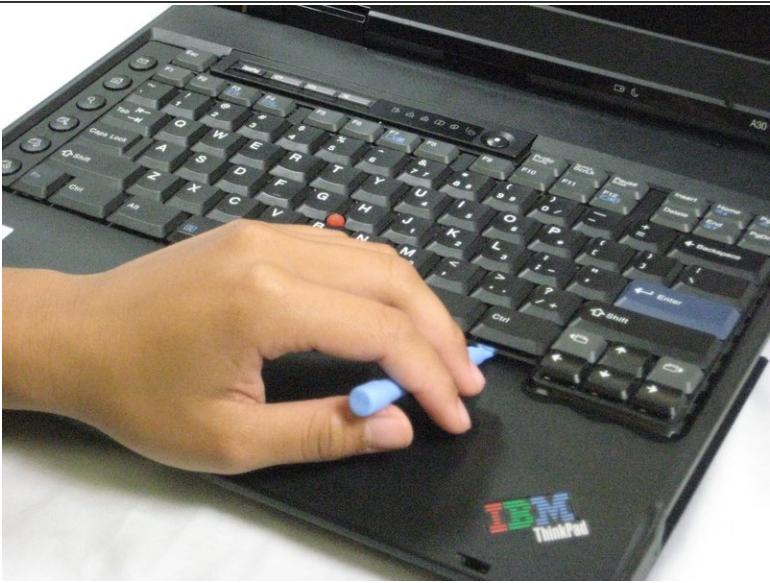

ⓘ Flip the ThinkPad over and open the LCD panel.

- Pry apart the keyboard with a plastic opening tool or with your fingers.


Step 6

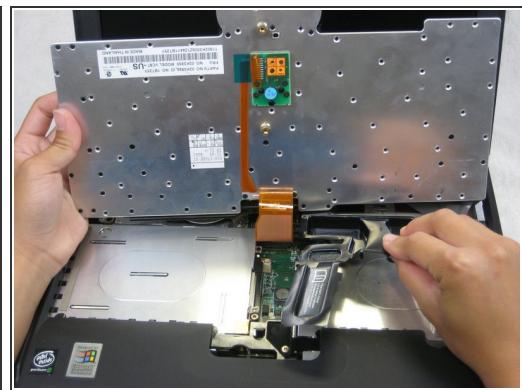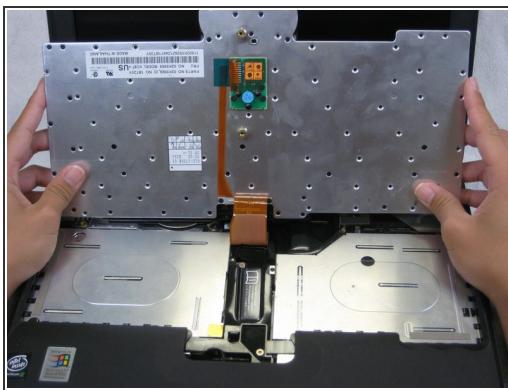

⚠ Be careful not to pull out the keyboard carelessly; there is a connector underneath it!


- Lift the front end of the keyboard as shown.
- Using your fingers, remove the black film cover.

Step 7

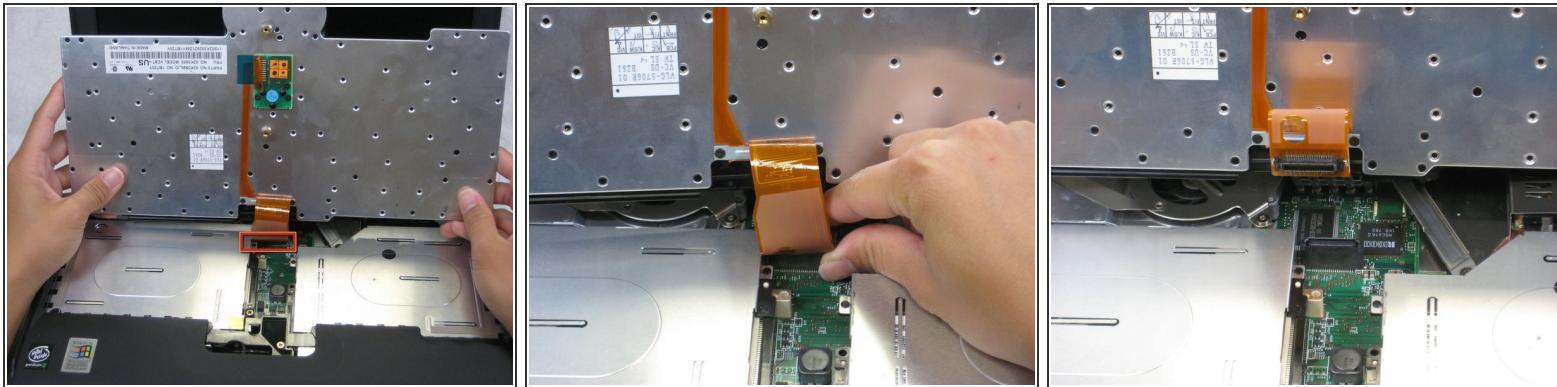

- Locate the connector attached to the motherboard.
- Disconnect the ribbon cable by removing the connector.

Step 8

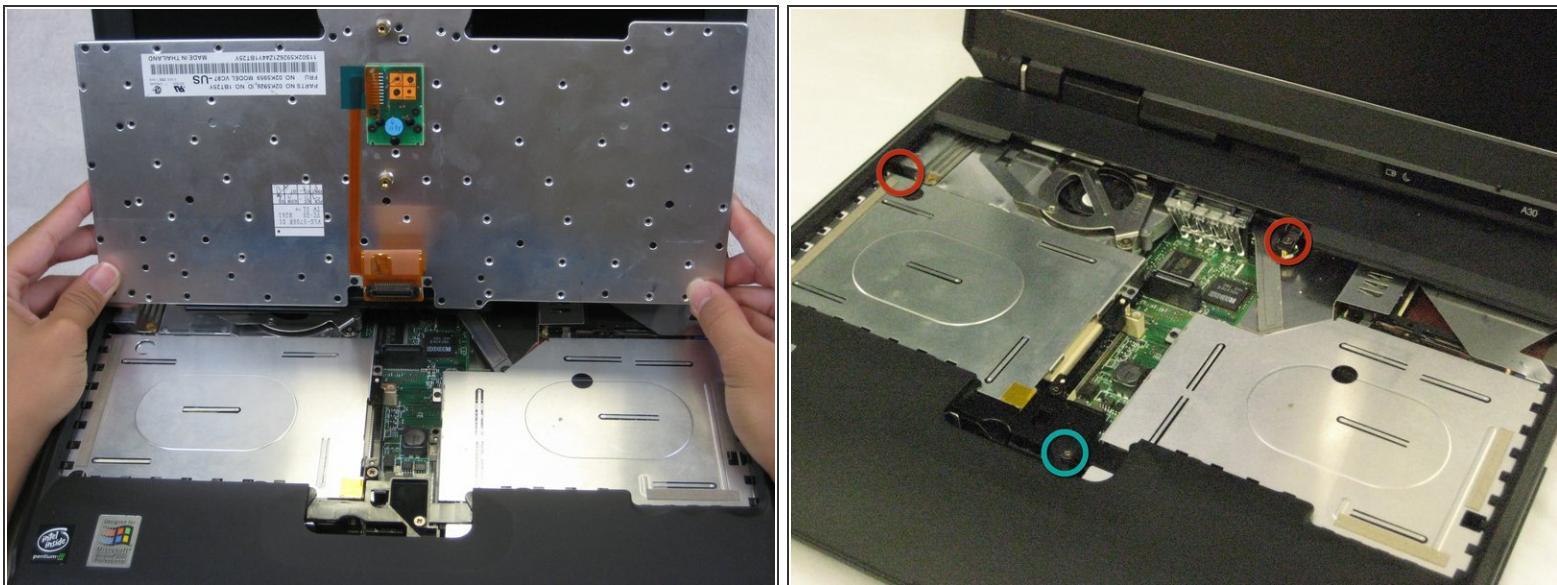

- Lift and remove the keyboard.
- Remove the two 5.6mm screws.
- Remove the 16.7mm screw.


Step 9



 You will need to use a little force. Be wary of the tabs.


- Pry off the upper case with your hands.

Step 10 — Display Assembly

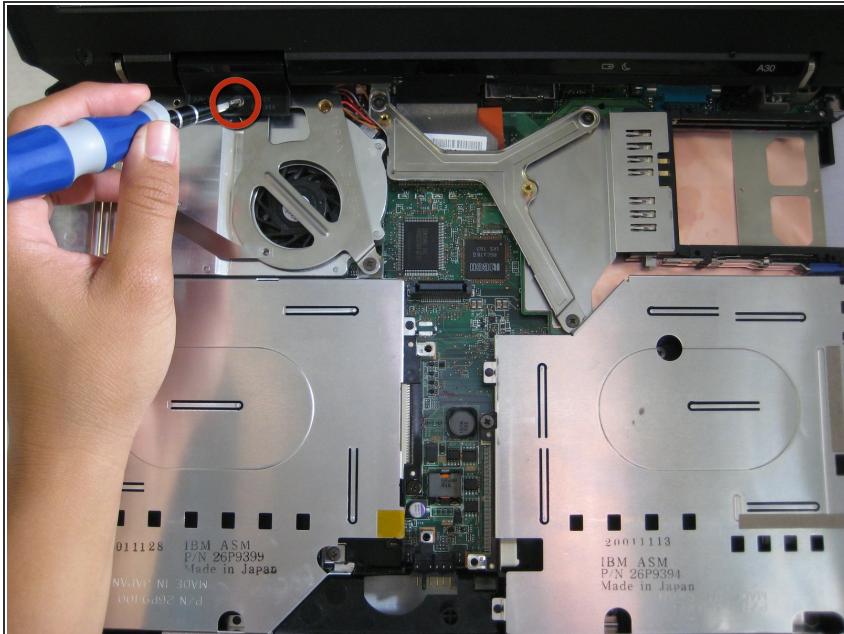


- Remove the 5.6mm screw that holds the LCD to the upper case.

Step 11

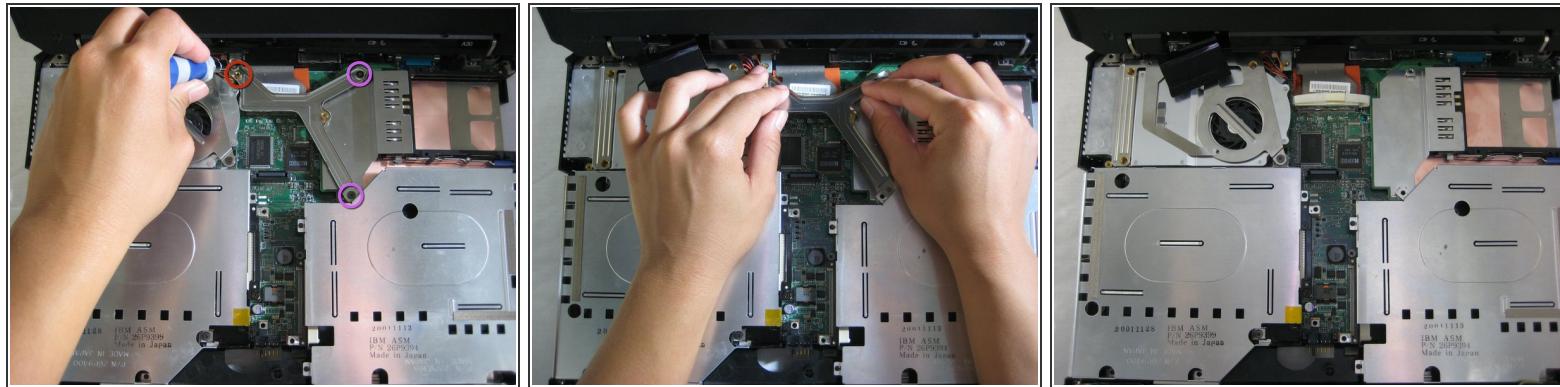


- Remove the 5.6mm screw on the left side of the three-pronged connector.
- Remove the other two 16.7mm screws.
- Lift and remove connector.

Step 12

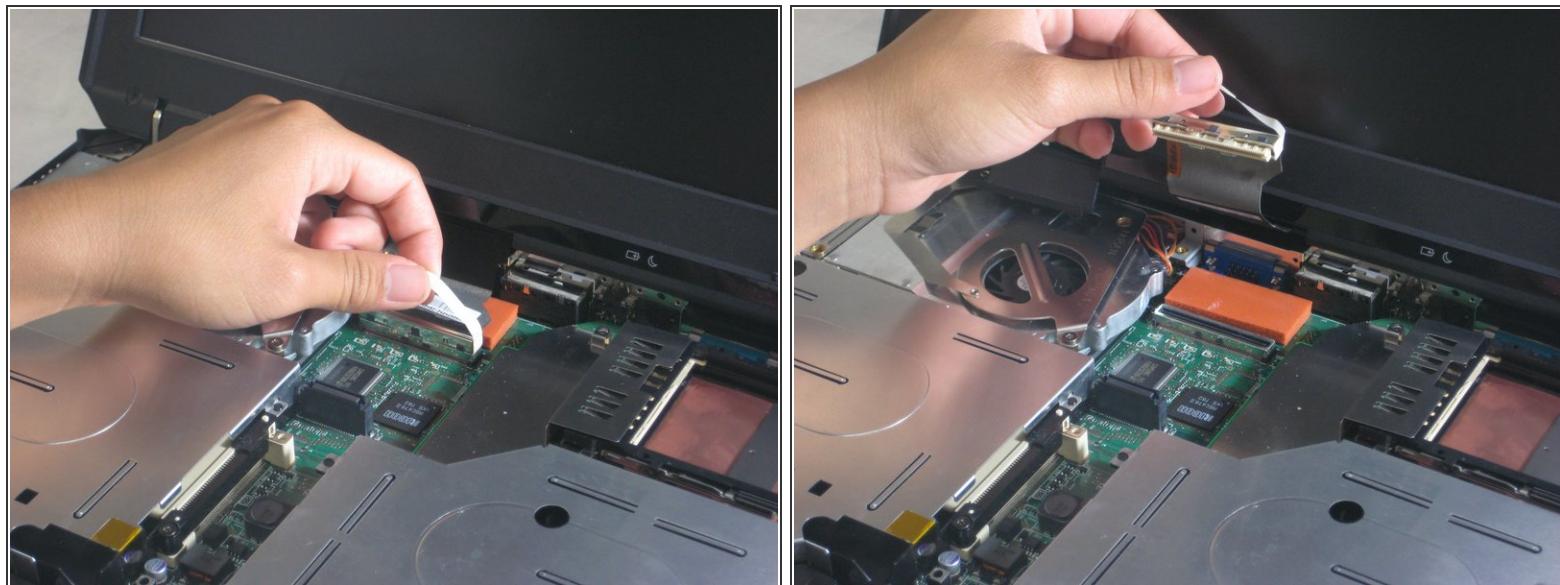


- Pull out the white tab connecting the LCD to the motherboard.

Step 13

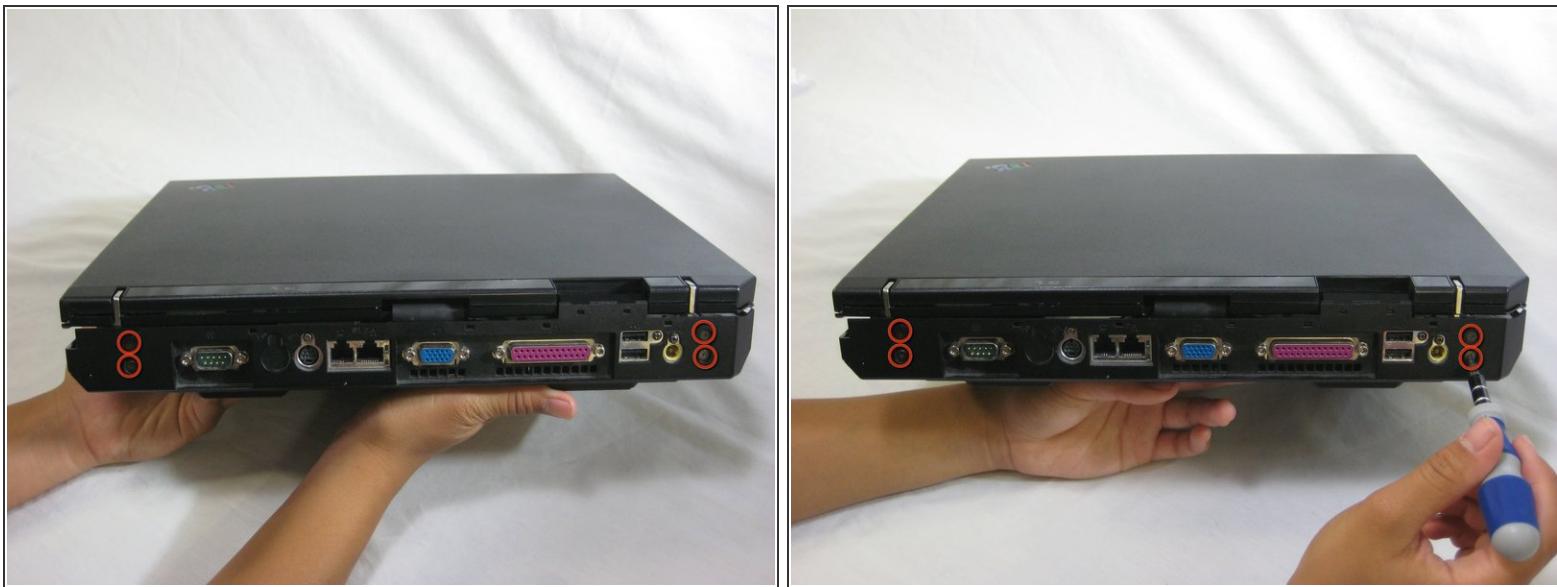


- Turn the laptop so that the back is facing you.
- Remove the four 5.6mm long screws.

Step 14

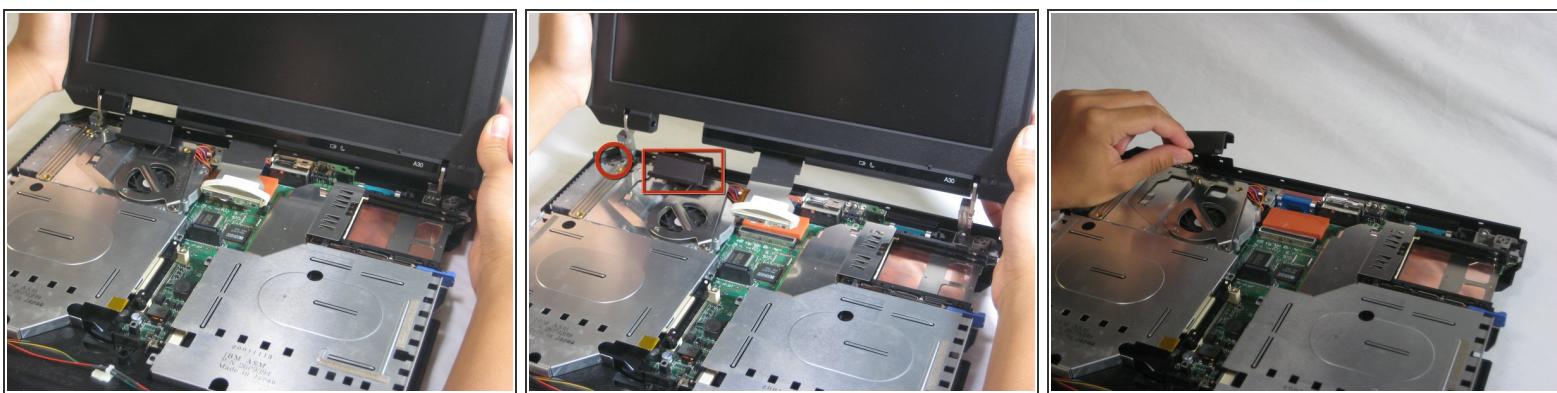

- Place the laptop so that the LCD is facing you again.
- Gently lift the LCD monitor up and out.
- Remove the black plastic tab.

Step 15 — CPU Fan

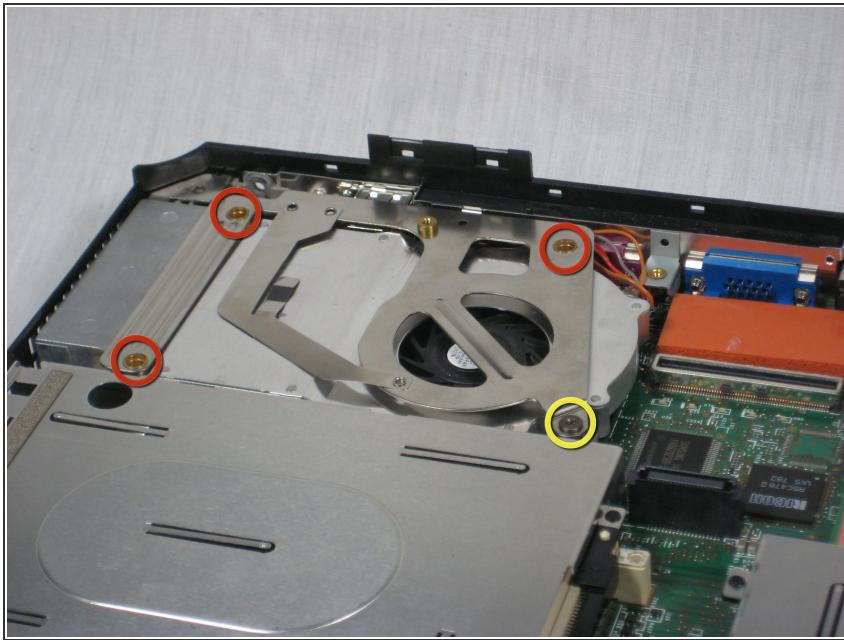

- Locate the 4 screws that will need to be removed.
 - One screw (yellow) is observable. The three other screws (red) are below the heatsink bracket.
- Remove the 5.6mm (yellow) and three 16.1mm (red) screws.

Step 16



- Lift the heatsink bracket up.

Step 17



! Be careful not to pull too hard! There is a cable attached to the fan!

- Lift the fan/heatsink assembly up.
- Locate the fan power cable and pull upwards near the connector.
- Remove the fan/heatsink assembly.

Step 18 — CPU



- Use a flathead to turn the screw 180 degrees.
- Remove the CPU by lifting it upwards.

i If the CPU is reusable, place it in an antistatic bag and away from moisture.

To reassemble your device, follow these instructions in reverse order.