



Disassembling JVC GR-D290U


Written By: justin chen



 **TOOLS:**

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Top Cover & LCD Screen

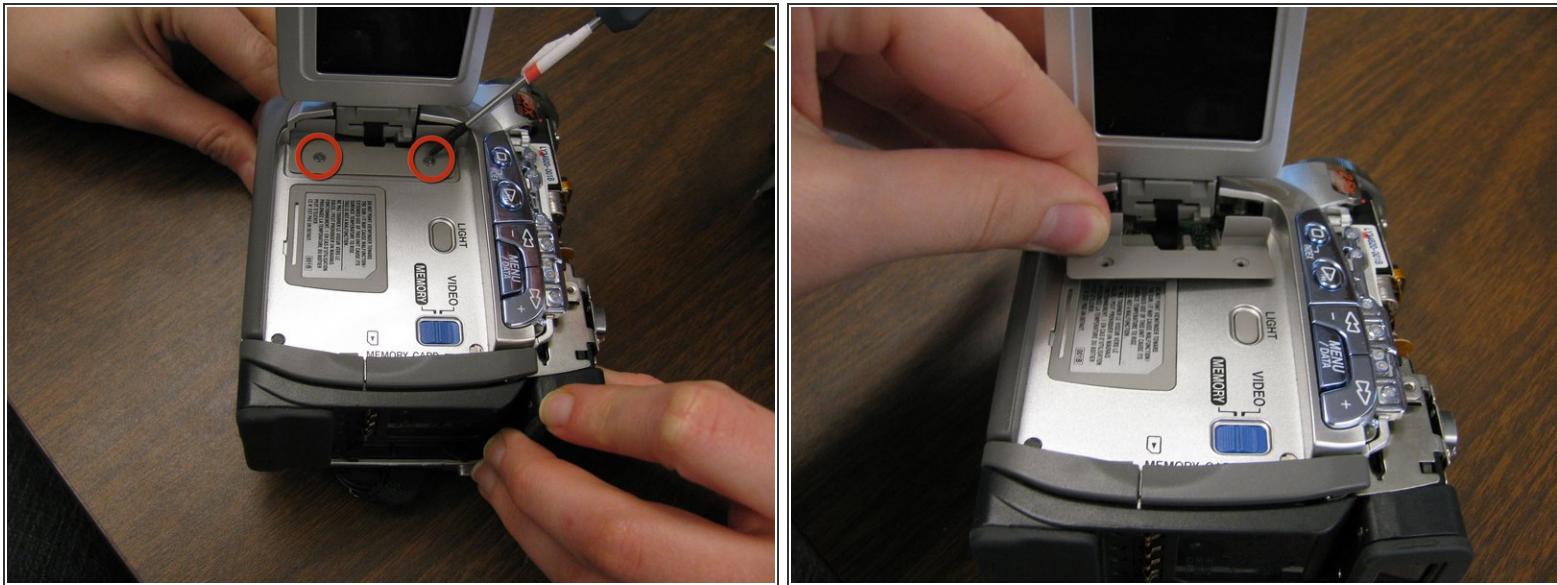

- Open the LCD screen and remove 2 hinge screws.
- Remove hinge cover. Shut screen when finished.

Step 2



- Remove 5 screws on bottom panel of camera.
- Push the eject button on the bottom panel to open the cassette cover.
- Shut cassette cover when finished.

Step 3




- Open LCD screen and move dark gray tab near eyepiece aside.
- Remove screw under dark gray tab on LCD screen side of camera.

Step 4



- Remove 2 screws on side opposite LCD screen.

Step 5

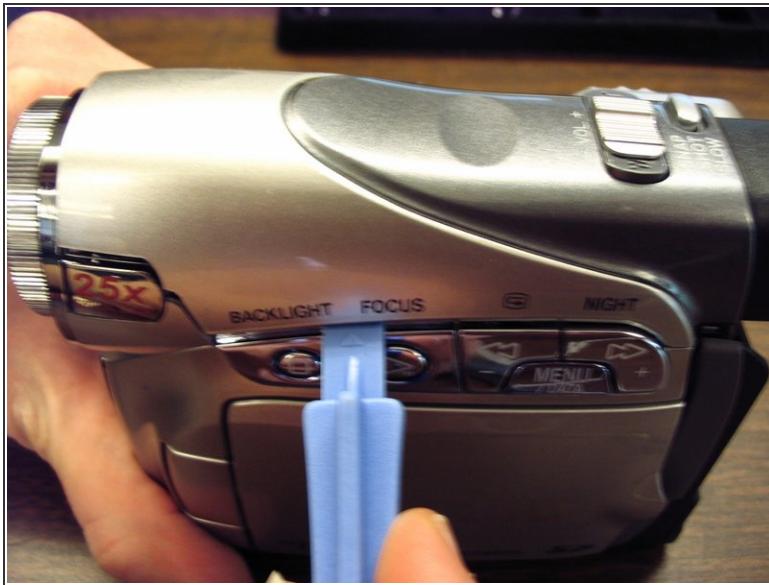

- Place plastic opening tool under seam of camera top cover and unsnap cover.
- Gently pry top cover from camera base.

To reassemble your device, follow these instructions in reverse order.