 




# Disassembling KDDI Kyocera A5521K Main LCD Screen

Written By: Dominic Grisafe

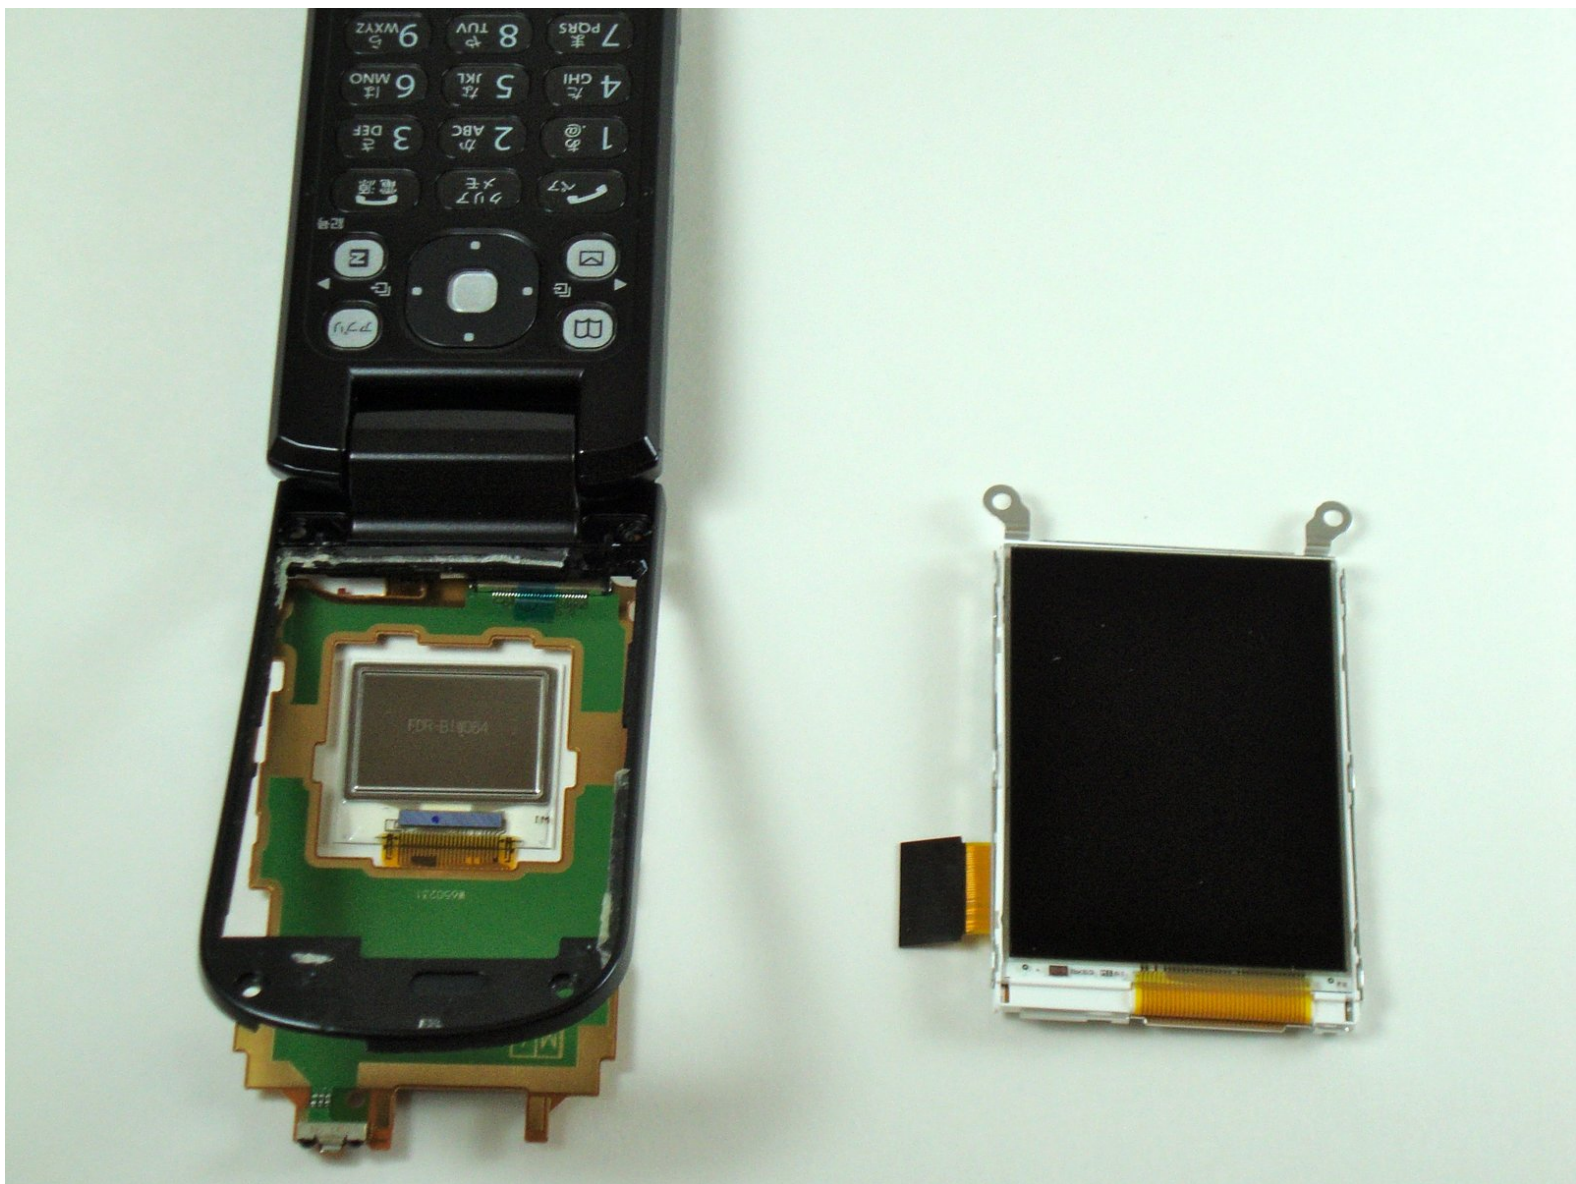

---

## INTRODUCTION


These instructions will demonstrate how to remove the main LCD screen from the KDDI Kyocera A5521K.

---

### TOOLS:

- [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tri-point Y0 Screwdriver](#) (1)
  - [Push Pin](#) (1)
-

## Step 1 — Faceplate

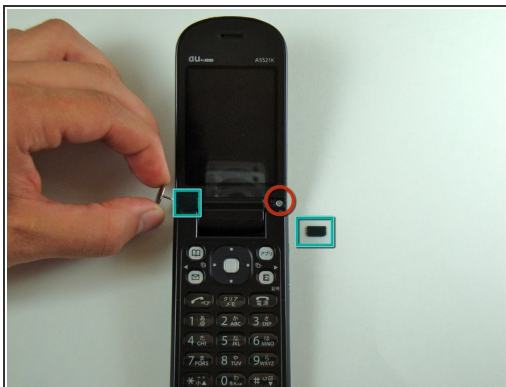

- Pry, with a metal probe, the black covers that are located by the pivoting joints of the phone.
- Beneath the covers are screws.

## Step 2



- Remove the screws using a Y0 screwdriver.



## Step 3



 
- Use the iPod pry tool to remove the outer screen.
  - Two screws are now visible.
- ⚠ Be careful not to crack the screen upon removal. It is adhered strongly to the phone.

## Step 4




- Use the Y0 screwdriver to remove the screws.

## Step 5

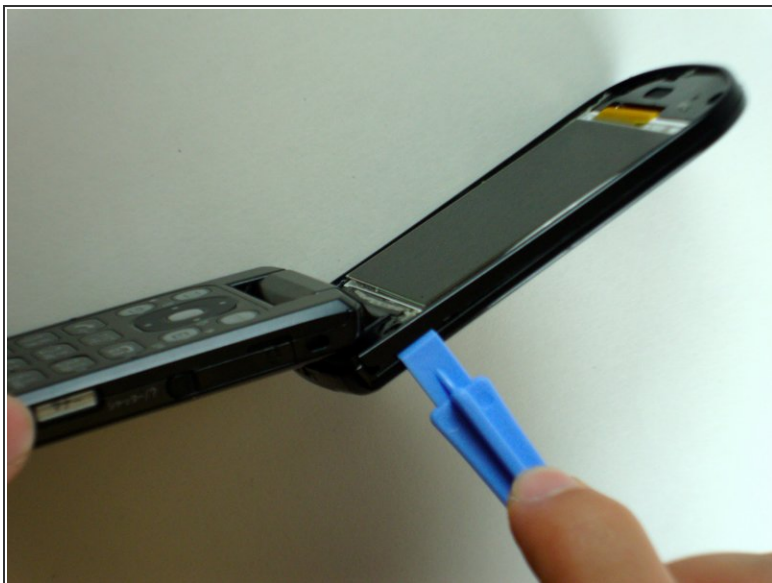

- Use the iPod pry tool to loosen the faceplate from the phone.
- ① Slide the pry tool along the entire crease of the faceplate to completely detach it.


## Step 6

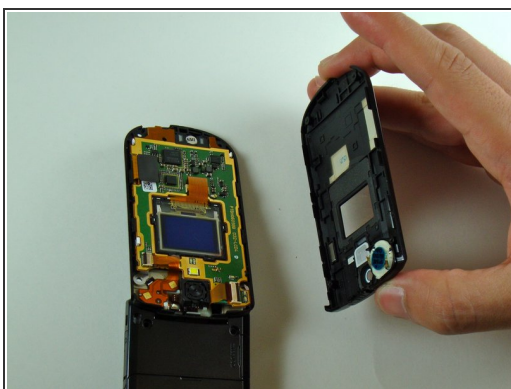 

- Separate the faceplate from the phone.




## Step 7 — Camera

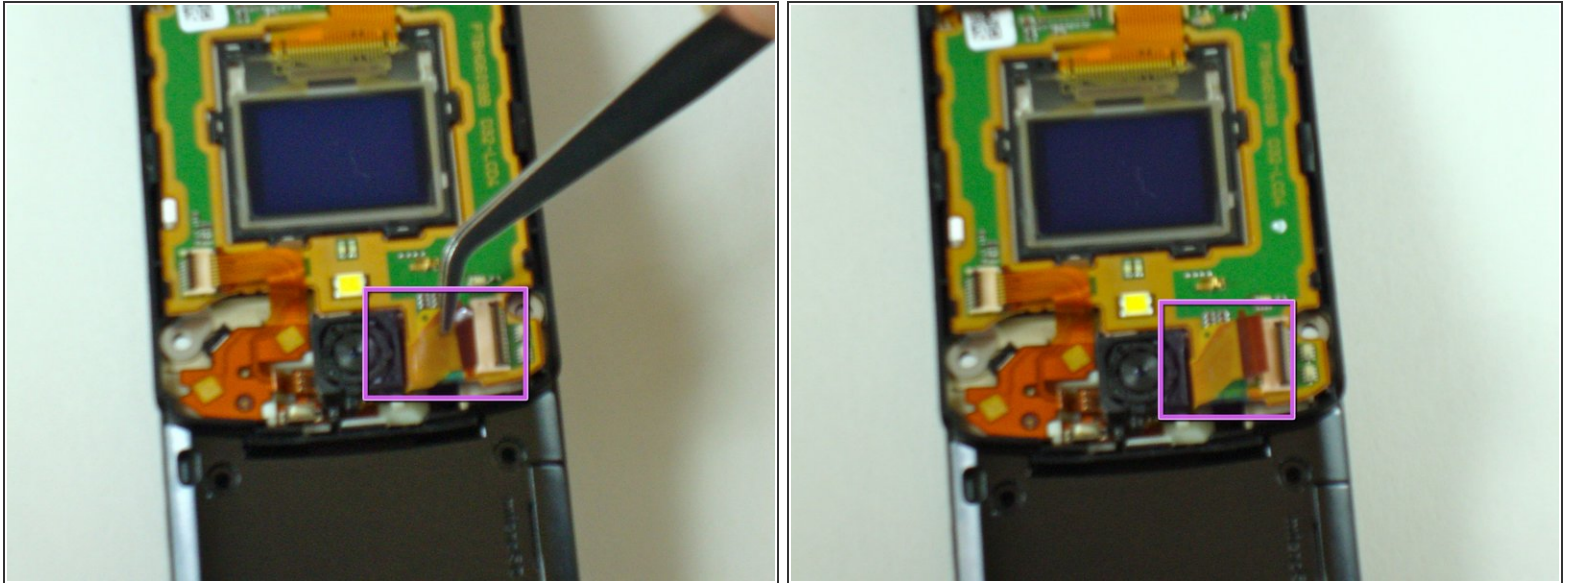 



- Firmly grab the flexible circuit with tweezers to detach (or use your fingers if you can manage a firm grip).

## Step 8

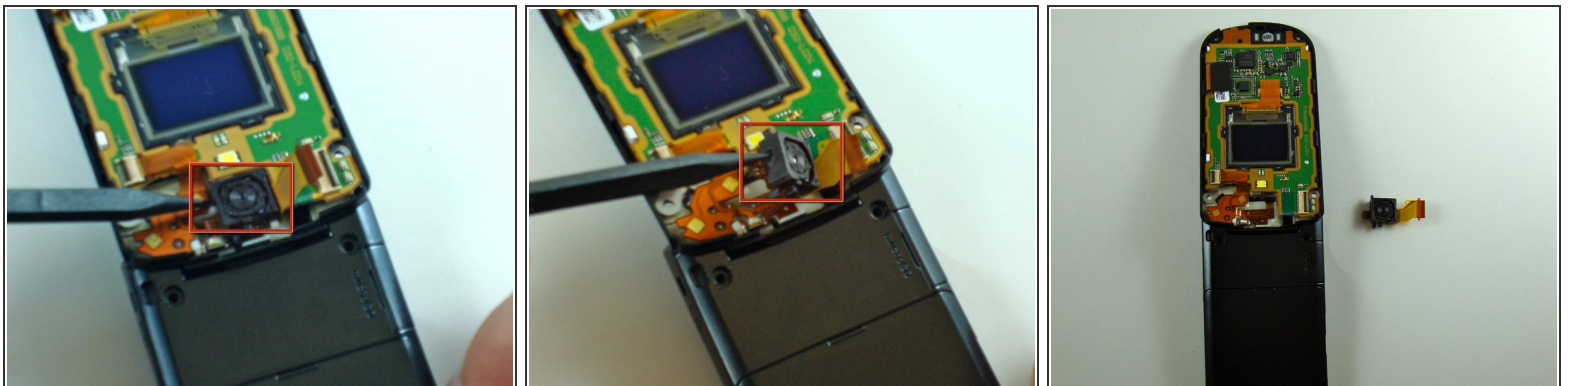 



- Carefully pry up the camera unit with a spudger.
  - ⚠ Be careful not to damage the camera unit.
- The camera should now be separated from the phone.

## Step 9 — Main LCD Screen

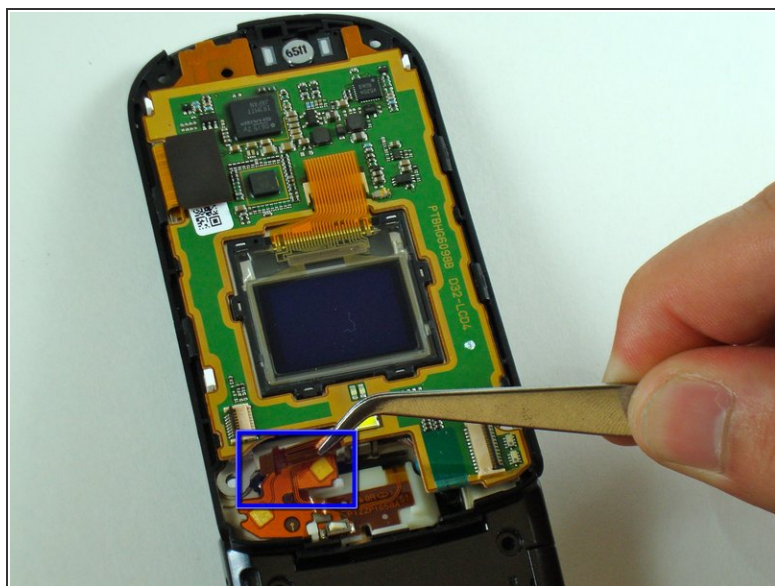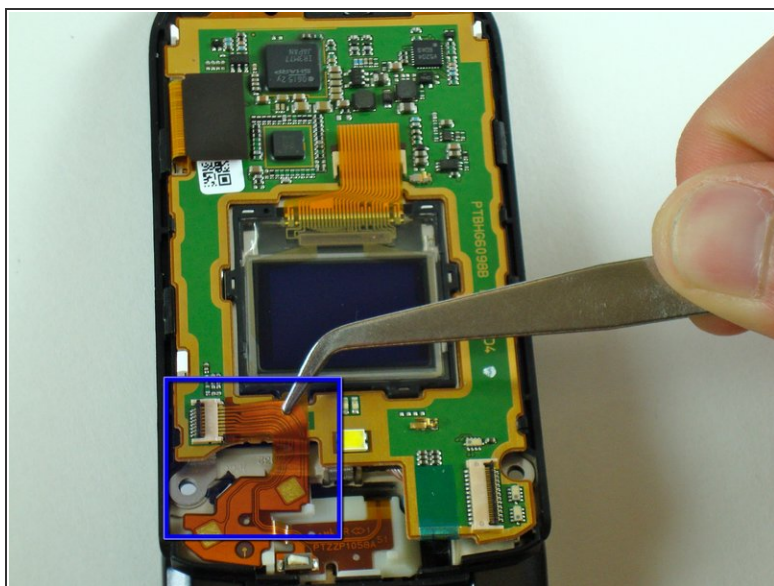  

- Remove the flexible circuit shown using tweezers (or use your fingers if you can manage a firm grip).

## Step 10

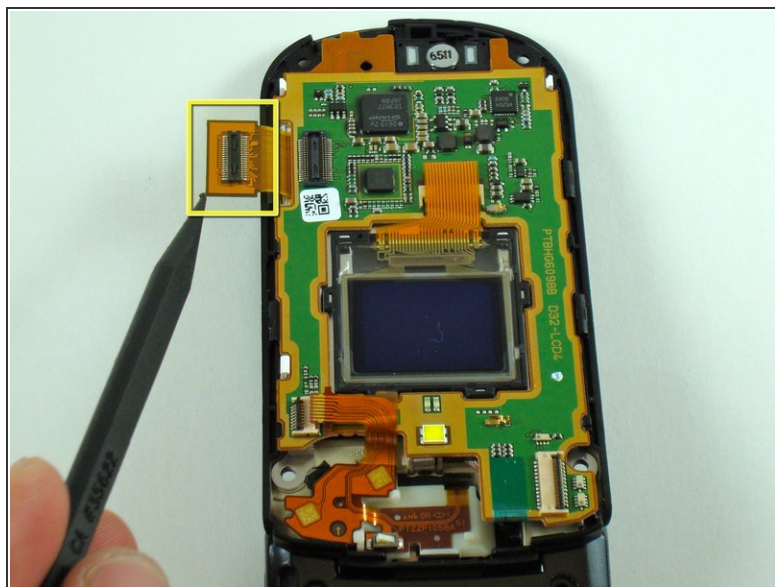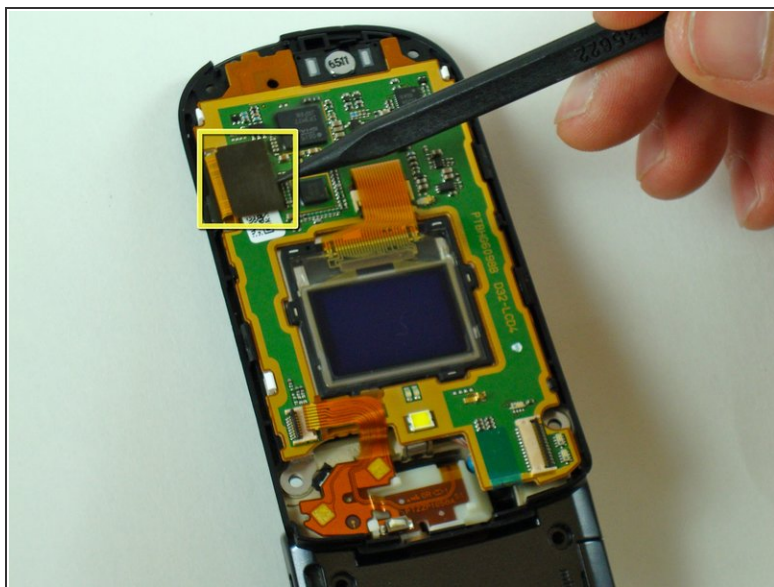  

- Unplug the circuit connector.




## Step 11



 - Grab the phone with both hands.
- Turnover the phone so that the main screen faces you.
- Firmly grasp the edges between your thumbs and fingers.
- Carefully push in the LCD screen from the remainder of the phone.

⚠ Be careful not to break the LCD screen.


## Step 12

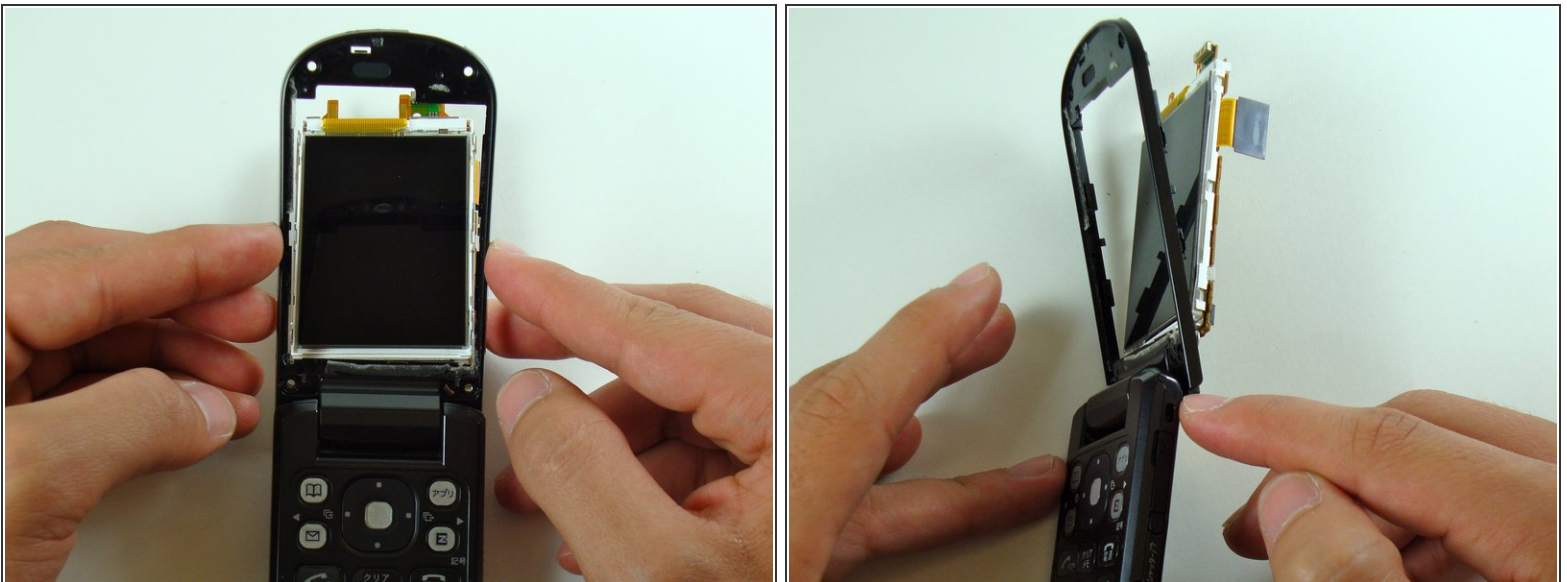

- The LCD screen and circuit board should now be partly detached from the frame.






## Step 13

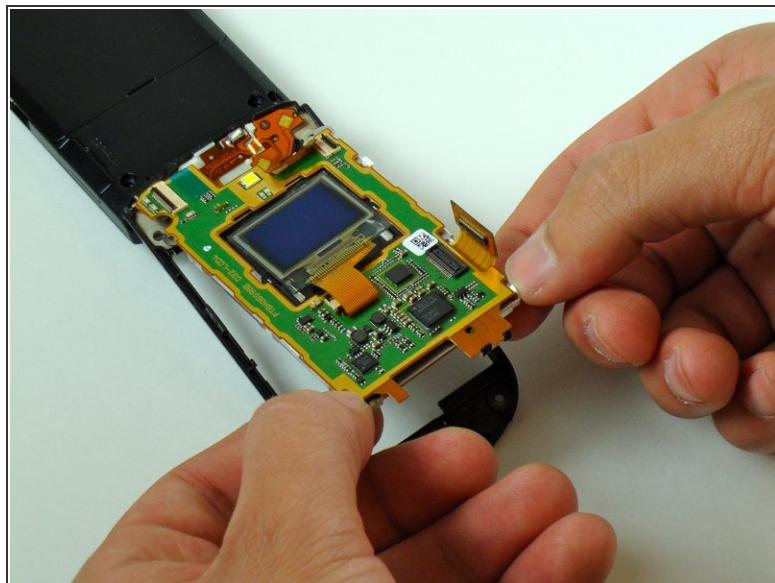 

- Turn over the phone.
- Separate the circuit board from the back of the LCD screen.

## Step 14

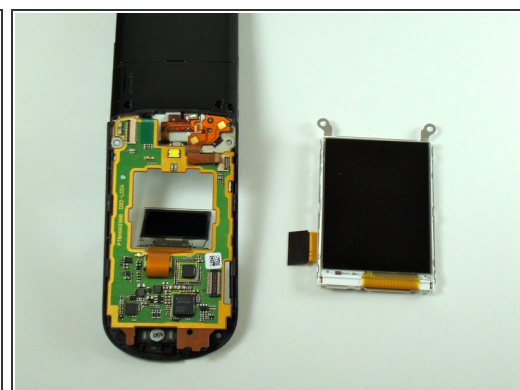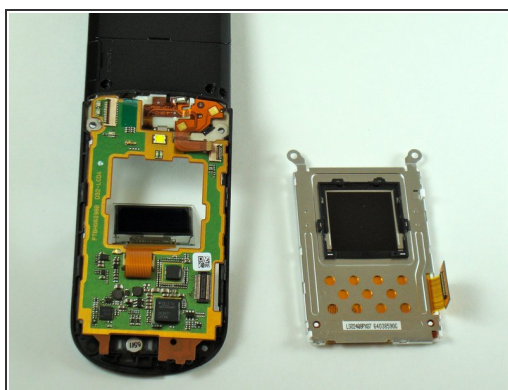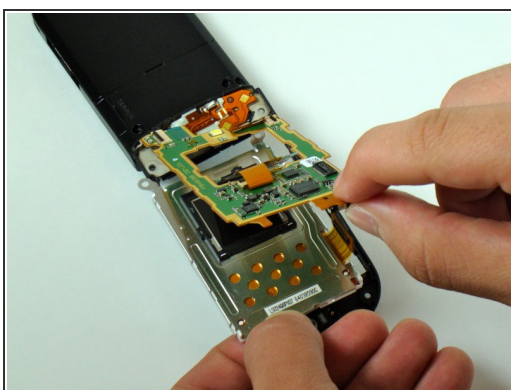   

- Remove the LCD screen from the phone.

To reassemble your device, follow these instructions in reverse order.