



Disassembling KitchenAid Classic Mixer K45SSWH Motor Housing Cover

Removing the motor housing cover is a prerequisite for many internal repairs and replacements on the KitchenAid Classic Mixer.

Written By: Chris Gonzales



This document was generated on 2019-12-14 09:41:42 PM (MST).

INTRODUCTION

In this guide, you will learn how to disassemble the motor housing cover.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)

- [Hammer](#) (1)

- [Flathead Screwdriver](#) (1)

- [Pin Punch](#) (1)

1 mm

- [Spudger](#) (1)


- [Putty knife](#) (1)

Step 1 — Motor Housing Cover



- Using a spudger, gently pry off the aluminum drip ring.

Step 2

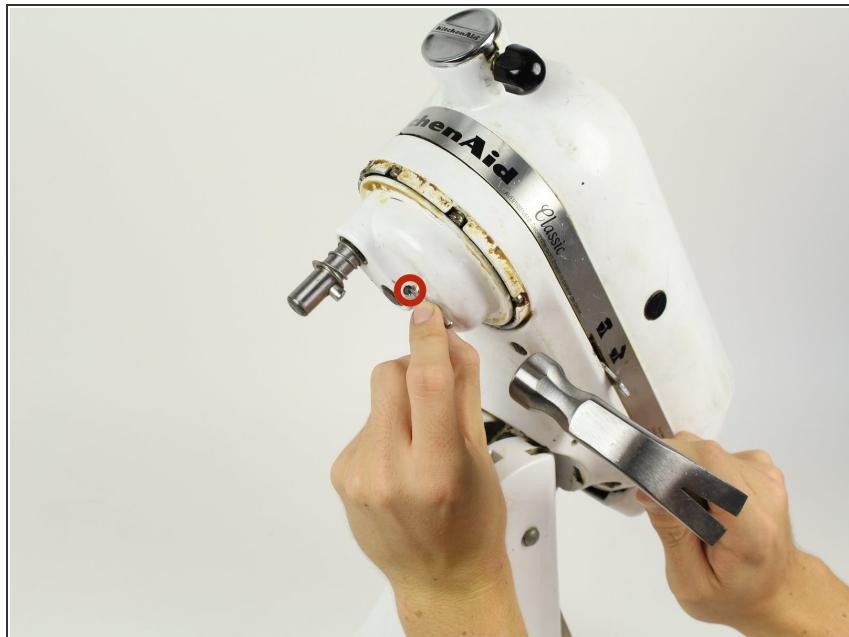

- Using a 4 mm pin punch and hammer, hammer the pin until it is dislodged from the planetary gear cover.

Step 3



- Using a spudger, pry the planetary gear cover from the mixer shaft.


Step 4



- Using a flathead screwdriver, remove the five 28 mm front motor housing screws.
- Using the same flathead screwdriver, remove the two 28 mm locking screws.

⚠ One of the locking screws contains a safety locking mechanism. Do not interchange these screws with the front motor housing screws.

Step 5

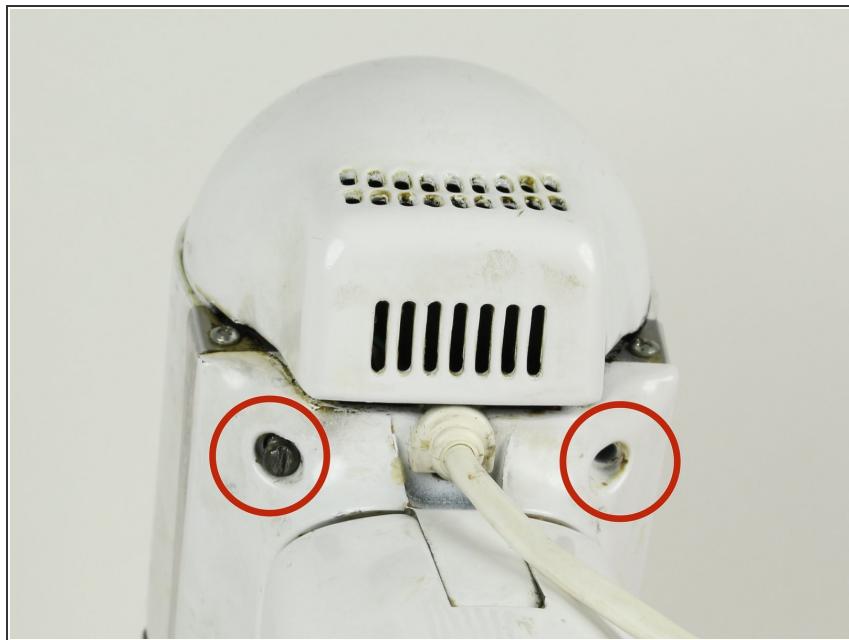

- Turn your device around. Using the same flathead screwdriver, remove the two 28 mm rear locking screws.



 One of the rear motor housing screws contains a safety locking mechanism. Do not interchange these screws with the front motor housing screws.

Step 6



- Using a Phillips #2 screwdriver, remove the 10 mm screw from top of back cover.
- (i)* The rear cover is now completely free from the mixer.

Step 7

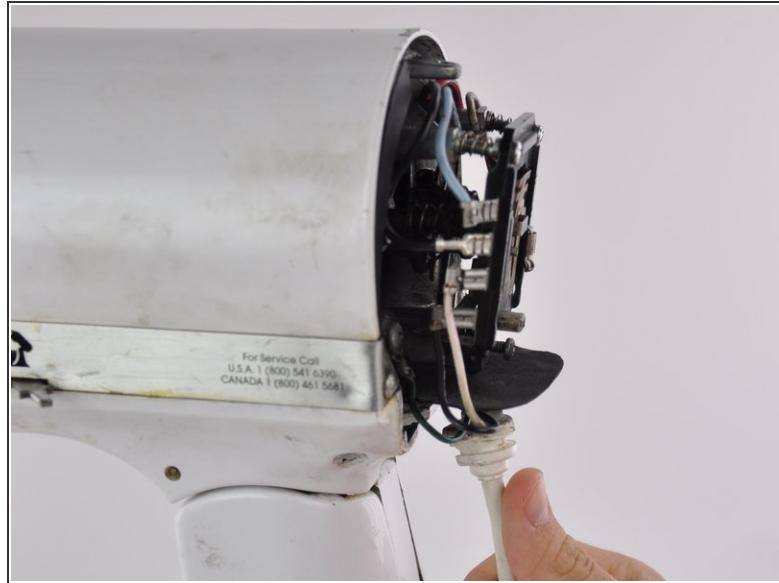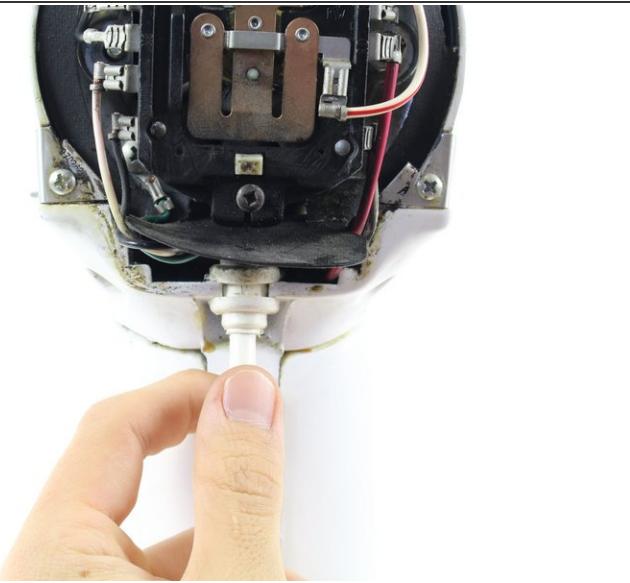

- Carefully pull the power cord from the notch in back of the mixer.
- *(i)* The motor housing cover is now completely free from the base of the mixer.

Step 8



- Lift the motor housing cover from the mixer base.
- **⚠** Be sure to place the cover upside-down to prevent grease from leaking out.

To reassemble your device, follow these instructions in reverse order.