



Disassembling Kodak Advantix F350 Back Cover

This tutorial demonstrates how to remove the back cover from the camera.

Written By: David Cottrell



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Cover



- Turn off the camera.
- Locate the power switch on the front of the camera below the camera lens.
- Slide the switch to the off position.

Step 2




- Locate the 3 screws that hold the back cover to the camera.
 - One screw is located on the film opener side of the camera.
 - The other screws are located on the opposite side of the camera.

Step 3




- Use the Phillips #00 Precision Screwdriver and remove the screws on the back cover.

Step 4

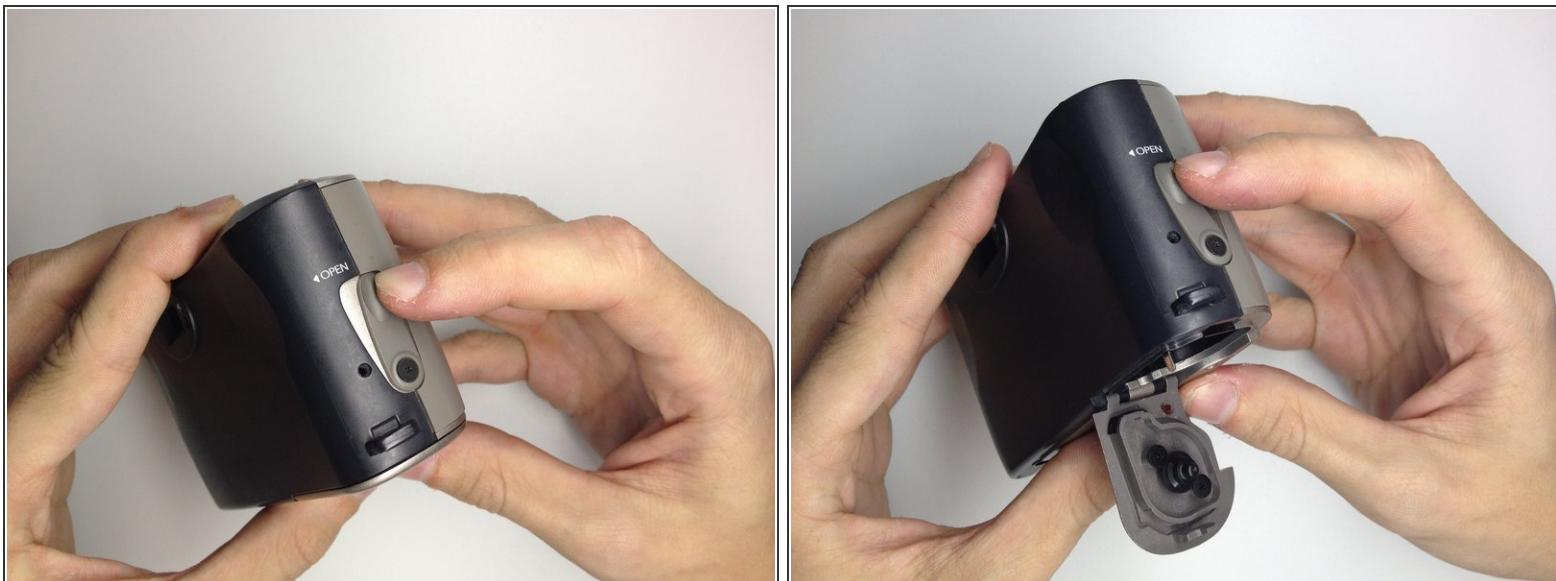


- Open the film door to remove the back cover.
- Slide the film door lever to the left until the film door opens.

Step 5

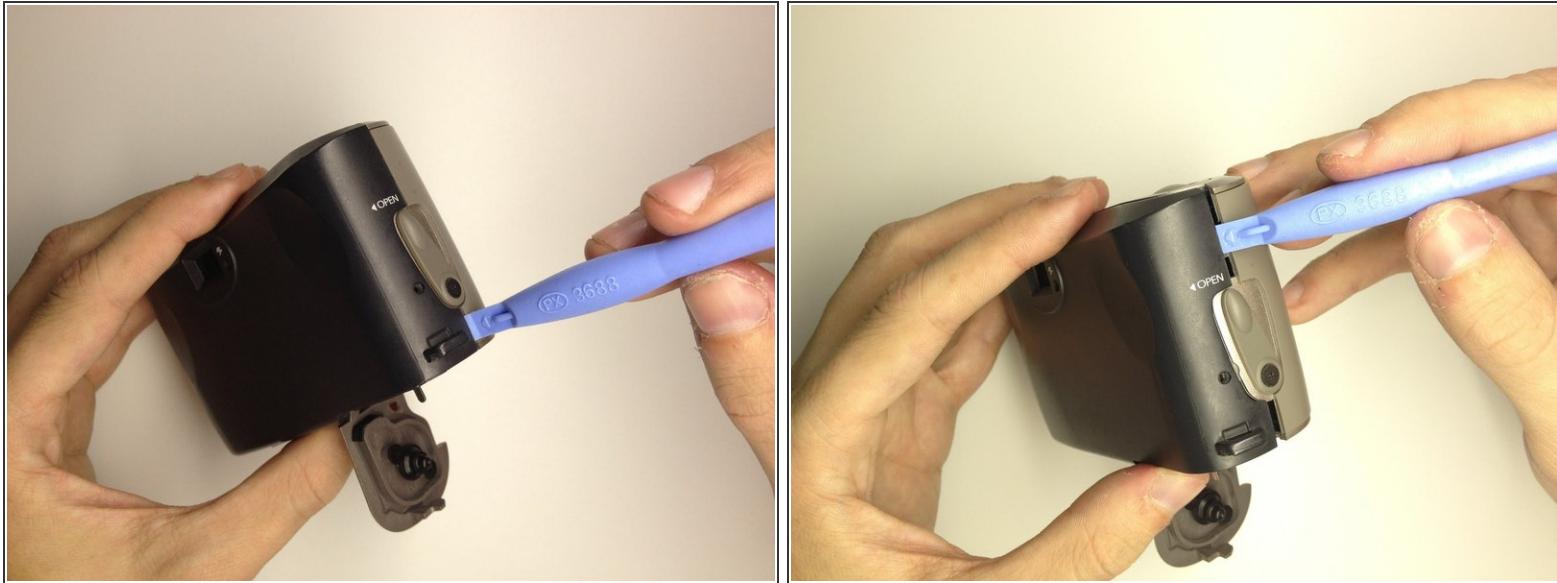

- Use a plastic opening tool to pry the case open until a small gap is present.
- Repeat this process at the top and bottom of the film door to loosen it.

Step 6

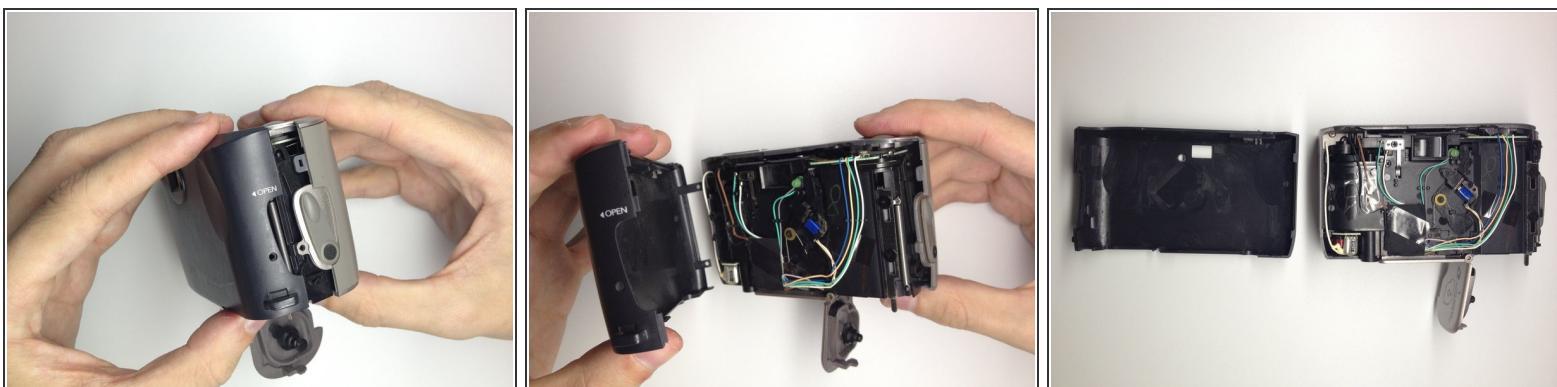

- Grab the top and bottom of the case firmly as shown.
- Gently remove the back of the camera case with a slight twisting motion.

To reassemble your device, follow these instructions in reverse order.