



Disassembling Motorola V180 Connector ribbon/inside screen cover

Written By: Tyler Knisley




INTRODUCTION

Disassembling top half to get to connector ribbon, inside screen, and speaker.

TOOLS:

- [Soldering Iron](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Connector ribbon/inside screen cover

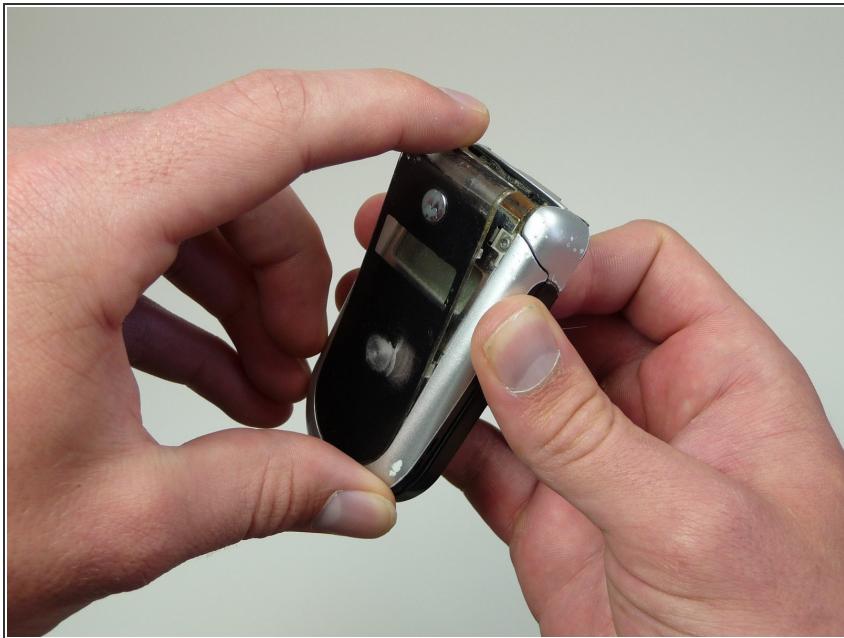

- Pull at top of faceplate, and it will pop off.

Step 2



- Unscrew four screws on front cover.

Step 3



- Slide out metallic silver cover.


(i) This piece is wedged in tight. Try to slide out one hook at a time, instead of both simultaneously.

Step 4




- Use a tool to wedge in between the silver and black parts on the cover.
- Silver part should now snap off.

Step 5

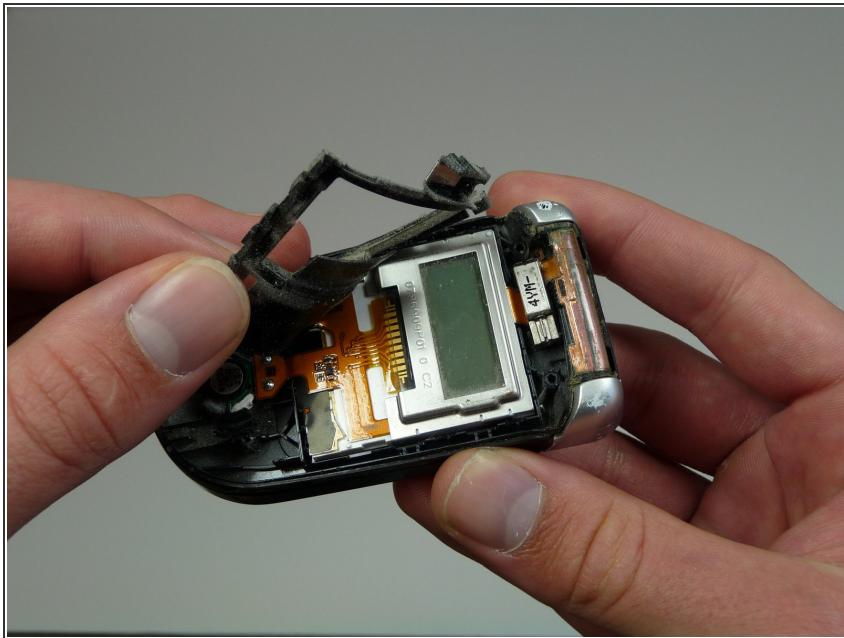

- Black rubber part may now be easily removed.

Step 6

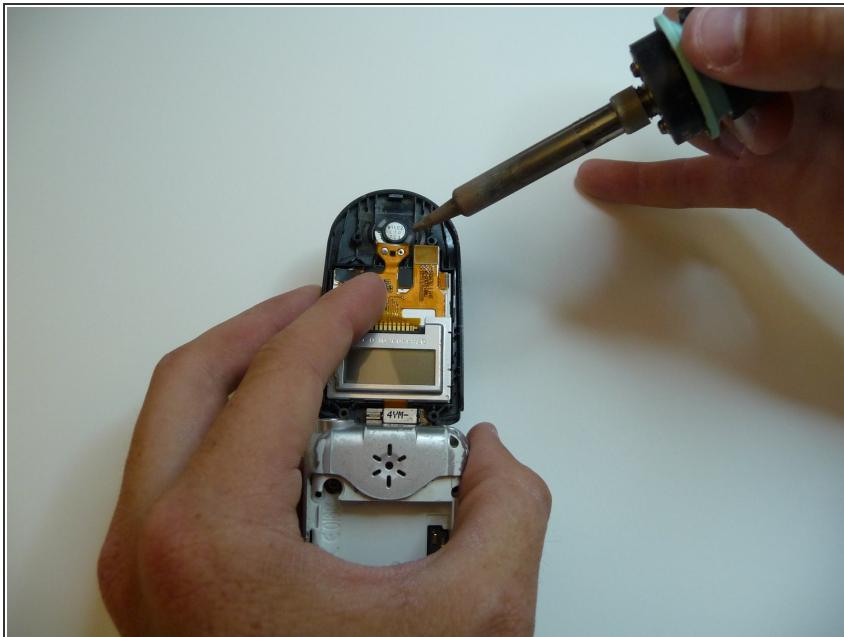

- Use a soldering iron to disconnect the connector ribbon from the phone.

To reassemble your device, follow these instructions in reverse order.