



Disassembling Nerf Recon CS-6 Shell

Disassembly of the gun by splitting the outer shell in half to reach the inner parts.

Written By: Asad Qureshi



INTRODUCTION

This is a prerequisite to replacing any other piece. This guide involves removing most of the screws in the shell and splitting the gun along the middle seam.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Remove Magazine



- ⓘ Skip this step if magazine is already removed.
- Pull slide back.
- Pull backwards on release buttons and slide magazine out.
- Push slide back forward and pull trigger.

Step 2 — Remove Visible Screws



- Use the Phillips #0 Screwdriver to remove these 9 screws.
- All screws marked in red are 9.6 mm Phillips #0 screws.
- Note that left most screw is longer than the rest and is a 18.6 mm Phillips #0 screw.

Step 3 — Remove Hidden Screws



- Pull slide back to reveal more screws.
- Remove these 2 screws.
- Push slide forward.
- Pull trigger to release compression of the main spring.
- Screws are 9.6 mm Phillips #0.

(i) Pulling the trigger will keep spring from launching out of the gun when the two halves are separated.

Step 4 — Remove Plunger Cap



- Remove the screws on the plunger cap.
- Tug the plunger cap off.
- Screws are 9.6 mm Phillips #0.


Step 5 — Remove Slide Screws



- Remove the 2 screws on the slide.
- Screws are 9.6 mm Phillips #0.

Hold the two halves of the gun together to prevent any springs from launching out.

Step 6 — Split the Gun in Half

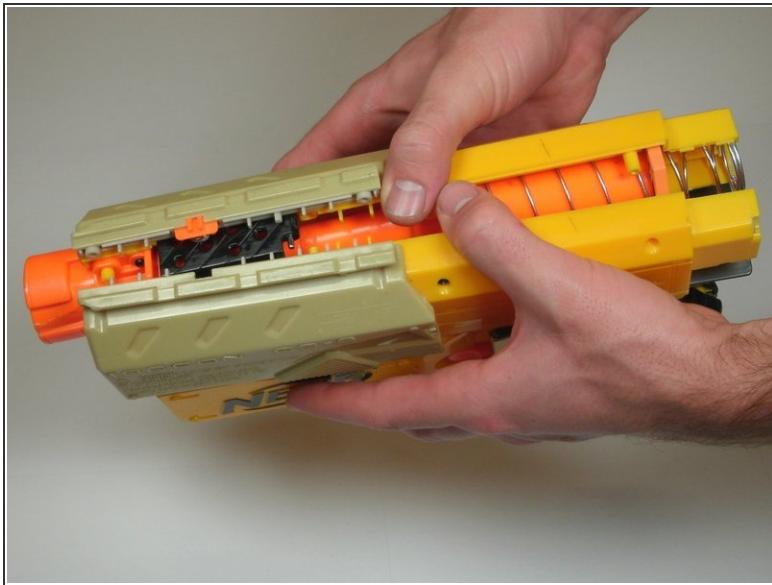

- Pull the gun apart at the middle seam.

 Watch for any springs that might launch out.

To reassemble your device, follow these instructions in reverse order.