


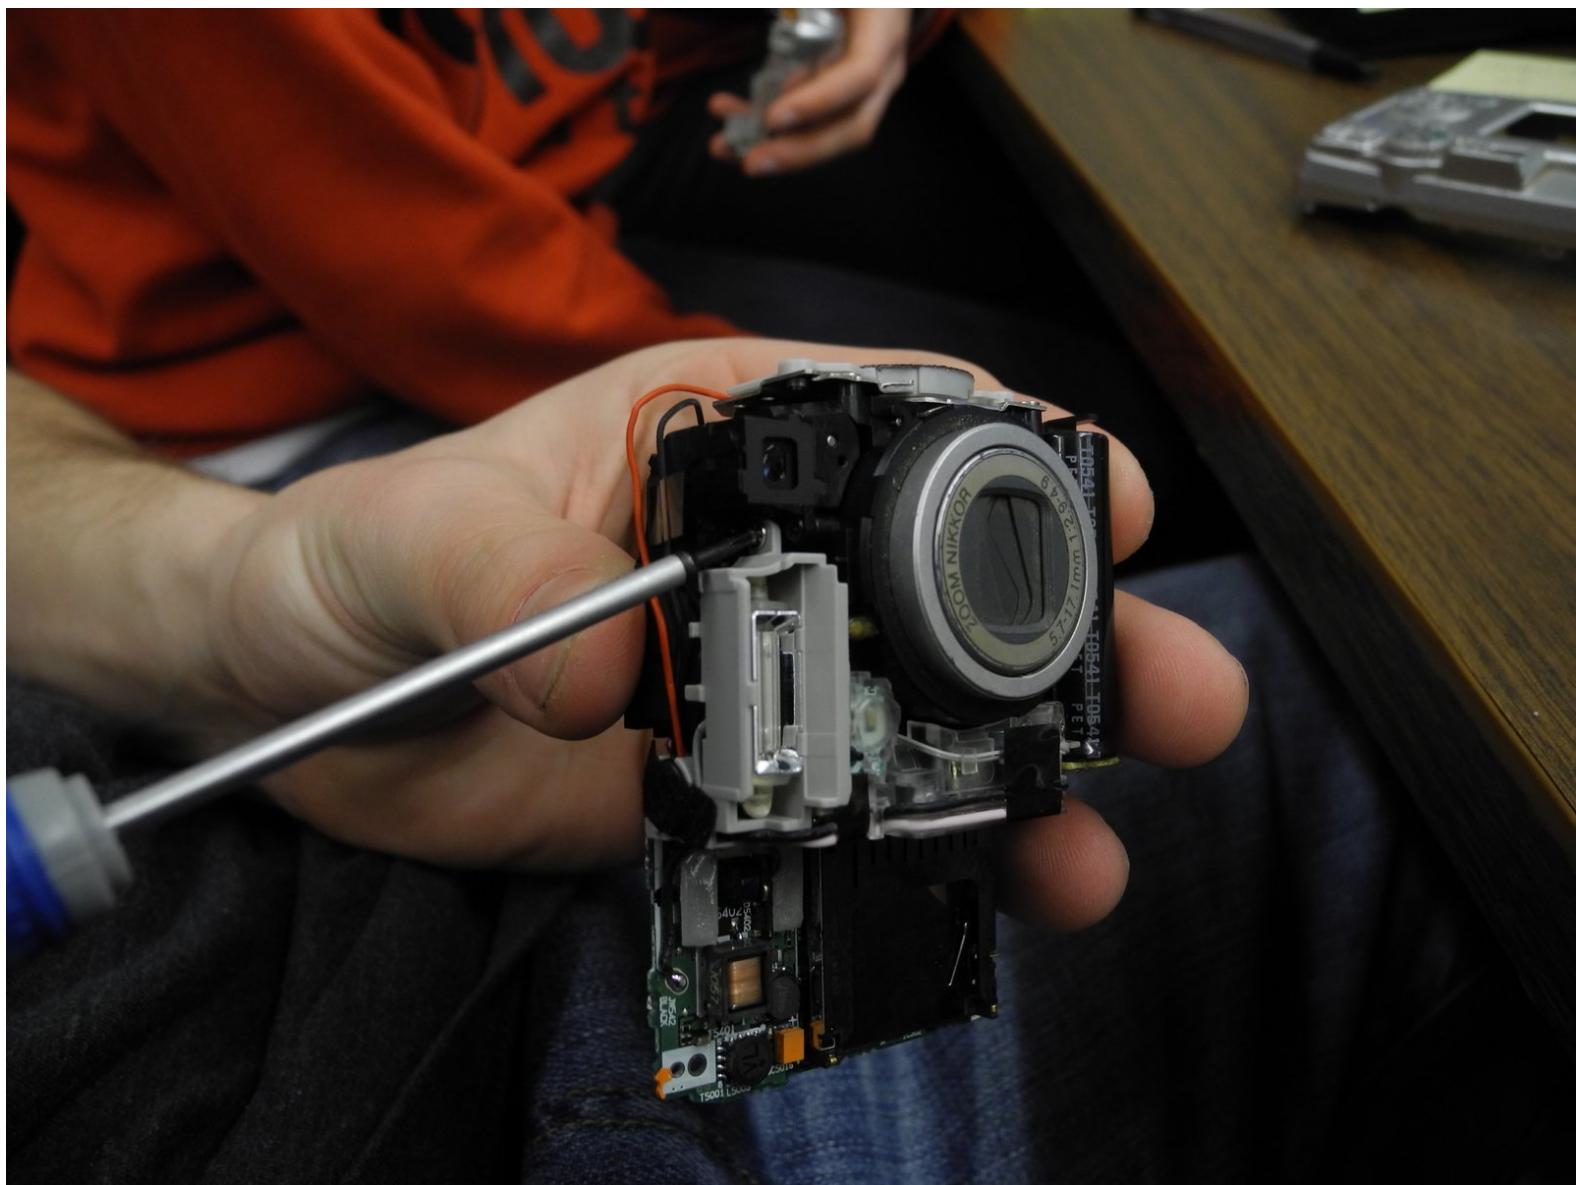

Disassembling Nikon Coolpix 5600 Flash Unit

Learn how to disassemble Nikon Coolpix 5600


Written By: Crista Riedy



 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Remove Screws

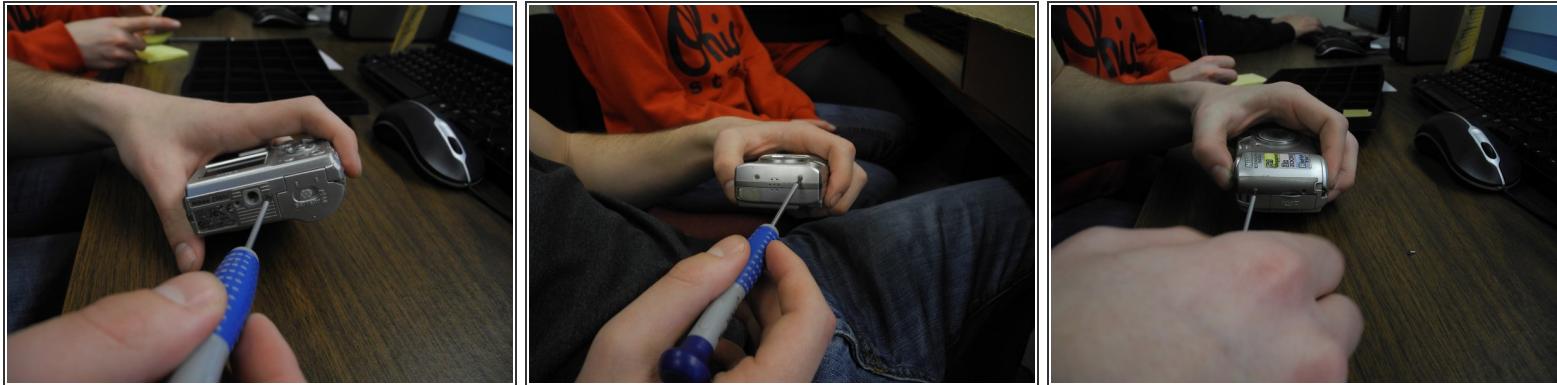

- Remove the screws from the bottom, right, and left side of camera.

Step 2 — Remove back

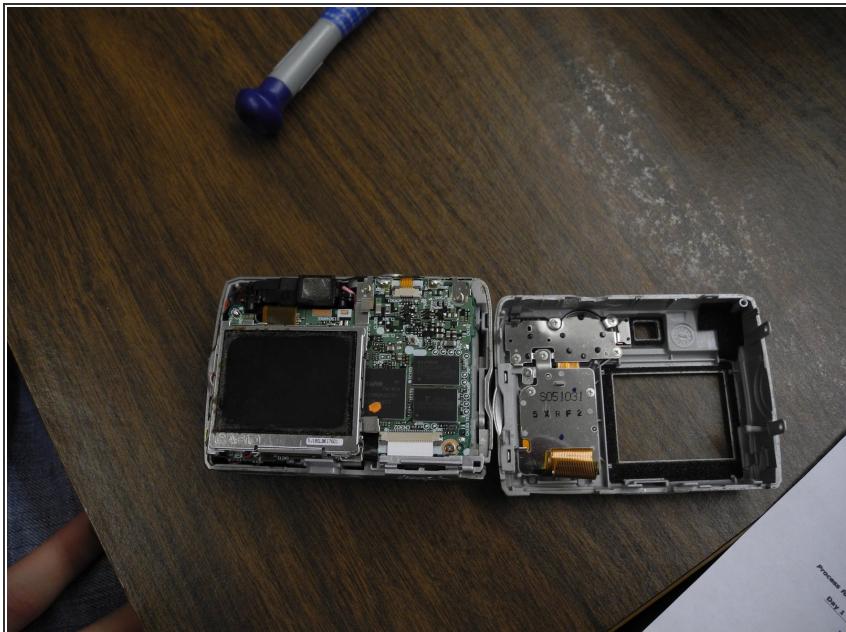


- Remove the back of the camera, this may require force.

Step 3 — Remove Metal Bracket




- Unscrew the right metal bracket of the viewing lens

Step 4 — Remove front of camera

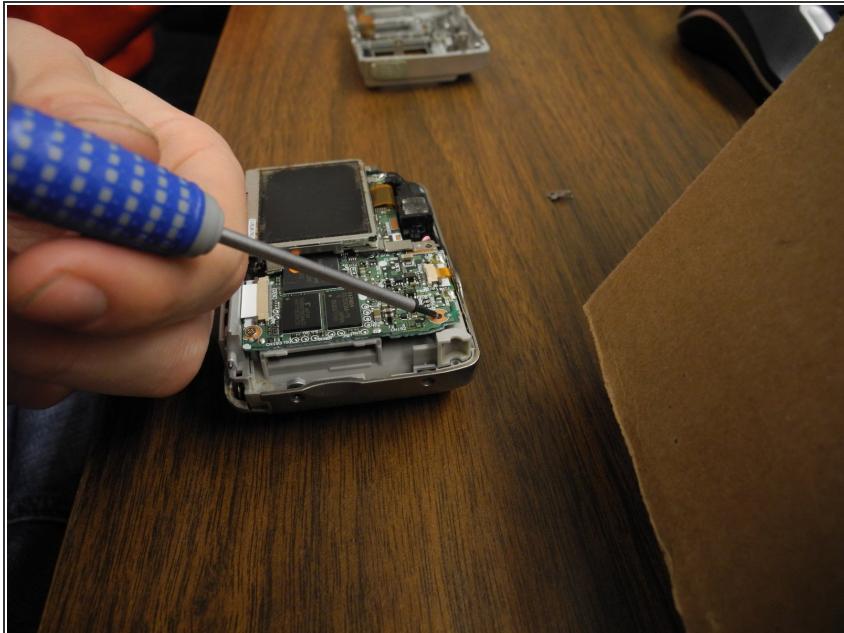

- Unscrew the top right corner screw

Step 5

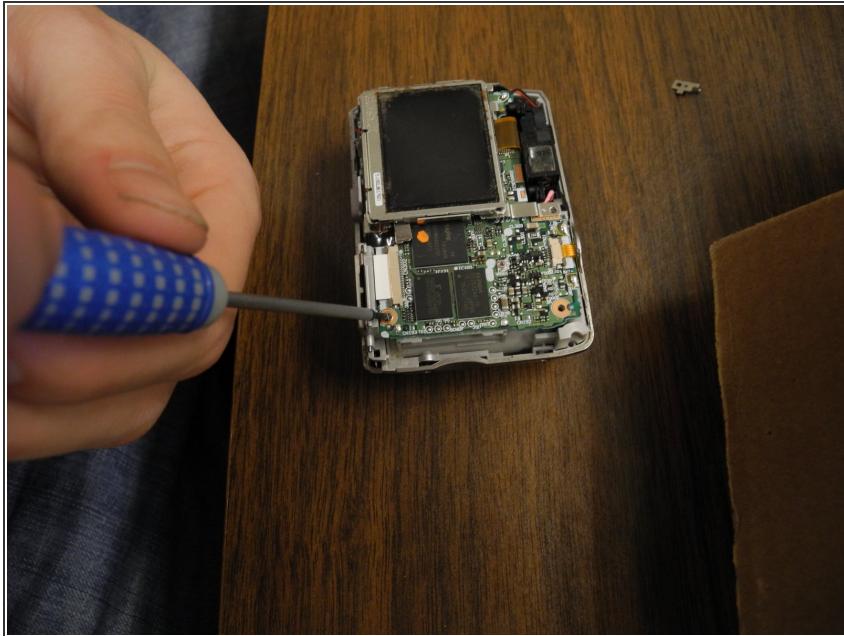

- Unscrew the bottom right corner screw.

Step 6




- Pull the grey circular facet that sits on the bottom outside of the camera off - may have to use force.

Step 7



- Pull the front of the camera off of the mother board.

Step 8 — Disassembling Nikon Coolpix 5600 Flash Unit

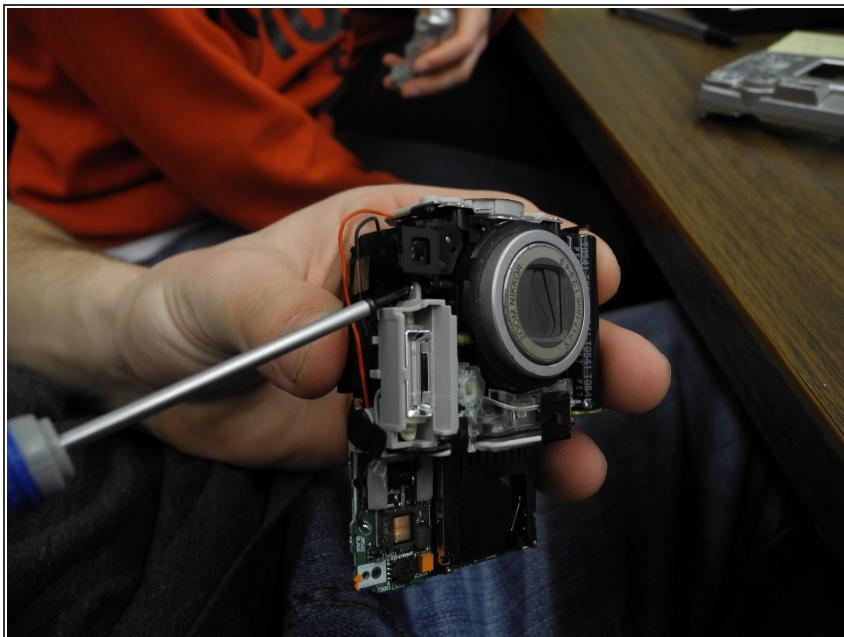


- Unscrew the grey plastic around the screen

Step 9




- Twist the grey bracket counterclockwise to remove it from the silver LCD bracket.

Step 10

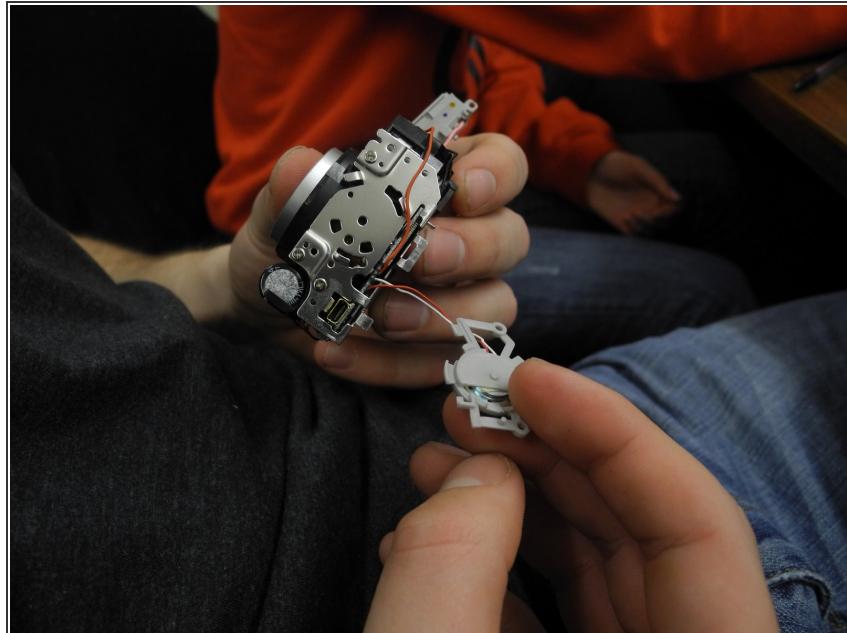

- Maneuver to detach the flash bulb.

Step 11

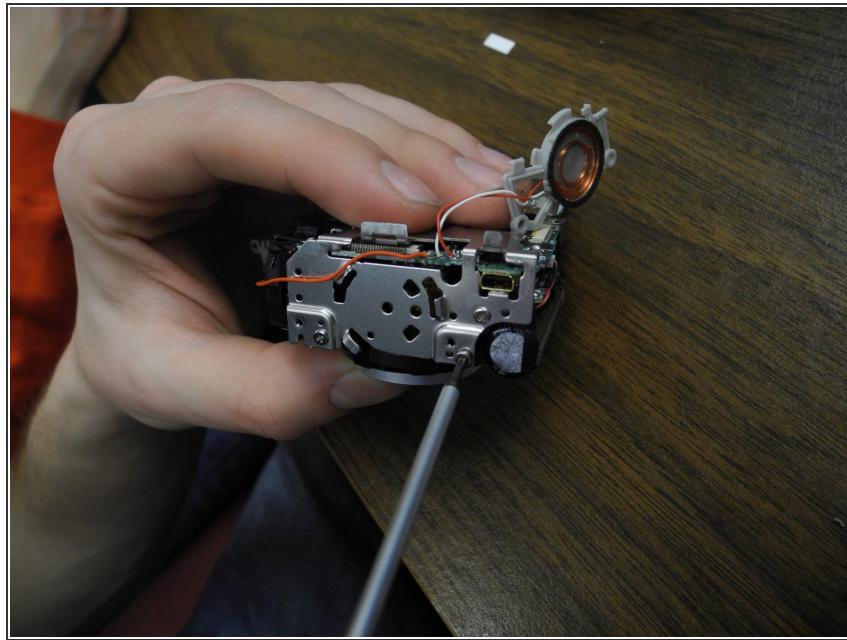

- Unscrew the metal bracket under the lens

Step 12




- Slide the plastic bracket through the metal bracket.

Step 13




- Remove the orange cable from the motherboard.

Step 14

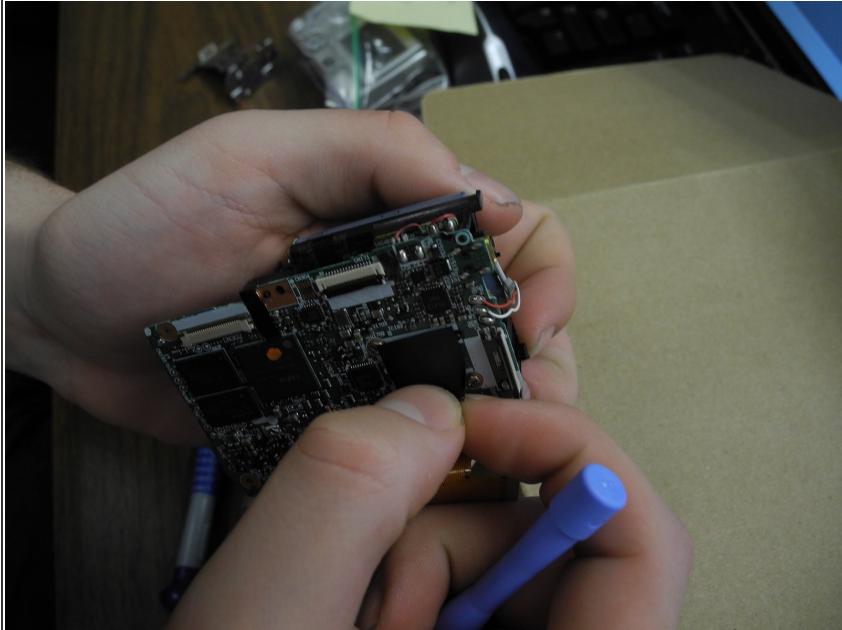

- Pull the black tape off.

Step 15

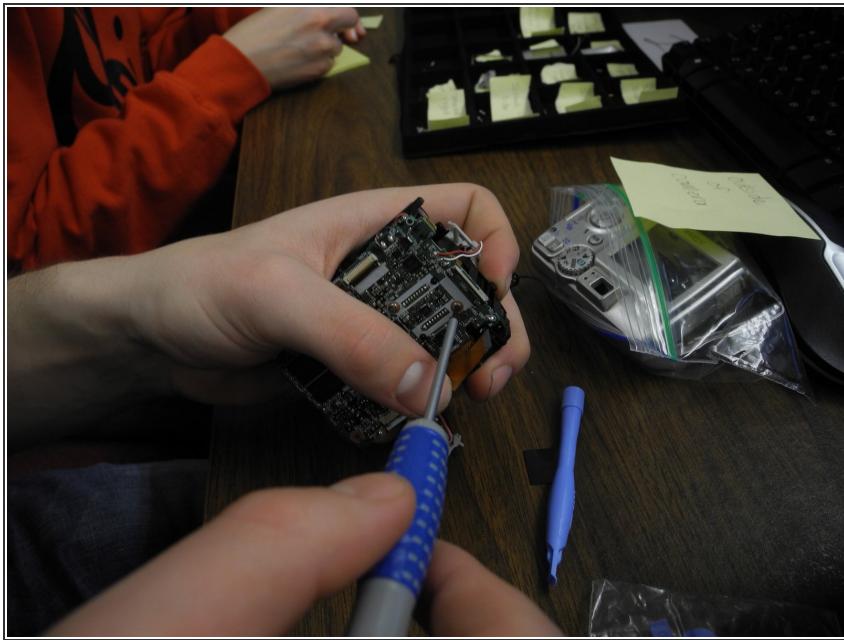

- Unscrew the two screws underneath.

Step 16



- Remove lens

To reassemble your device, follow these instructions in reverse order.