



# Disassembling Nokia 3560 Vibrator

Written By: Sam Ryan



## INTRODUCTION

This guide will show you how to remove the vibrator from the Nokia 3560.

### TOOLS:

- [64 Bit Driver Kit \(1\)](#)
- [Tweezers \(1\)](#)

## Step 1 — Back Cover



- Press down on the release latch on the bottom of the cover.
- Once the latch is released, lift the cover from the phone.

## Step 2 — Disassembling Nokia 3560 Keypad



- Lift the front case off of the phone body.

## Step 3



- Lift the keypad off of the phone.

## Step 4 — Disassembling Nokia 3560 LCD Display



- The screen is held to the body by six screws.

## Step 5




- Unscrew the six screws with a Torx screwdriver (six-pointed star shaped bit).

## Step 6




- Insert a flat screwdriver between the black body and plastic layer.

## Step 7

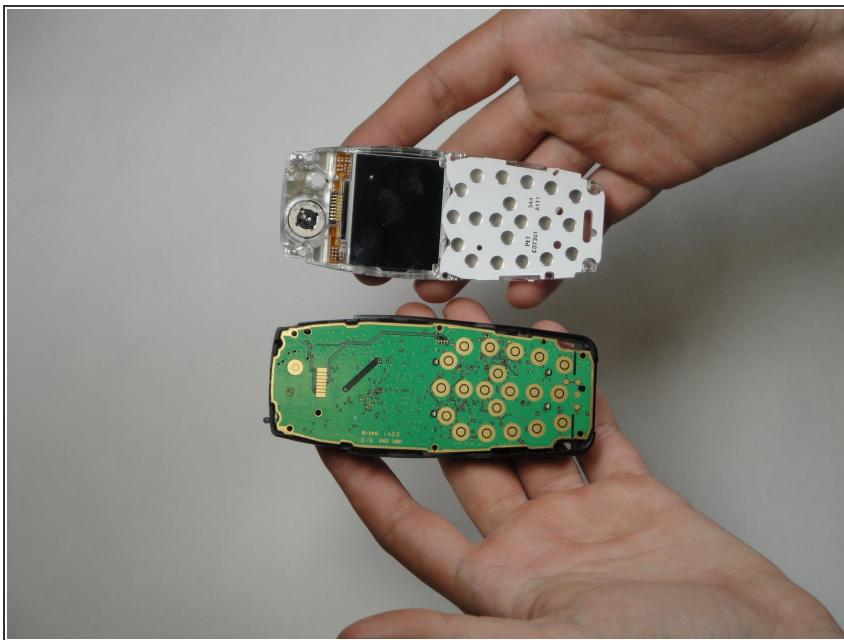

- Pry the layers apart. The LCD and plastic layer will lift out as one piece.

## Step 8 — Disassembling Nokia 3560 Logic Board

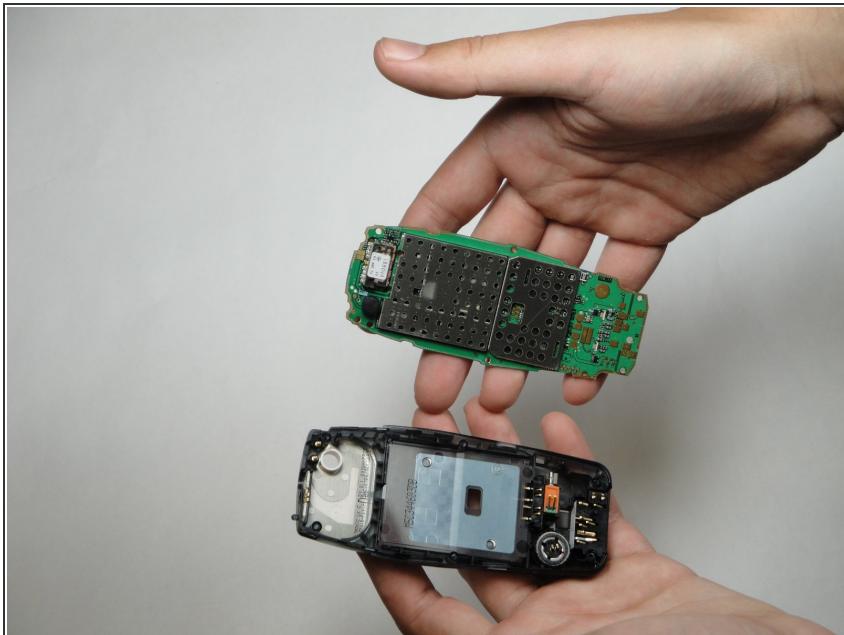

- With the screws removed, the logic board can then be lifted out of the body by hand.

## Step 9 — Disassembling Nokia 3560 Vibrator



- The orange piece is the vibrator.
- It is not fastened by any means.
- Remove with tweezers.

To reassemble your device, follow these instructions in reverse order.