




Disassembling Nokia E61i Front Cover

Written By: Christopher Patton

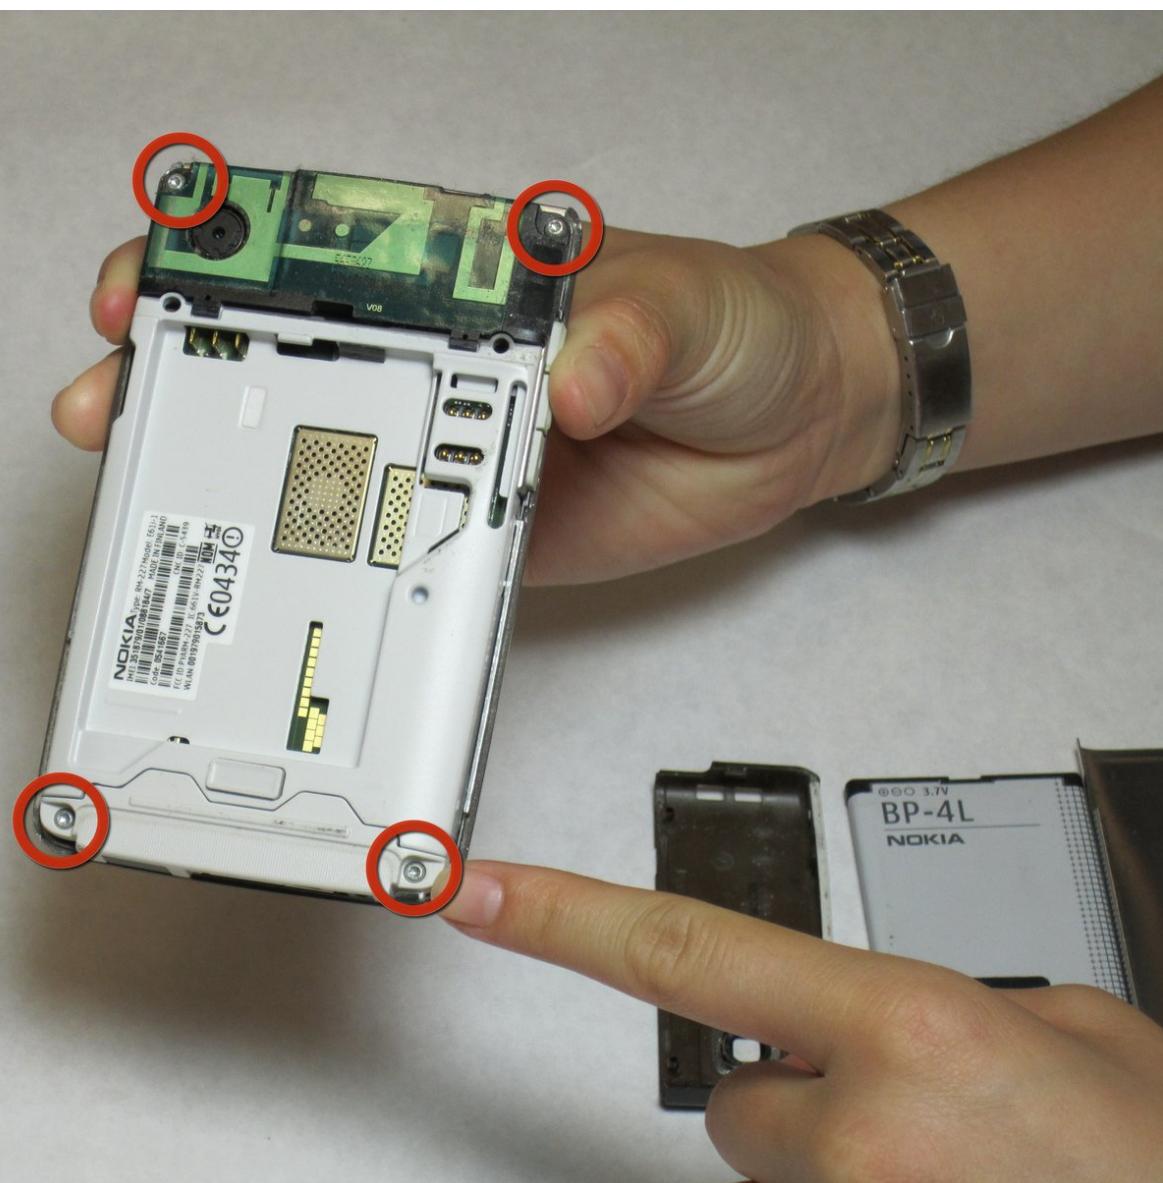

 **TOOLS:**


- T7 Torx Screwdriver (1)

Step 1 — Battery




- To access the battery you must remove the back cover. Press the tab on the bottom of the cover in so that the back cover plate can slide over it.
- Now slide the back cover off of the phone.

Step 2

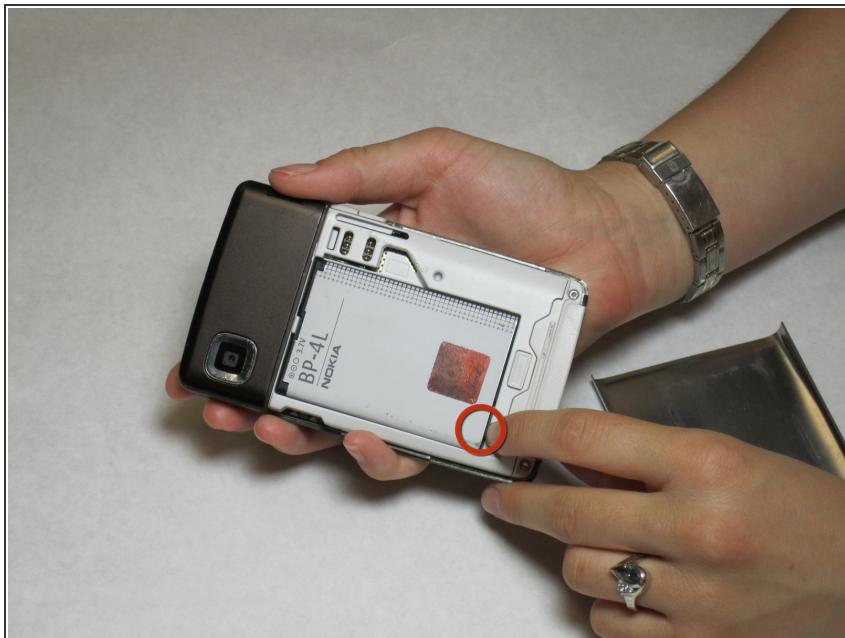

- Once the backplate is removed, look to the bottom-left corner of the phone where there is a spot to remove the battery.



Step 3

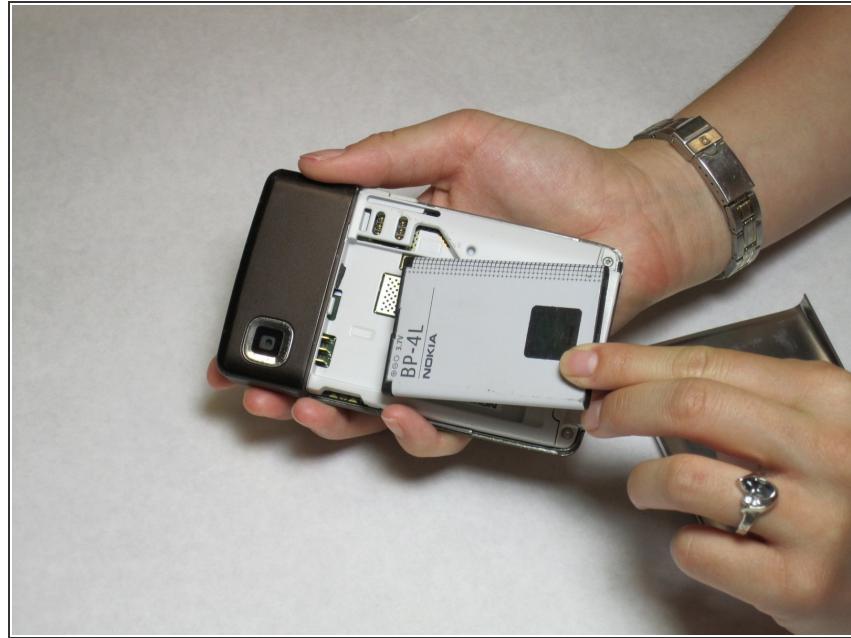

- Use your finger to lift the battery out.

(i) The E61i uses a Nokia BP-4L standard battery.

Step 4 — Front Cover

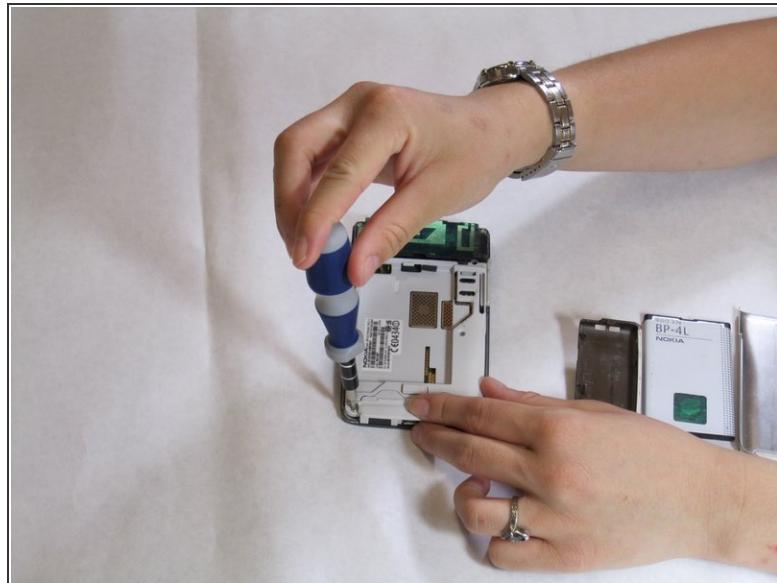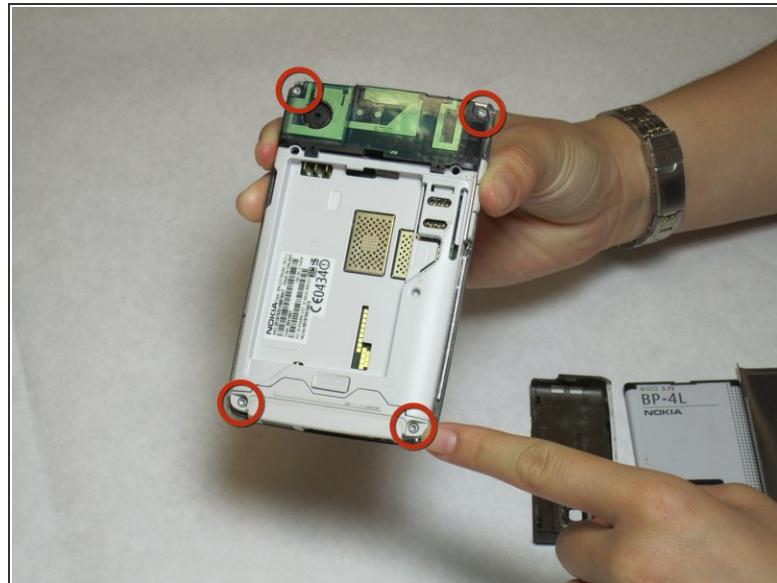

- Remove the four screws securing the front cover to the rest of the phone using a T7 screwdriver.

Step 5



- After the screws have been removed, there is nothing else securing the front cover to the rest of the phone. Simply remove the cover by pulling it up and off.

To reassemble your device, follow these instructions in reverse order.