



Disassembling Nokia E71 Complete disassembly

Written By: Jose Gustavo Abreu Murta



 **TOOLS:**

- [T6 Torx Screwdriver \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [iSesamo Opening Tool \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Disassembling Nokia E71 Complete disassembly





- First remove back cover, battery, chip and memory card .

Step 2



- Remove 4 Torx T5 screws.

Step 3

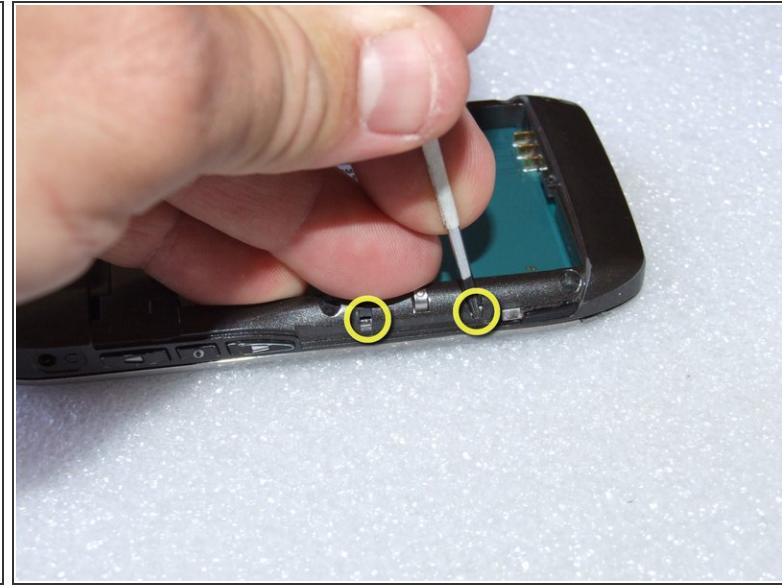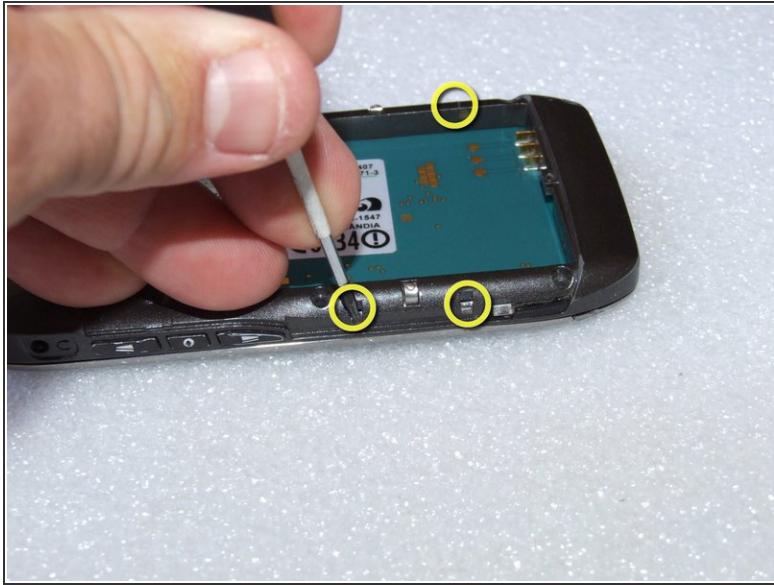

- Press these four latches (each side has two) to open front cover.

Step 4



- Carefully remove the front cover with blade tool.

Step 5





- Carefully remove the bottom cover. This cover has no screws, only latches.

Step 6



- Front cover, rubber keyboard and bottom cover removed.

Step 7

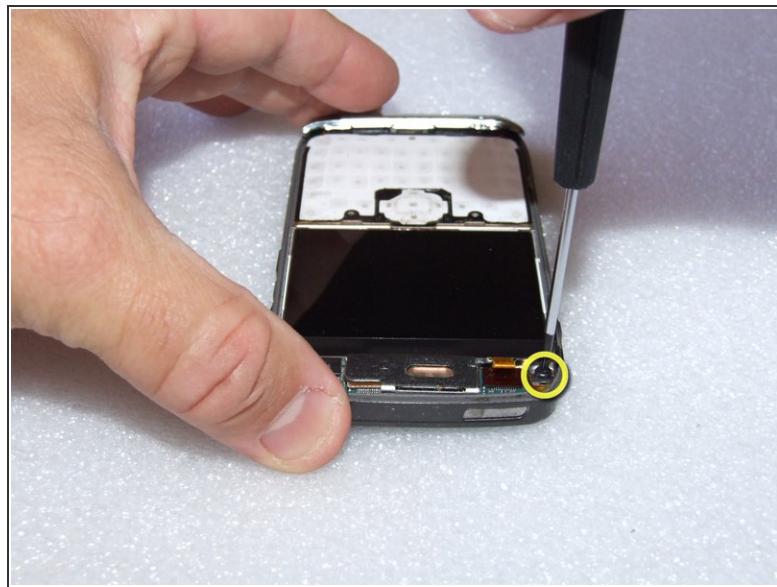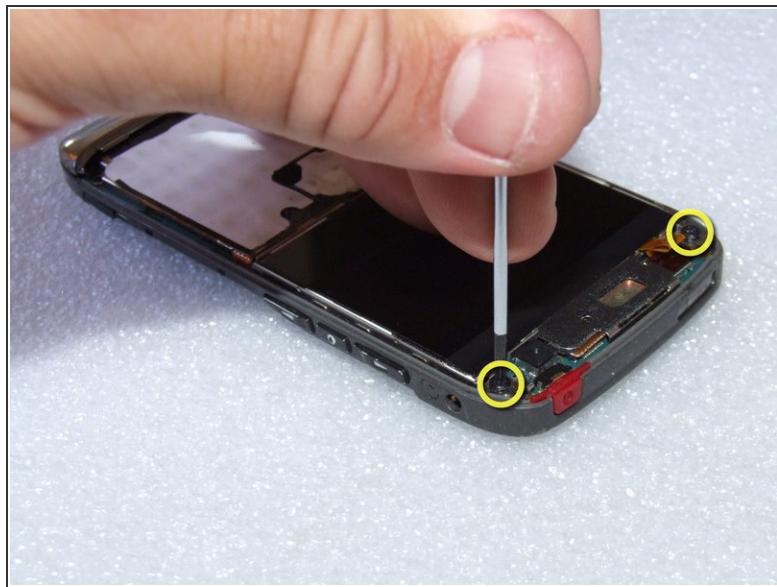


- Remove these two Torx T6 screws at top of the smartphone.

Step 8



- Carefully remove the assembly. Dont forget to move away the plastic clip holding the assembly down. You can find this in the center on the bottom.

Step 9

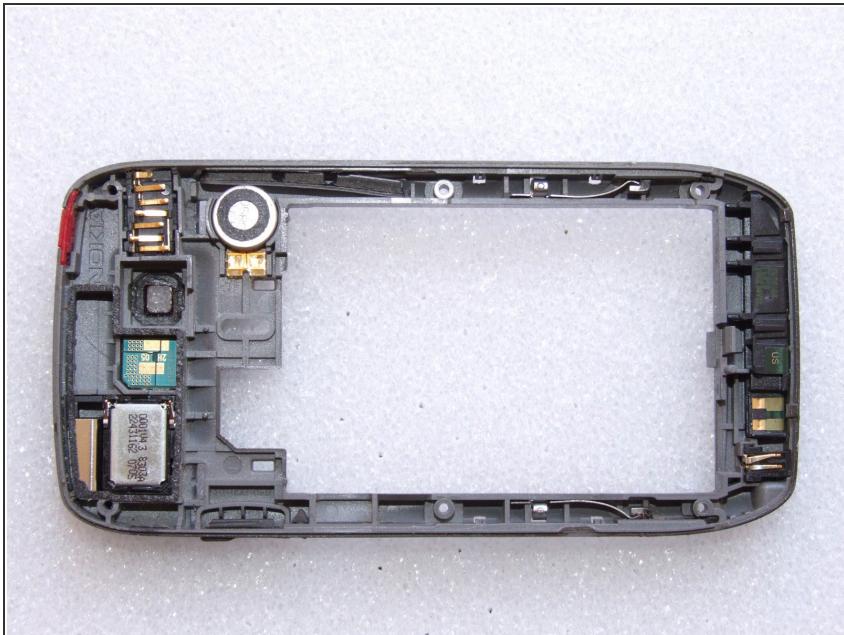


- Base assembly with small connectors and parts.

Step 10




- Remove the LCD connector.

Step 11

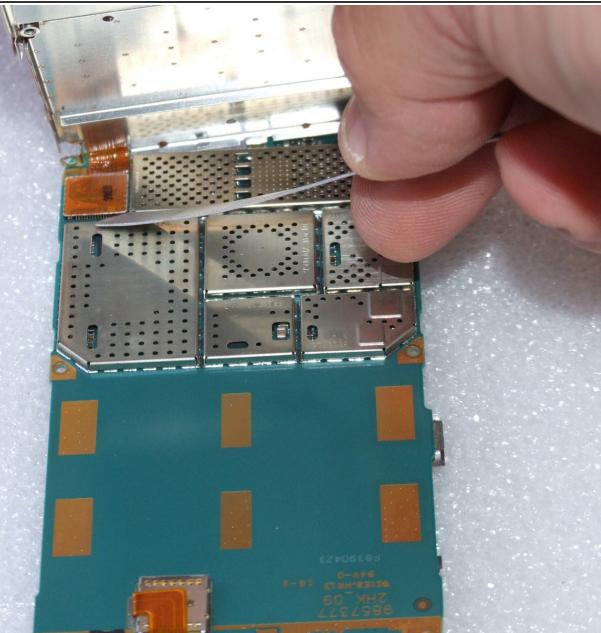

- Carefully open the LCD and keyboard assembly, and remove keyboard connector.

Step 12

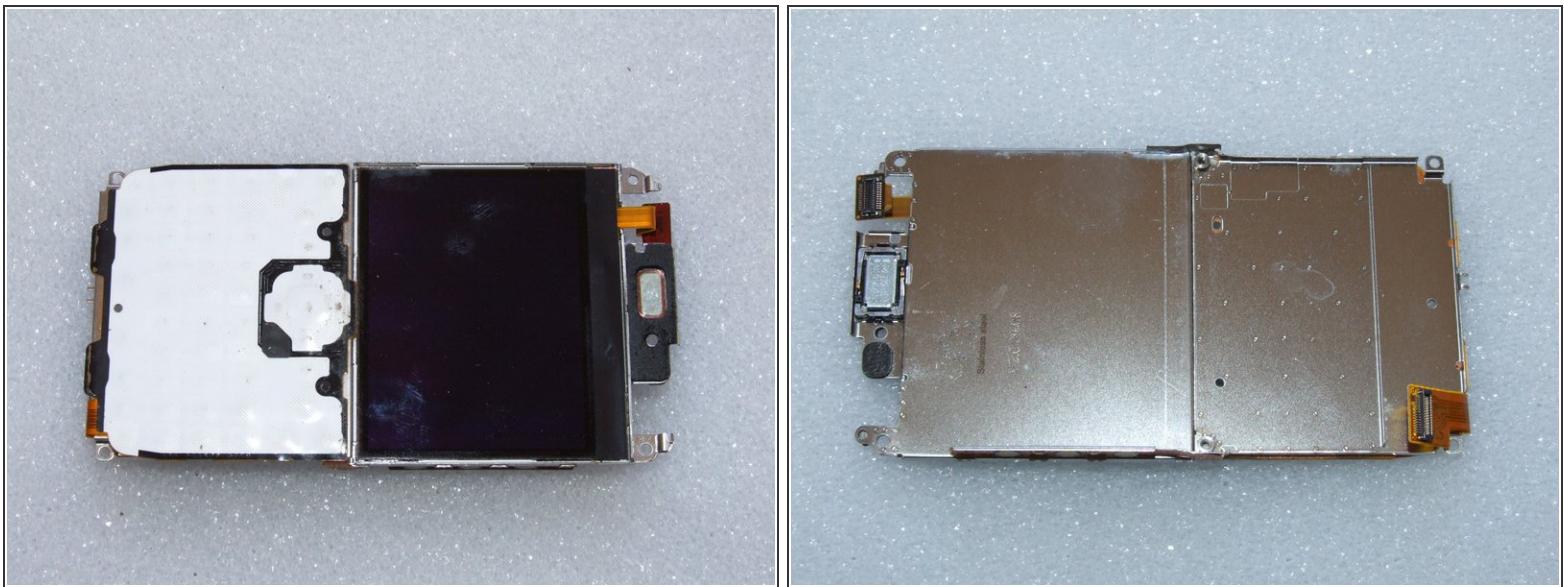


- Both sides of the LCD and keyboard assembly removed.

Step 13



- I think that two small blocks are the gps antenna.

Step 14

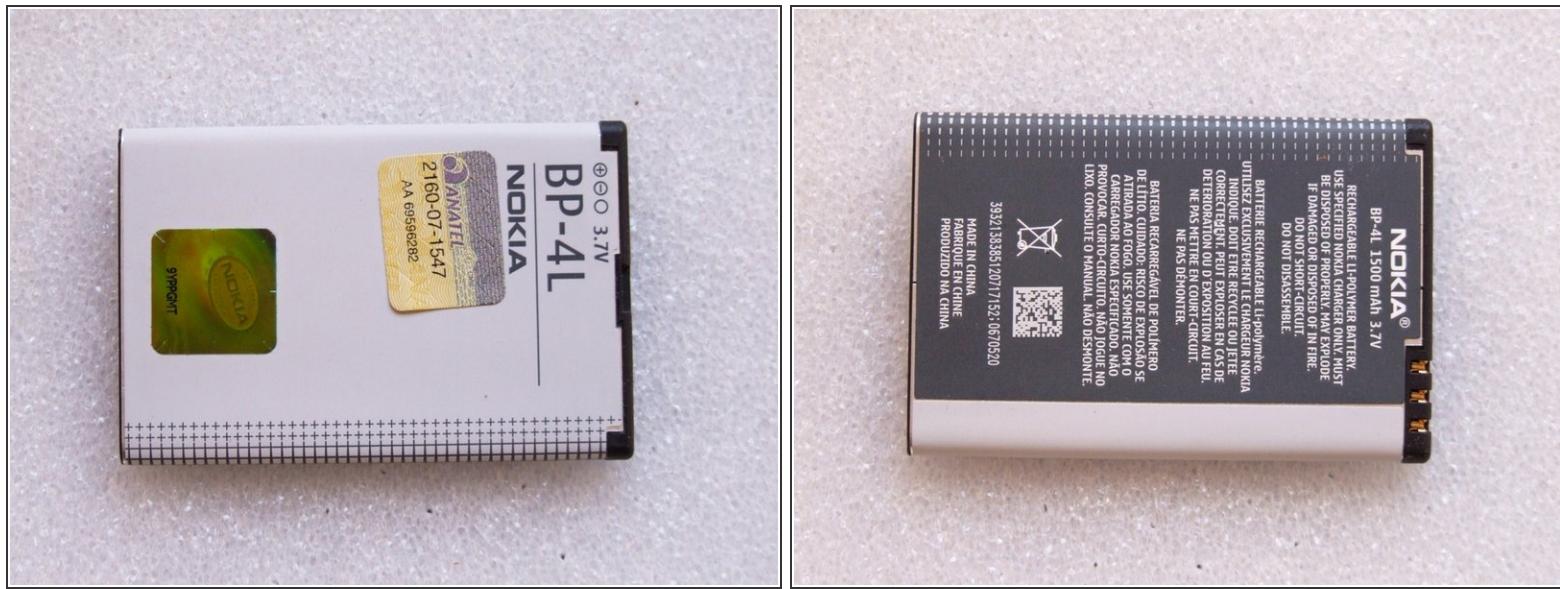

- Both sides of battery - for reference only.

To reassemble your device, follow these instructions in reverse order.