



Disassembling Olympus Stylus 1010 Case

This guide gives instructions on how to remove the front display from the Olympus Stylus 1010.


Written By: Max McIntyre



 **TOOLS:**

- **Phillips #00 Screwdriver (1)**

Step 1 — Disassembling Olympus Stylus 1010 Case

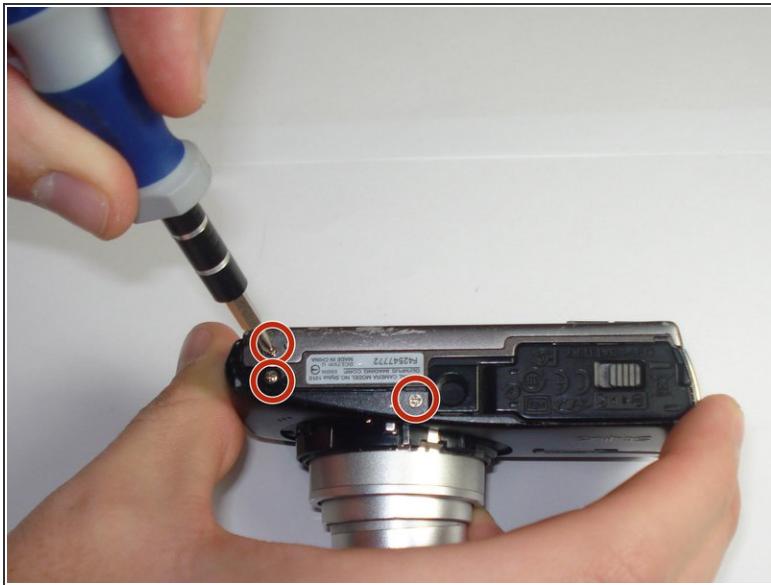

- Remove the five Phillips #00 bottom and right side panel screws.

Step 2



- Remove the right side panel by pulling off the large silver piece.

Step 3



- Remove the remaining three Phillips #00 side and front panel screws.

Step 4



- Using your thumb and forefinger, pull off the silver name plate and silver "T-shape" piece.

Step 5




- Remove the black front panel by sliding it towards the lens and then pulling it up off of the camera.

Step 6



- Remove the three Phillips #00 screws from the front of the camera.
- Using a spudger, lift the two tabs to separate the case—one tab on top and one tab on the right side.

Step 7

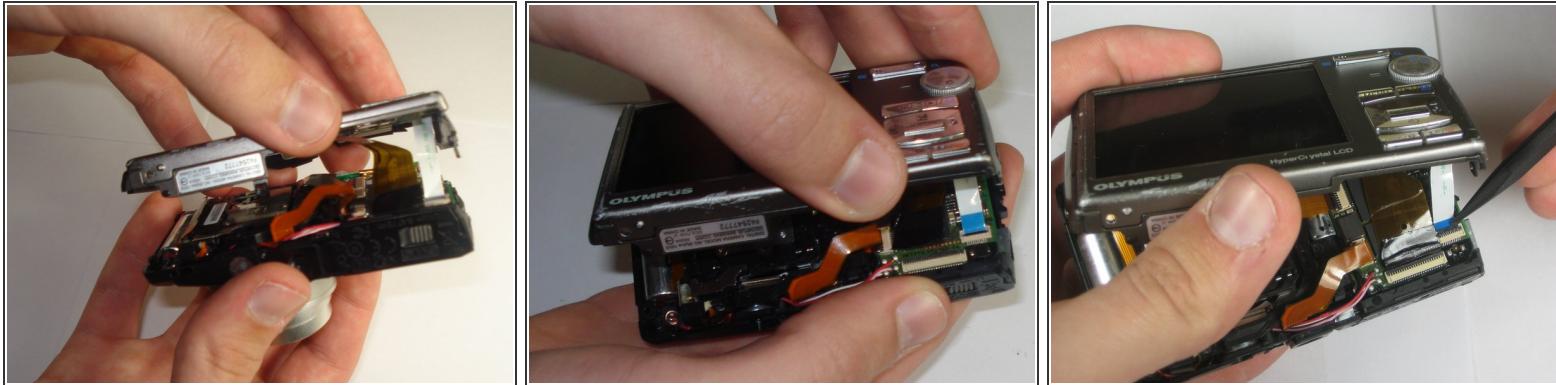

- Using a plastic spudger, lift up the black clips.
- Still using the plastic spudger, detach the gold connector strip and white connector strip.
- Using both hands, pull the camera apart into two pieces.

To reassemble your device, follow these instructions in reverse order.