



Disassembling Olympus Stylus 725 SW Front Panel

Written By: Bobby Hodges




INTRODUCTION

Use this guide to remove the front panel to access the components inside.

TOOLS:

- [1.5mm Hex Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Disassembling Olympus Stylus 725 SW Battery

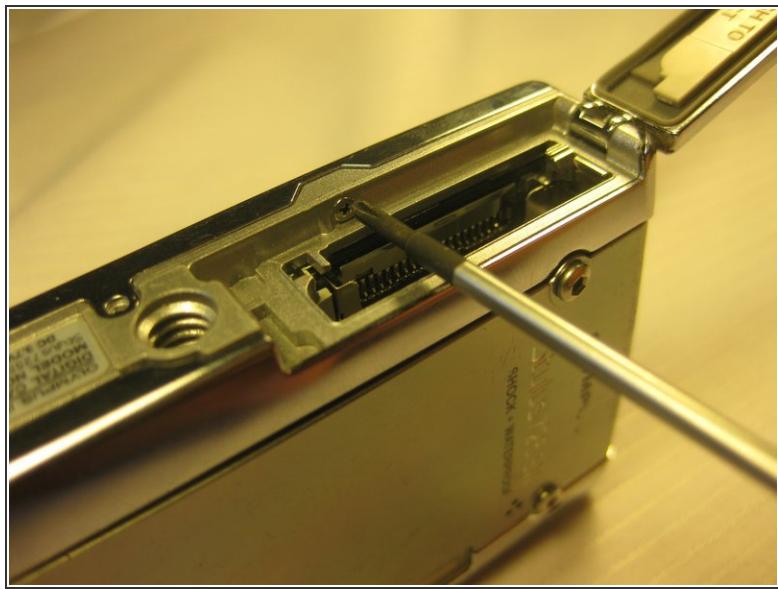

(i) The battery is located on the bottom of the camera.

- Remove the battery by placing your thumb on the bottom flap and sliding the release button away from the side the lens is on. (The screwdriver is simply used as a reference point, no screws need to be removed)
- Charge the battery for 60-90 minutes if your battery is dead.

⚠ When installing a charged battery, align the battery appropriately, with the positive signs and negative signs lining up.

Step 2 — Front Panel



- Remove the top screws using a 1.5 mm screwdriver.
- Remove the single side screw located on the side of the camera where the tab is, using a #00 screwdriver.

To reassemble your device, follow these instructions in reverse order.