




Disassembling Panasonic GU87 Back Speaker

How to disassemble the speaker from the phone

Written By: Van

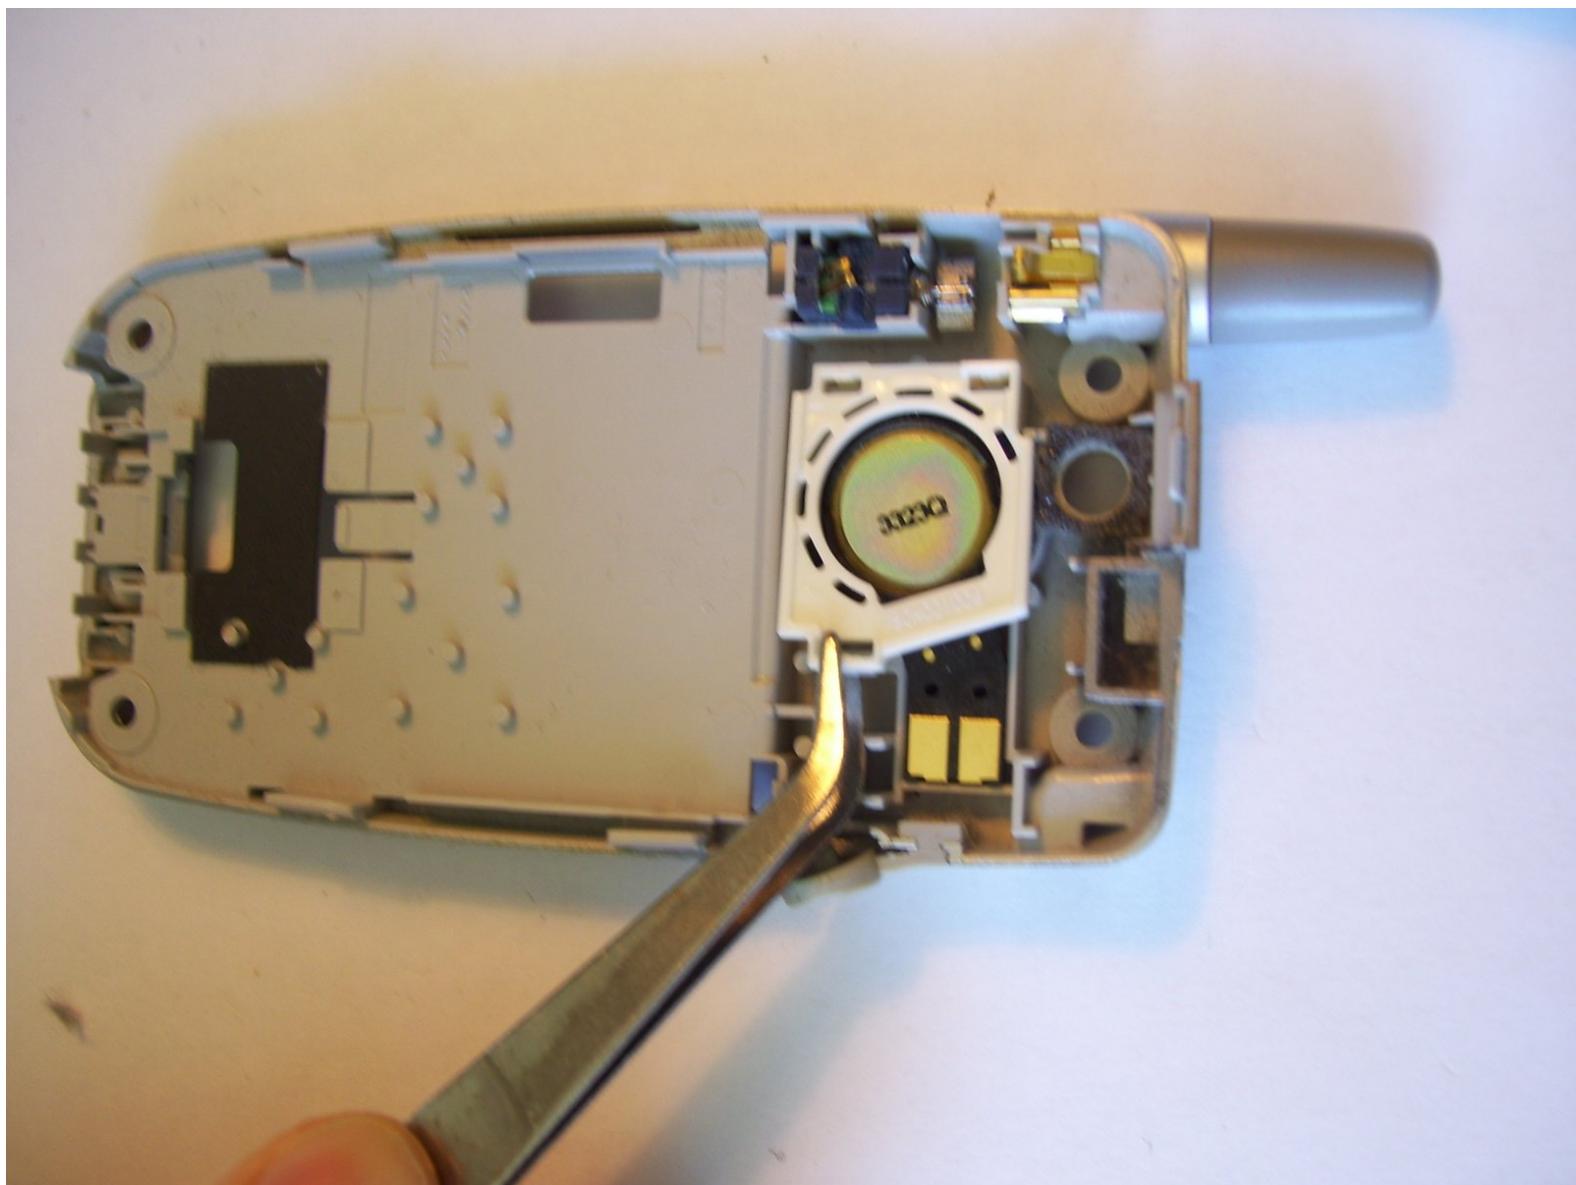

 **TOOLS:**

- [Tweezers \(1\)](#)
- [Tri-wing Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Place your hands on the phone as shown in picture. Slightly pull the tab away from the phone with your thumb.

Step 2



- Lift the battery up from the phone as shown. Replace with a new battery if the old battery has become worn out.

Step 3 — Disassembling Panasonic GU87 Back cover



- Remove the rubber covers with tweezers.

Step 4




- Remove all 4 screws from the back of the phone.

Step 5




- Use a plastic opening tool to separate the front and back casing.

Step 6

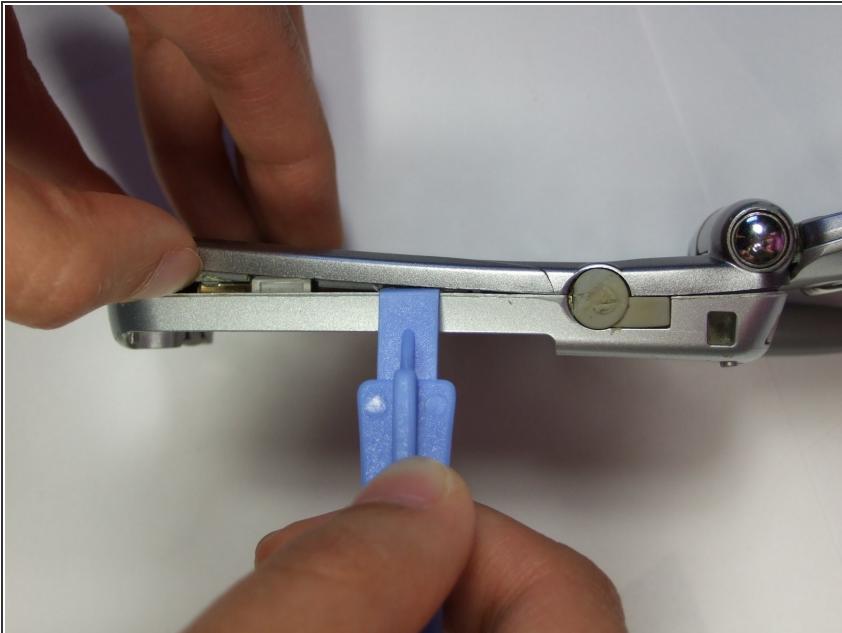


- Put the tool in friction tabs and force down to open the cover as shown in the picture.
- Carefully pop it open the rest of the way with your fingers.

Step 7 — Back Speaker

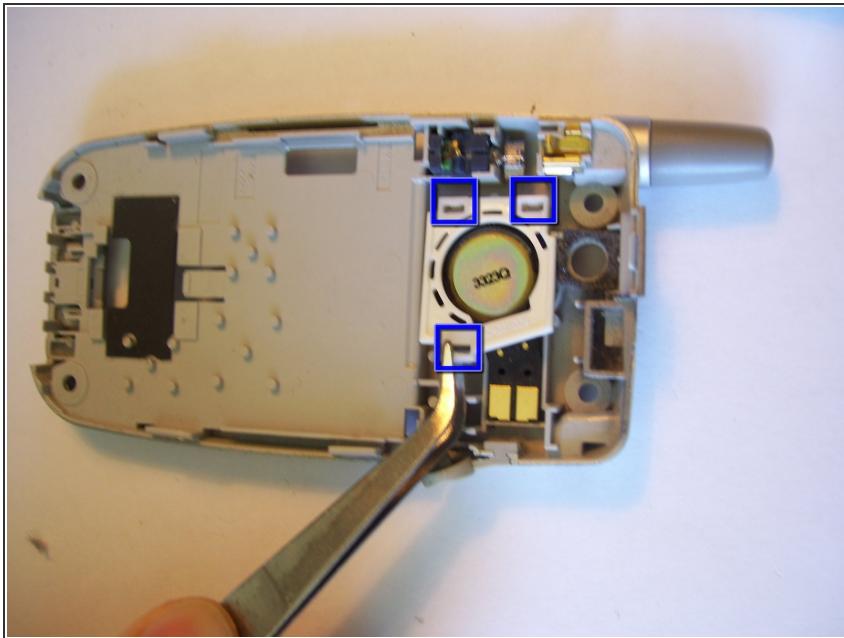

- Remove the three tabs on the white plastic square.
- Lift the square plastic out from the speaker to remove

Step 8

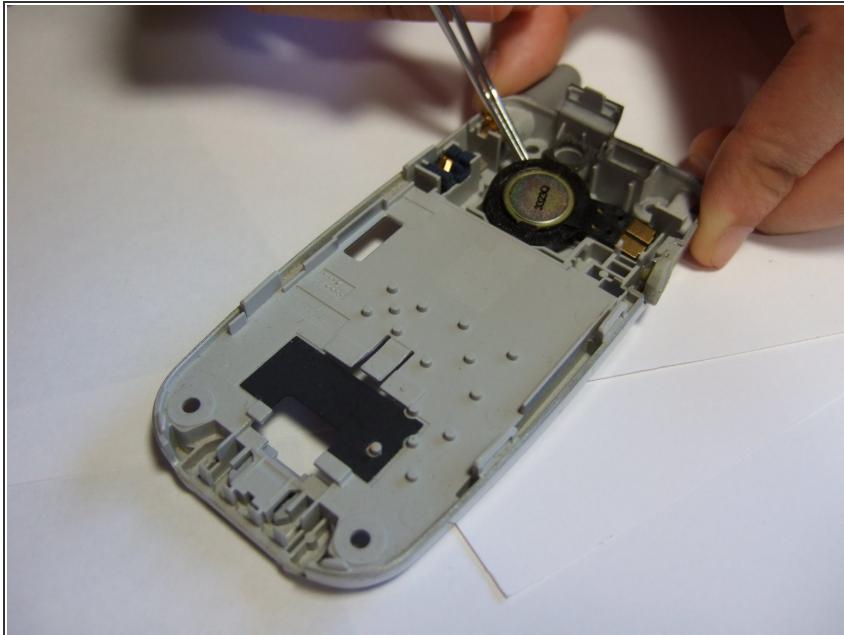

- Use the tweezers to lift the speaker up

To reassemble your device, follow these instructions in reverse order.