



# Disassembling Panasonic GU87 Keypad removal

How to take the keypad out


Written By: Van



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Tri-point Y0 Screwdriver \(1\)](#)

## Step 1 — Battery

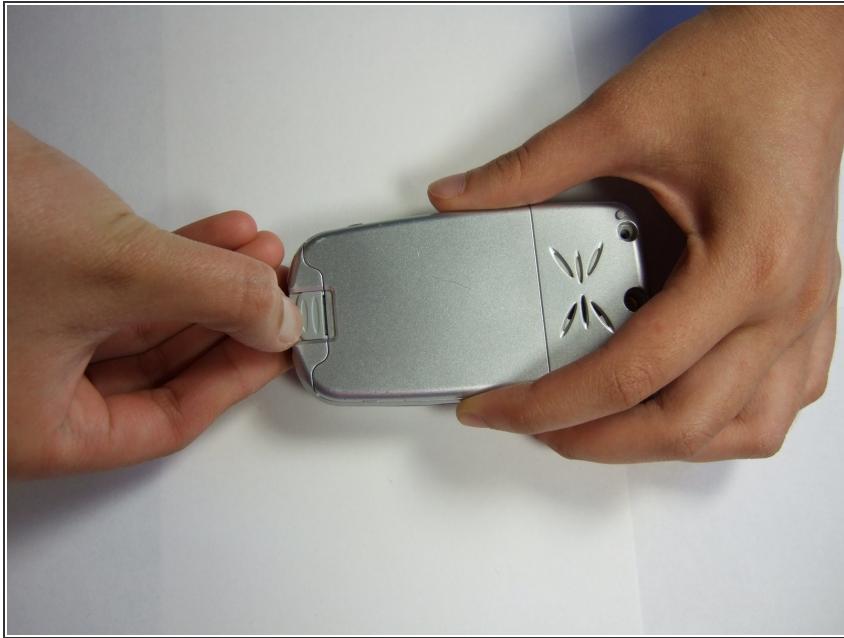

- Place your hands on the phone as shown in picture. Slightly pull the tab away from the phone with your thumb.

## Step 2



- Lift the battery up from the phone as shown. Replace with a new battery if the old battery has become worn out.

## Step 3 — Disassembling Panasonic GU87 Back cover



- Remove the rubber covers with tweezers.

## Step 4




- Remove all 4 screws from the back of the phone.

## Step 5



- Use a plastic opening tool to separate the front and back casing.

## Step 6

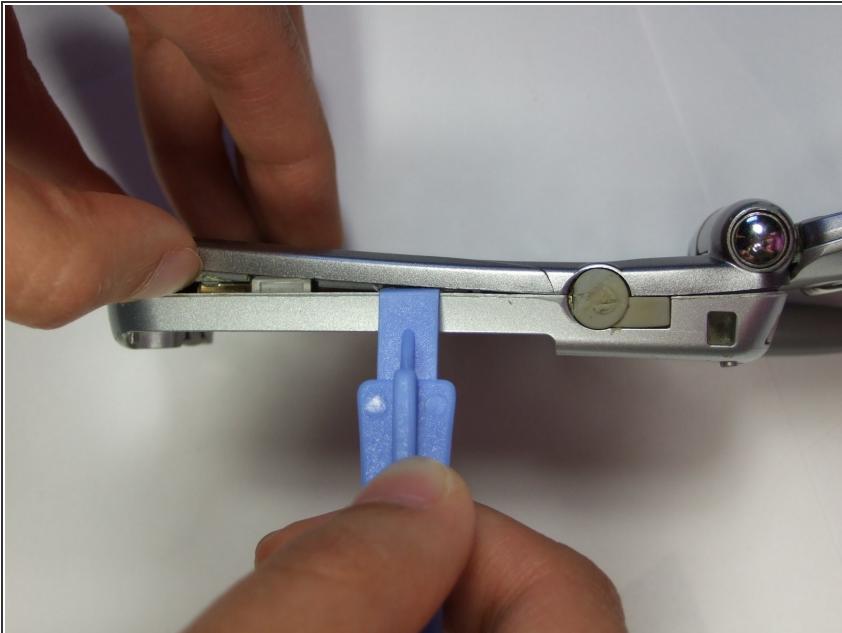

- Put the tool in friction tabs and force down to open the cover as shown in the picture.
- Carefully pop it open the rest of the way with your fingers.

## Step 7 — Keypad removal



- Pull the keypad apart

To reassemble your device, follow these instructions in reverse order.