



Disassembling Panasonic GU87 Main-LCD

How to remove the main LCD

Written By: Van





TOOLS:


- [Tweezers](#) (1)
- [Tri-point Y0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — LCD Cover removal




- Remove the four rubber screw covers from encircled locations.
- Using a #0 tri wing screwdriver, remove the screws previously hidden below the rubber covers.
- If you have difficulties finding this screwdriver, it is commonly sold as a Nintendo Gameboy/Wii screwdriver.

Step 2

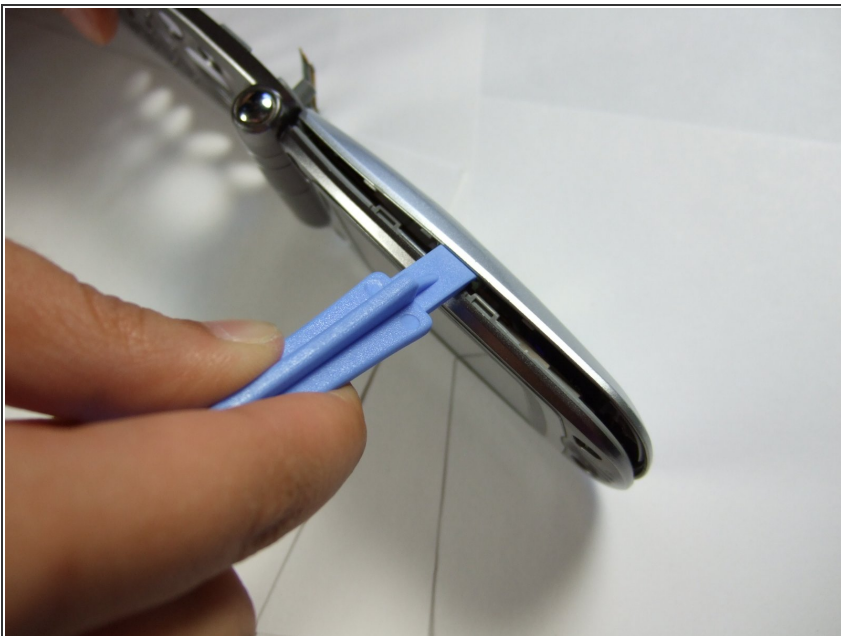


- Pry the case open using iPhone tool (as shown), fingernails, small flathead screwdriver, etc.
- Be mindful of location and magnitude of applied force, so as not to damage the case.

Step 3 — Minor-LCD

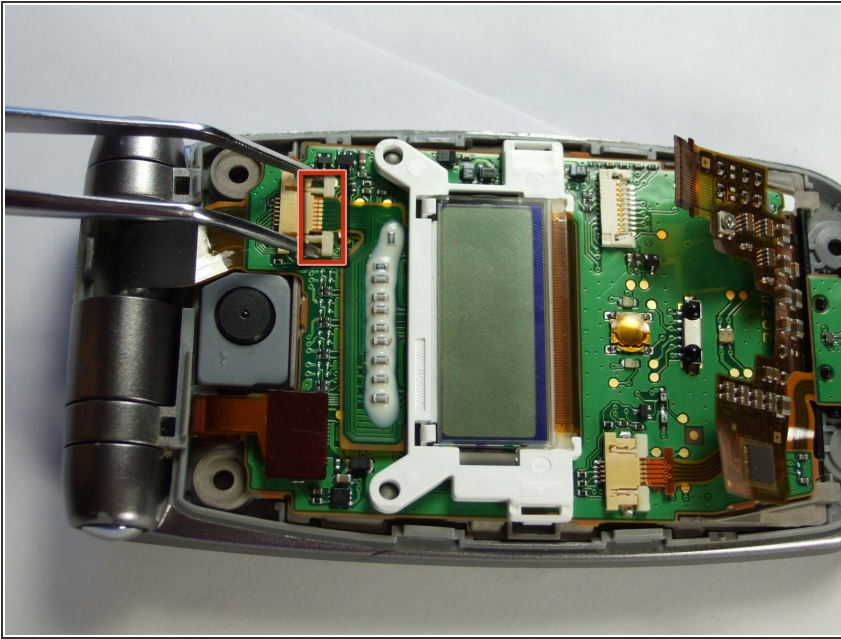


- Unlock the minor LCD connector by applying bilateral pressure with tweezers, as shown.

Step 4

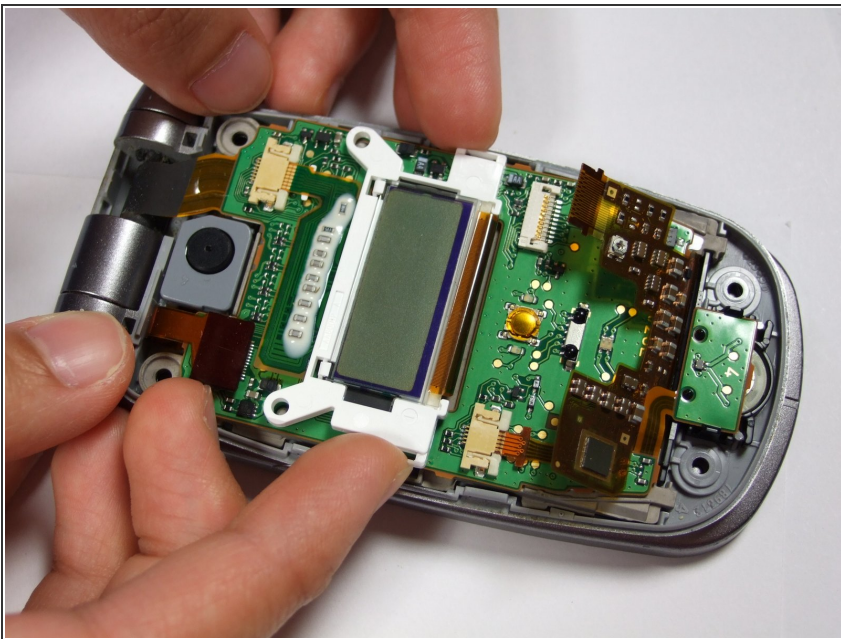


- Use fingernails to pry off minor LCD mount, as shown.
- Remove the minor LCD

Step 5 — LCD main board

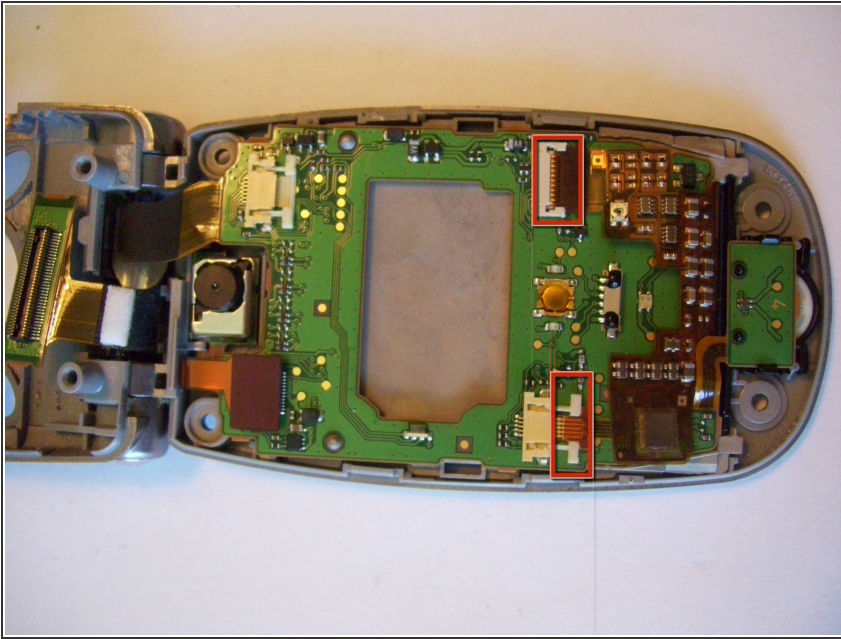


- Unlock the LCD main board connectors shown in red boxes on the picture .
- Use tweezers as necessary.

Step 6

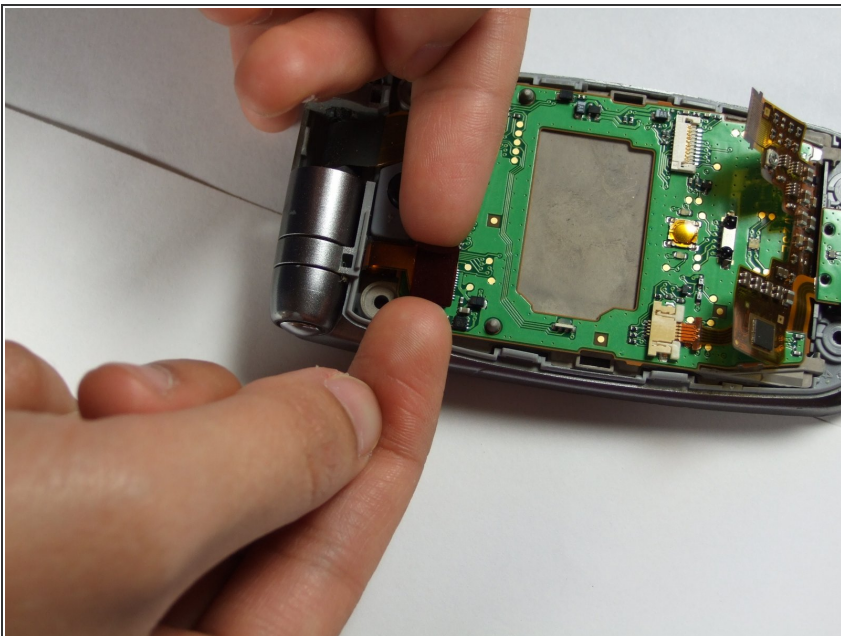

- Place finger nails on the connector tab as shown.
- Lift the connector tab up.

Step 7

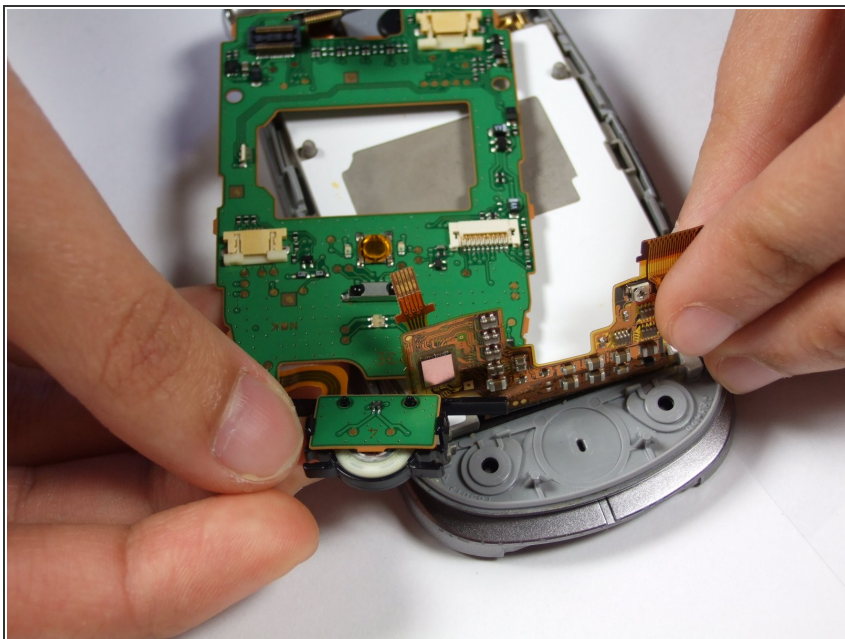

- Pull/pivot the LCD main board as shown in order to remove.

Step 8 — Disassembling Panasonic GU87 Main-LCD



- Use tweezers to lift up the main LCD.

To reassemble your device, follow these instructions in reverse order.