




# Disassembling Panasonic GU87 Minor-LCD

How to remove the LCD

Written By: Van

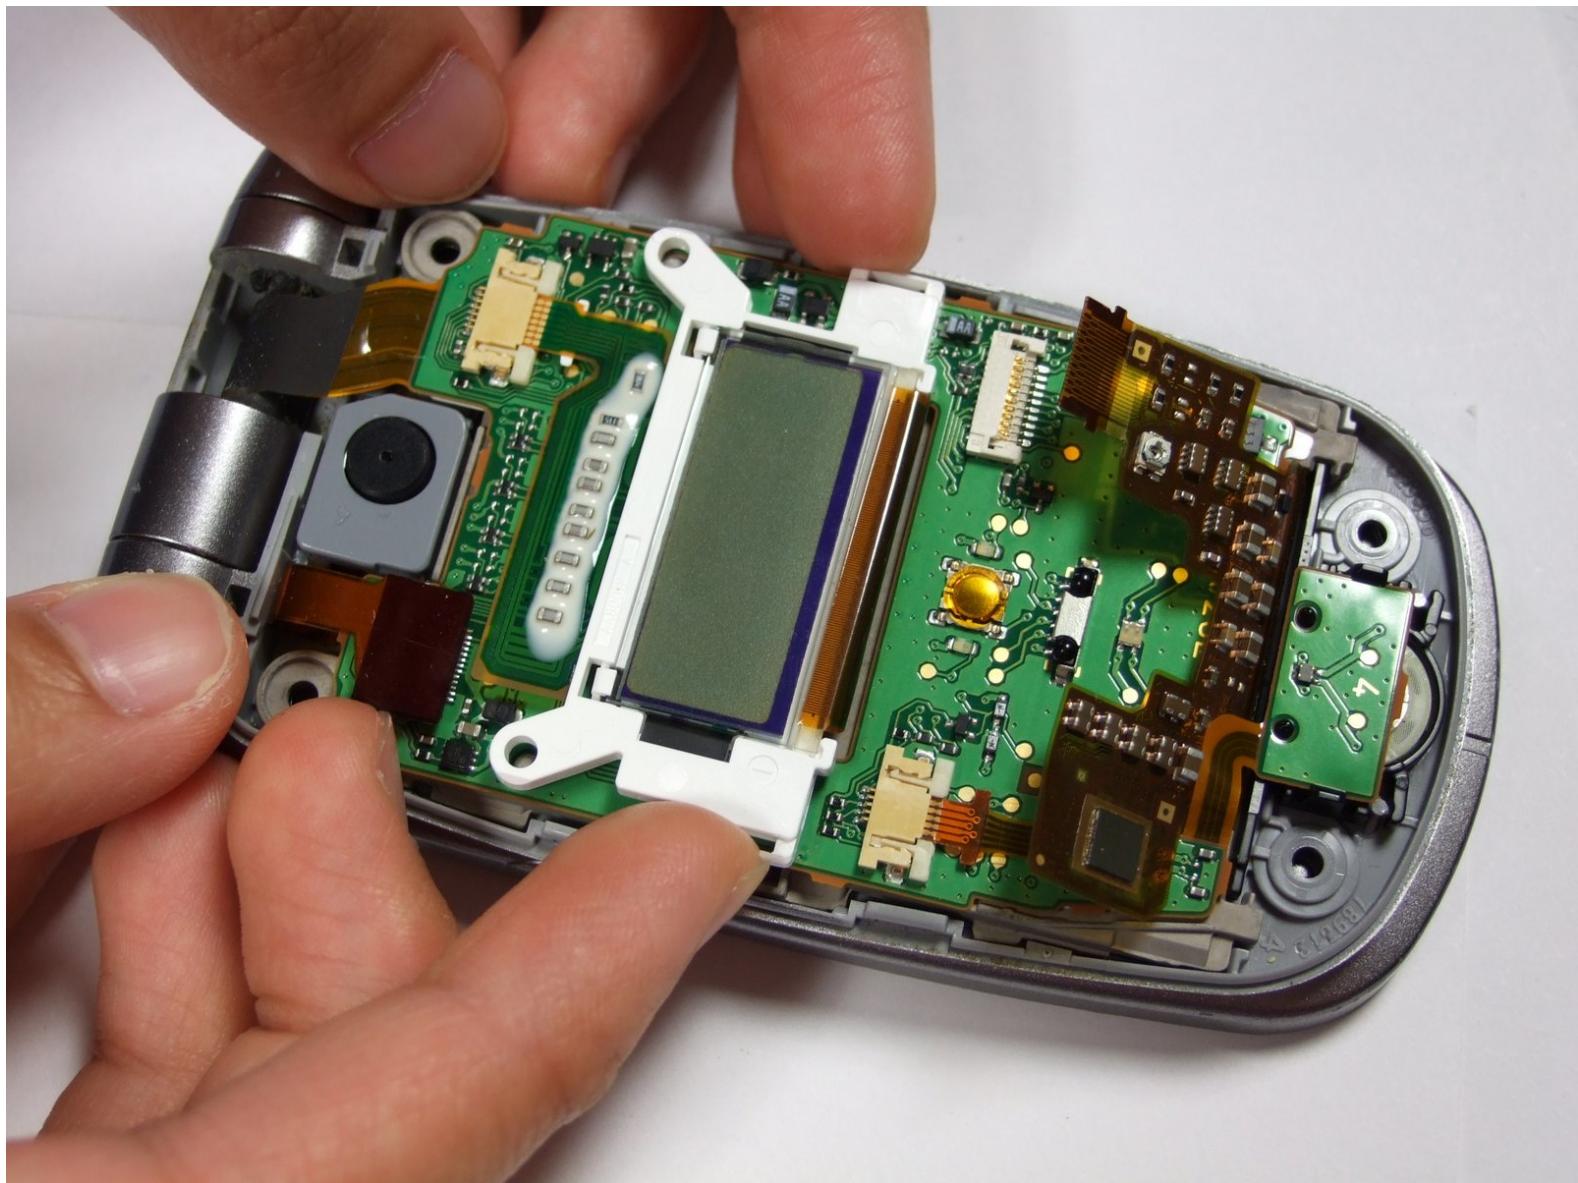

 **TOOLS:**


- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tri-wing Screwdriver \(1\)](#)

## Step 1 — LCD Cover removal




- Remove the four rubber screw covers from encircled locations.
- Using a #0 tri wing screwdriver, remove the screws previously hidden below the rubber covers.
- If you have difficulties finding this screwdriver, it is commonly sold as a Nintendo Gameboy/Wii screwdriver.

## Step 2

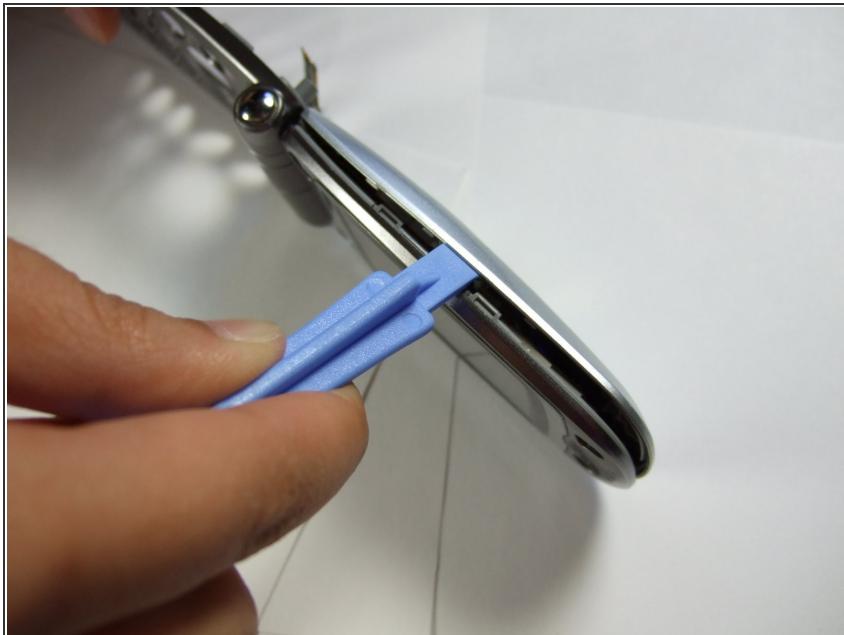


- Pry the case open using iPhone tool (as shown), fingernails, small flathead screwdriver, etc.
- Be mindful of location and magnitude of applied force, so as not to damage the case.

## Step 3 — Minor-LCD

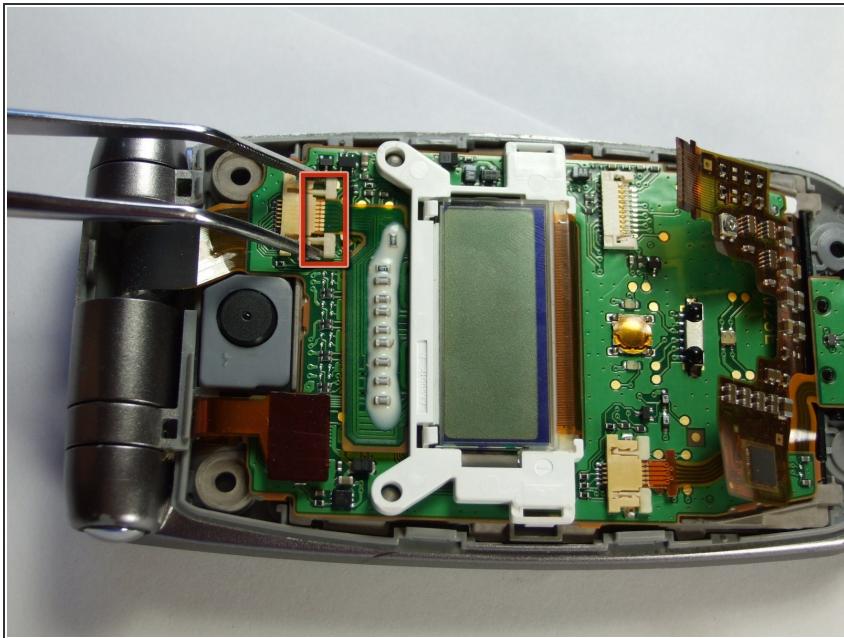

- Unlock the minor LCD connector by applying bilateral pressure with tweezers, as shown.

## Step 4

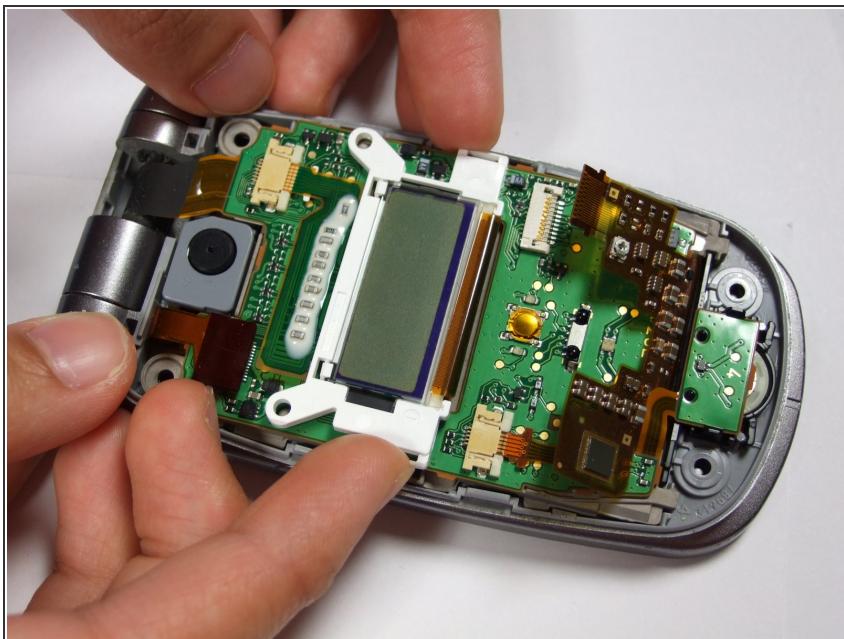

- Use fingernails to pry off minor LCD mount, as shown.
- Remove the minor LCD

To reassemble your device, follow these instructions in reverse order.