



Disassembling Polaroid a520 Buttons

To take out or replace the buttons.

Written By: Dani



INTRODUCTION

How to take out the buttons and replace them.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Disassembling Polaroid a520 Battery



- Locate the battery cover on the bottom of the camera.

Step 2



- Place your thumb on the battery cover and push towards the arrow. The cover will release and pop open.

Step 3



- Remove the batteries from the camera.

Step 4 — Disassembling Polaroid a520 Casing



- Unscrew and remove four (3mm) screws on the right side of the camera. This will release the front and back casings.

Step 5



- Use your nail or a flat object to pry up the edge of the front casing. Push the casing up and back.
- Repeat this step for the back casing.

Step 6 — Buttons



- Pop the necessary buttons out of the plastic housing.

To reassemble your device, follow these instructions in reverse order.